



# Connectors - Asus E3M-PLUS V5 User Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

--

•

[Table of Contents](#)

•

## Bookmarks







## 1.7

### Connectors

#### 1.7.1

#### Rear panel connectors

1

9

1.

PS/2 Mouse port (green). This port is for a PS/2 mouse.



2.

LAN (RJ-45) port. This port allows Gigabit connection to a Local Area Network (LAN) through a network hub. Refer to the table below for the LAN port LED indications.

LAN port LED indications

Off

Orange

Orange (Blinking) Data activity

Orange (Blinking

then steady)

3.

Line In port (light blue). This port connects the tape, CD, DVD player, or other audio sources.

4.

Line Out port (lime). This port connects a headphone or a speaker. In 4.1-channel, 5.1-channel, and 7.1-channel configurations, the function of this port becomes Front Speaker Out.

5.

Microphone port (pink). This port connects a microphone.

To configure a 7.1-channel audio output:

Use a chassis with HD audio module in the front panel to support a 7.1-channel audio output.

ASUS E3M-PLUS V5

8

No link

OFF

Linked

ORANGE

GREEN

Ready to wake up from S5 mode

7

10Mbps connection

100Mbps connection

1Gbps connection



ManualsLib.com			

2

3 4

6

5

Speed

Activity Link

LED

LED

LAN port

1-11



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
16  
17  
18  
19  
20  
21  
22  
23

Quick Links:

[E3M-Plus V5 Specifications Summary](#)

## Chapters

[Table of Contents](#) 3

[1.2.4 Layout](#) 11

### Related Manuals for Asus E3M-PLUS V5

[Motherboard Asus E35M1-I User Manual](#)

User manual (50 pages)

[Motherboard Asus E35M1-M User Manual](#)

User manual (64 pages)

[Motherboard Asus E3746 Hardware User Manual](#)

Republic of gamers series (196 pages)

[Motherboard Asus E35M1-I DELUXE User Manual](#)

User manual (55 pages)

[Motherboard Asus E3194 Installation Manual](#)

Motherboard (80 pages)

[Motherboard Asus E3 PRO GAMING V5 User Manual](#)

(90 pages)

[Motherboard Asus E3M-ET V5 User Manual](#)

(35 pages)

[Motherboard Asus E3-PRO V5 User Manual](#)

(36 pages)

[Motherboard Asus Motherboard DSBF-DE User Manual](#)

Dsbf-de series (206 pages)

[Motherboard Asus DSEB-DG SAS User Manual](#)

Dseb-dg series (202 pages)

[Motherboard Asus E45M1-M PRO User Manual](#)

User manual (62 pages)

[Motherboard Asus E2KM1I-DELUXE User Manual](#)

E2km1i-deluxe user's manual (70 pages)

[Motherboard Asus EX-H410M-V3 Manual](#)

(30 pages)

[Motherboard Asus EX-B460M-V5 Manual](#)

(30 pages)

[Motherboard Asus EX-B150M-V5 D3 Manual](#)

(49 pages)

[Motherboard Asus EX-B760M-V5 Manual](#)

(36 pages)

## Related Content for Asus E3M-PLUS V5

[ROG RAMPAGE V EDITION 10 Internal Connectors](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Connectors](#)

Asus Q170A-IM-A

[Z13PE-D16 Connectors](#)

Asus Z13PE-D16

[WS X299 SAGE Internal Connectors](#)

Asus WS X299 SAGE

[ROG CROSSHAIR VIII EXTREME Connectors With Shared Bandwidth](#)

Asus ROG CROSSHAIR VIII EXTREME

[PCI/I-486SP3G Connectors](#)

Asus PCI/I-486SP3G

[AAEON UP Xtreme 7100 Edge Jumpers And Connectors](#)



Asus AAEON UP Xtreme 7100 Edge

[AAEON UP Xtreme 7100 Jumpers And Connectors](#)

Asus AAEON UP Xtreme 7100