

 
Index To Parts And Controls; Front Panel - Toshiba D-R4SU Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131



•

Table of Contents

-

Bookmarks

--



Introduction

Index to parts and controls

See pages with arrows for details.

Front panel See pages with arrows for details.

Front panel

 
1

2 3 4

* The above illustration displays the front panel with the cover open. See the following page on how to open or close the cover.

q

ON/STANDBY button

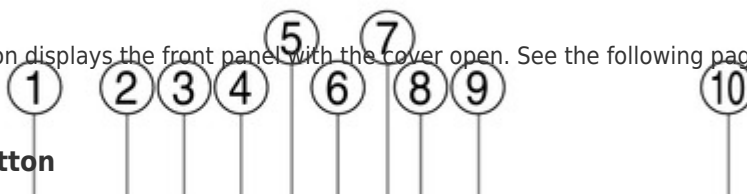

Turns the power on/restores the unit in the standby mode.

Introduction

(REV) button

Scans the picture backwards.

(FWD) button

Scans the picture forward.

(PLAY) button

Starts playback.

(STOP) button

Stops playback or recording.

CH buttons

 
Selects the channel.

Downloaded From Disc-Player.com Toshiba Manuals

Index to parts and controls

See pages with arrows for details.

Front panel

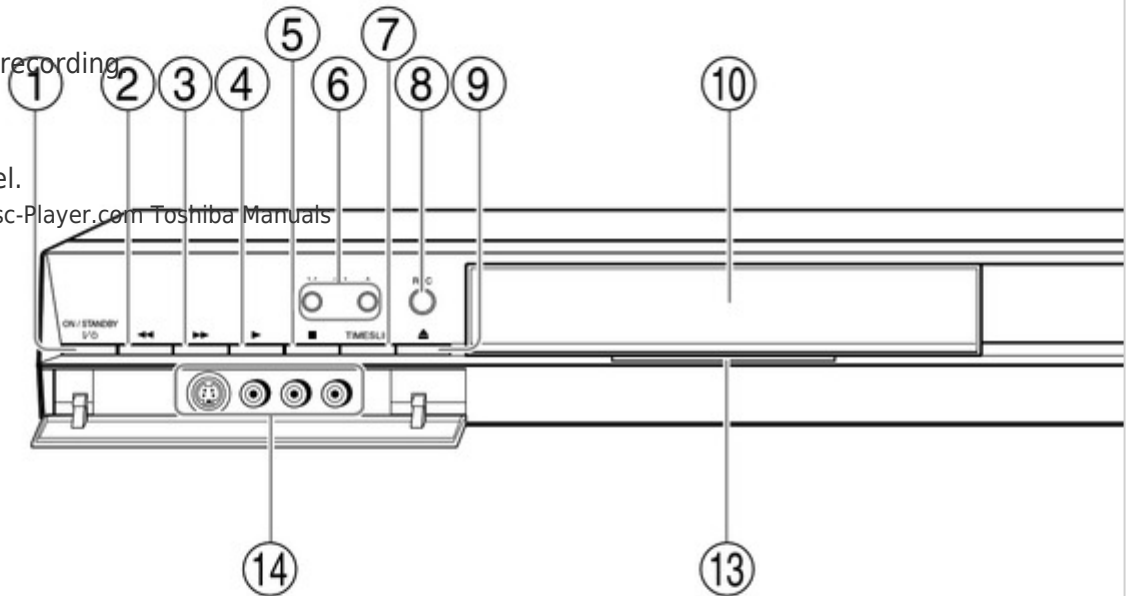

12

5

7

6

8

9

14

page 20, 21

page 59

page 59

page 55

page 37, 55

page 20, 34

10

13

u

TIMESLIP button

Scans the picture forward.

Selects the time slip mode.

REC button

page 35

Starts recording.

(OPEN/CLOSE) button

Opens and closes the disc tray.

!0

Disc tray

page 20

Loads a disc into the disc drive.

!1

Front panel display

* The above illustration displays the front panel with the cover open. See the following page on how to open the cover.

① **ON/STANDBY button** ➔ page 20, 21

Turns the power on/restores the unit in the standby mode.

② **◀ (REV) button** ➔ page 59

Scans the picture backwards.

③ **▶▶ (FWD) button** ➔ page 59

Scans the picture forward.

④ **▶ (PLAY) button** ➔ page 55

Starts playback.

⑤ **■ (STOP) button** ➔ page 37, 55

Stops playback or recording.

⑥ **CH buttons** ➔ page 20, 34

Selects the channel.

⑦ **TIMESLIP button** ➔ page 35

Selects the time slip mode.

⑧ **REC button** ➔ page 35

Starts recording.

⑨ **▲ (OPEN/CLOSE) button**

Opens and closes the disc tray.

⑩ **Disc tray** ➔ page 20

Loads a disc into the disc drive.

⑪ **Front panel display** ➔

⑫ **Remote sensor** ➔ page 35

"GUIDE"

⑬ **LED** ➔ page 20, 21

Illuminates when the recording is in progress.

!2
Remote sensor
GUIDE"

Introduction

!3
LED
page 20, 21

Index to parts and controls

Illuminates when the recorder is on.

11 See pages with arrows for details.

12
page 57, 58
page 20, 21
page 18
page 18 in "INSTALLATION

Front panel

(5) (7)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
9
10
11
12
13
14
15
16

Quick Links:

[Remote Control](#)

[Before Recording](#)

[Recording a Tv Program](#)

[Recording an External Source](#)

Related Manuals for Toshiba D-R4SU

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVR Toshiba DR420 Quick Manual](#)

Dvd video recorder (2 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)

[DVR Toshiba DR420KU Owner's Manual](#)

Dvd video recorder (111 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba D-R560KU Owner's Manual](#)

D-r560ku user's guide (117 pages)

[DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Toshiba dr570ku dvd video recorder owner's manual (123 pages)

Related Content for Toshiba D-R4SU

[RD-XS54SU Index To Parts And Controls](#)

Toshiba RD-XS54SU

[RD-XS35SU Index To Parts And Controls](#)

Toshiba RD-XS35SU

[RD-KX50SU Index To Parts And Controls](#)

Toshiba RD-KX50SU

[D-RW2SU Index To Parts And Controls](#)

Toshiba D-RW2SU

[RD-XS30B Index To Parts And Controls](#)

Toshiba RD-XS30B

[V 856 B Mechanical Parts](#)

Toshiba V 856 B

[D-R350SB Replacement Of Mechanical Parts](#)

Toshiba D-R350SB

[D-VR7KC2 Index Search](#)

Toshiba D-VR7KC2

This manual is also suitable for:

[D-r4scD-kr4su](#)