



# Pausing A Tv Broadcast To Resume Later (Pause Tv) - Toshiba D-R4SU Owner's Manual

 


1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131



•

## Table of Contents

- 

## Bookmarks

--







## Playback DVD-RAM



This function enables recording of TV broadcasts  
time,  
by storing the TV broadcast temporarily on a DVD-RAM disc.  
When this function is used, a DVD-RAM disc which can be recorded needs to be loaded into the  
recorder  
beforehand.

OPEN/CLOSE  
DISPLAY FL SELECT DIMMER  
ANGLE  
SUBTITLE AUDIO/SAP FREEZE

## Start

REMAIN REC MODE EXTEND



VOL  
MUTE  
TOP MENU  
INSTANT  
REPLAY  
QUICK MENU  
SKIP REV  
REV  
REC  
SEARCH  
T  
1  
4  
7



**Notes**

- This function is not available during recording.
- Pause TV recording stops when the DVD-RAM disc is filled up. It will not begin if a DVD-RAM disc is full.
- While using this pause TV recording, you cannot program a recording.
- Playback may jump a few seconds back or pause depending on a disc or data condition.

Downloaded From [Disc-Player.com](http://Disc-Player.com) Toshiba Manuals

**1**

 
PROGRESSIVE  
ZOOM  
SETUP

**2**

CH  
TIMESLIP  
INPUT SELECT  
EASY  
MENU  
NAVI  
TV  
DVD  
SELECT/  
ENTER/  
INSTANT  
SKIP

**3**

STOP  
SKIP FWD  
PLAY  
FWD  
ADJUST  
CHP DIVIDE  
+ 10  
2  
3  
6  
5  
0  
CLEAR  
8  
9

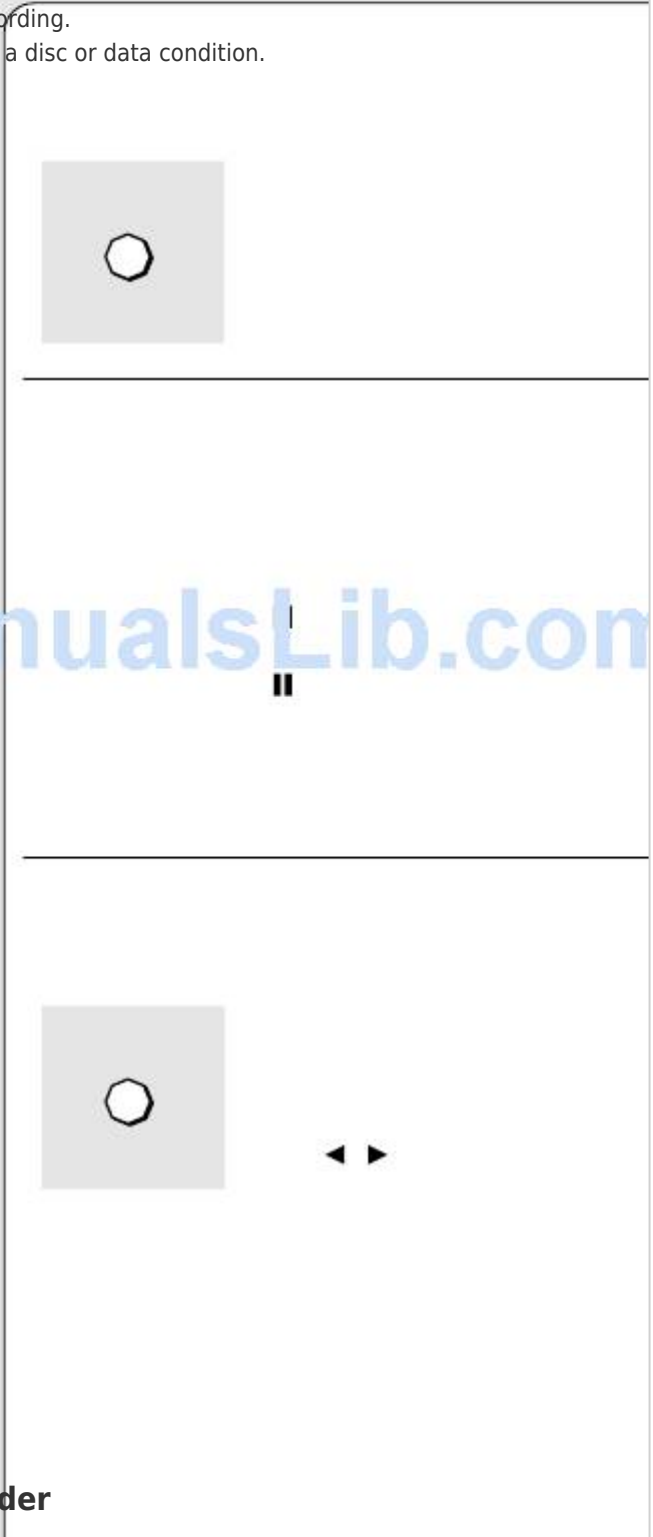

**While viewing a TV broadcast via this recorder**

**or immediately before it starts, press TIMESLIP.**

When Pause TV mode is ready, playback stops automatically.

TIMESLIP

The recorder begins to store the broadcast on a DVD-RAM disc the moment you press the button.

**Locate a scene  
methods.**

**Fast-forward/fast-reverse:**

Press FWD or REV button.

**Forward/reverse Slow-motion:**

First press button then press FWD or REV button.

**Forward/reverse frame by frame play:**

First press button then press ADJUST button.

- To resume normal playback, press PLAY button.
- You can play in fast-forward to within 10 seconds prior to the current broadcast.

**Press TIMESLIP to exit this mode.**

The recorder stops storing the broadcast on a DVD-RAM disc.

 
TIMESLIP

A message appears and asks you whether you will save the stored data or erase it.

Press

/ buttons to select, then press SELECT/ENTER button.

- When the recording mode is set to "XP", the recorder automatically changes "XP" to "SP" to record the broadcast.

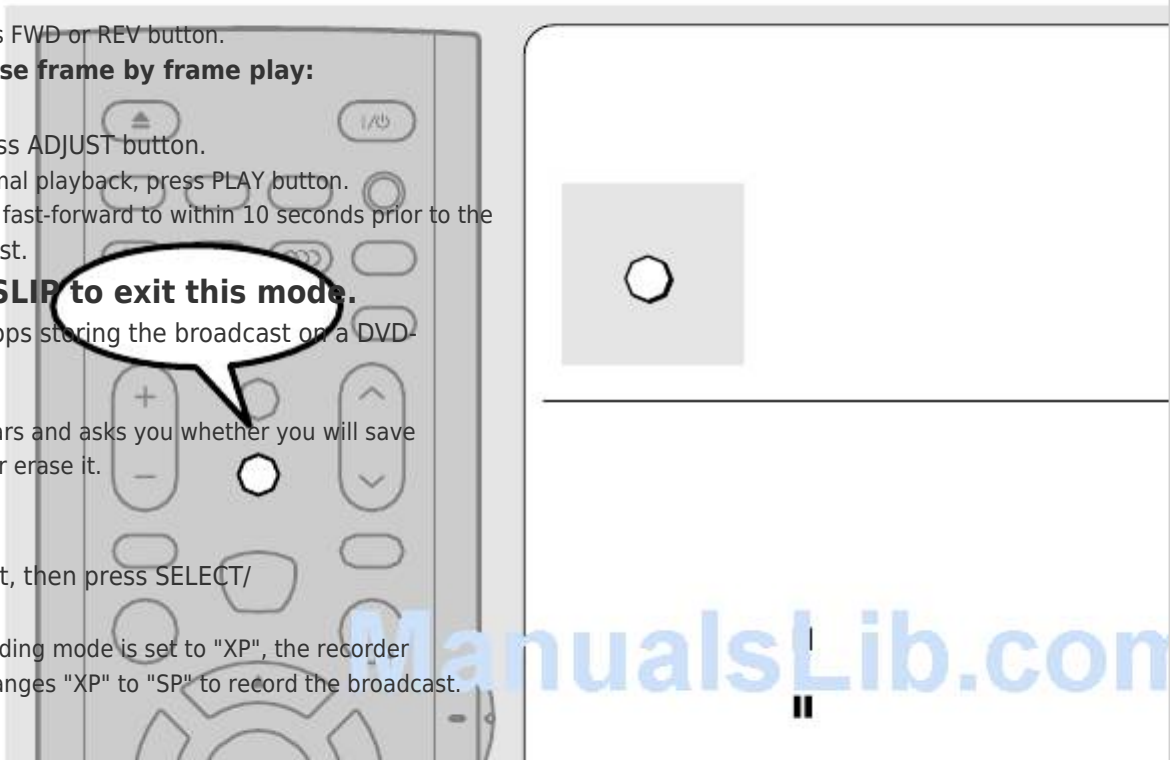

[Previous Page](#)  
[Next Page](#)

1  
...  
54  
55  
56  
57  
58  
59  
60  
61

Quick Links:

[Remote Control](#)

[Before Recording](#)

[Recording a Tv Program](#)

[Recording an External Source](#)

## Related Manuals for Toshiba D-R4SU

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)



Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVR Toshiba DR420 Quick Manual](#)

Dvd video recorder (2 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)

[DVR Toshiba DR420KU Owner's Manual](#)

Dvd video recorder (111 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba D-R560KU Owner's Manual](#)

D-r560ku user's guide (117 pages)

[DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Toshiba dr570ku dvd video recorder owner's manual (123 pages)

## Related Content for Toshiba D-R4SU

[RD-XS32SU Pausing A Tv Broadcast To Resume Later](#)

Toshiba RD-XS32SU

[D-R2SU Pausing A Tv Broadcast To Resume Later](#)

Toshiba D-R2SU

[RD-XS30B Pausing A Tv Broadcast To Resume Later](#)

Toshiba RD-XS30B

[Symbio 160HD4 Pausing Live Tv](#)

Toshiba Symbio 160HD4

[D-VR7KC2 Resume Playback](#)

Toshiba D-VR7KC2

[RD-XS30B Recording A Tv Programme](#)

Toshiba RD-XS30B

[RD-85DTSB Connecting An Aerial And Tv](#)

Toshiba RD-85DTSB

[RD99DTKB Tv System 2](#)

Toshiba RD99DTKB

This manual is also suitable for:

[D-r4scD-kr4su](#)