

 
Skipping To The Next/Previous Chapter Or Track; Playing In Slow- Motion - Toshiba D-R4SU Owner's Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131



•

Table of Contents

-

Bookmarks

--



Playback

Playing at various speeds (Continued)

Skipping to the next/previous chapter or track

Start

INSTANT
REPLAY
QUICK MENU
SKIP REV
REV

Notes

- Some titles may not display chapter numbers.
- When playing a DVD-RAM disc, you can access chapters only in the current title if "Title playback" ("Title resume". To access chapters in other titles, set to "Serial playback".
- When playing a DVD video disc or a DVD-R/RW disc, you can locate chapters only in the current title if "DVD title stop" (page 112) is set to "On". To access chapters in other titles, set to "Off". However, in this instance even though you press the SKIP REV button to go back to the previous title, playback starts not from the last chapter of the title but from the first chapter.

Playing in slow-motion

TOP MENU
INSTANT
REPLAY
QUICK MENU
SKIP REV

Start

REV
REC
SEARCH
T

Notes

 
- Slow-motion does not provide smooth playback.
- When playing a VIDEO CD, reverse slow-motion playback is not available.
- The speed level displayed is approximate.

Downloaded From Disc-Player.com Toshiba Manuals

60

1

TV
DVD
SELECT/
ENTER
INSTANT
SKIP
STOP
SKIP FWD
PLAY
FWD
DVD-RAM DVD-RW
S
MENU
NAVI

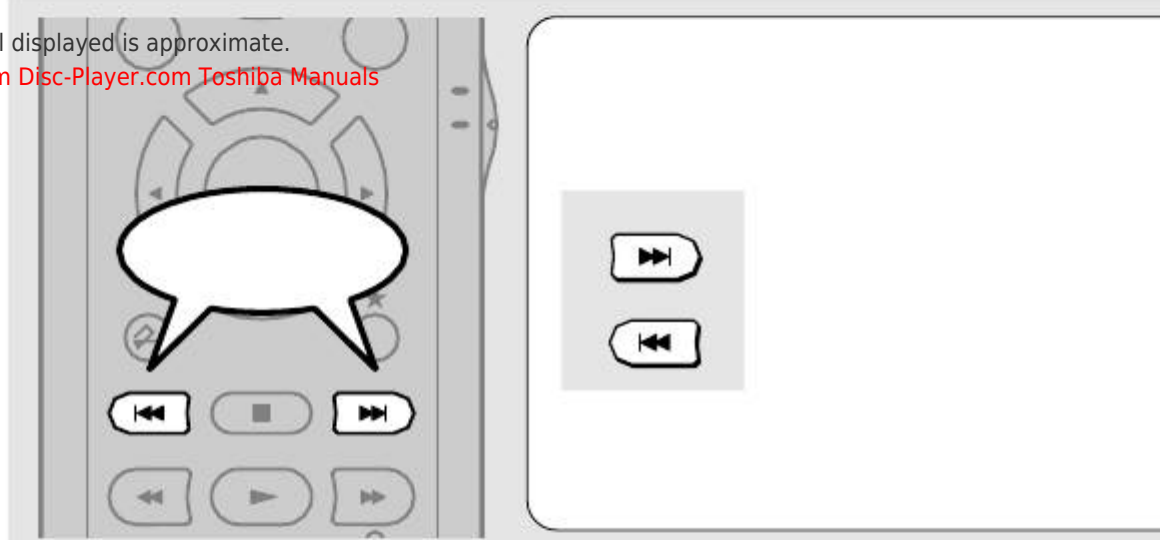

ManualsLib.com

1

TV
DVD
SELECT/
ENTER
INSTANT
SKIP

2

 
STOP
SKIP FWD
PLAY
FWD
ADJUST
CHP DIVIDE
DVD-RAM DVD-RW

Press SKIP FWD or SKIP REV repeatedly until the chapter or track number you want appears.

Playback starts from the selected chapter or track.

SKIP FWD

SKIP FWD : Playback starts from the beginning of the

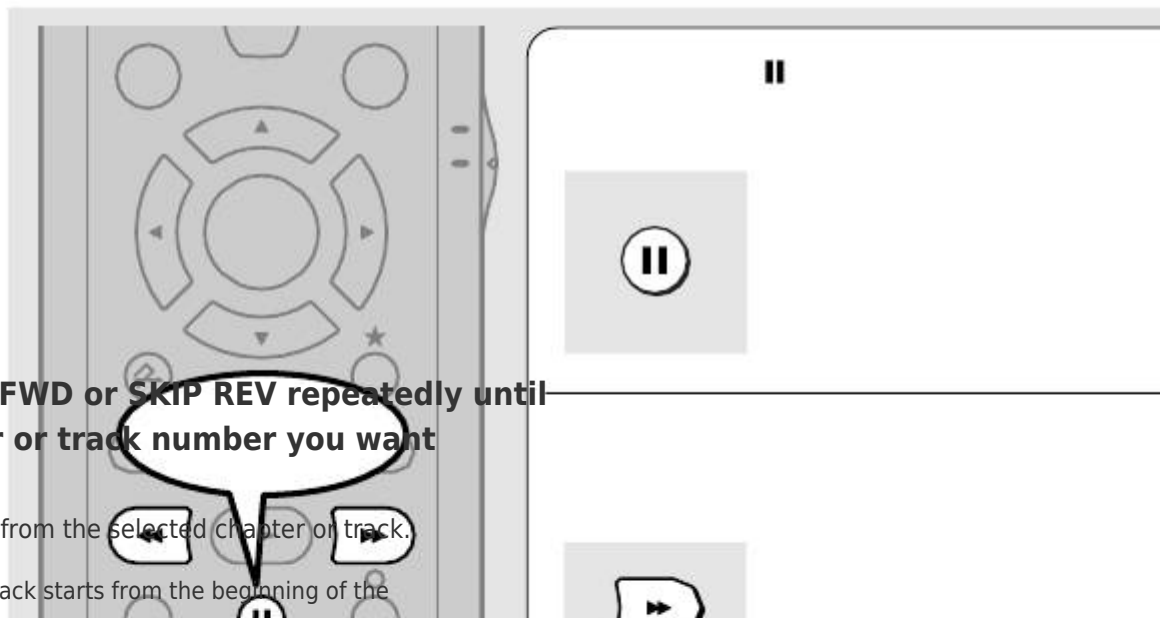

SKIP REV

next chapter or track.

SKIP REV : Playback starts from the beginning of the current chapter or track.

When you press twice, playback starts from the beginning of the previous chapter or track.

DVD-R
DVD-VIDEO
VCD

Press
during playback.

Press FWD or REV.

FWD : Forward slow-motion

FWD

REV : Reverse slow-motion

REV


Each time you press the button, the slow-motion speed changes.

To resume normal playback

Press PLAY.

DVD-R
DVD-VIDEO
VCD
CD

 page 116) is set to

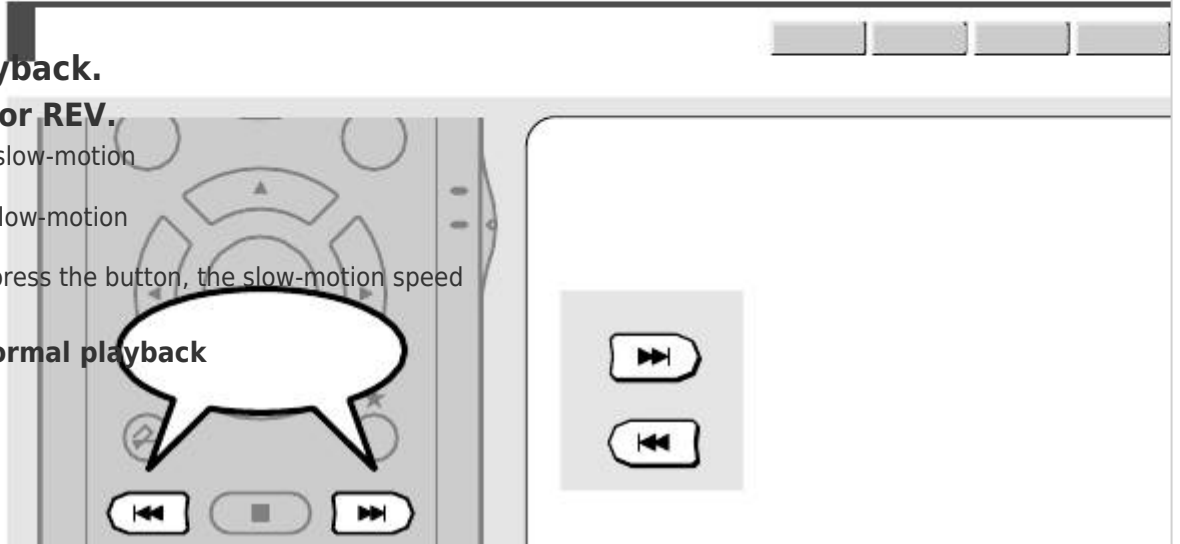

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
57
58
59
60
61
62
63
64

Quick Links:

[Remote Control](#)

[Before Recording](#)

[Recording a Tv Program](#)

[Recording an External Source](#)

Related Manuals for Toshiba D-R4SU

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVR Toshiba DR420 Quick Manual](#)

Dvd video recorder (2 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)

[DVR Toshiba DR420KU Owner's Manual](#)

Dvd video recorder (111 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba D-R560KU Owner's Manual](#)

D-r560ku user's guide (117 pages)

[DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Toshiba dr570ku dvd video recorder owner's manual (123 pages)

Related Content for Toshiba D-R4SU

[D-RW2SU Searching By Title, Chapter Or Track](#)

Toshiba D-RW2SU

[D-RW2SU Searching By Title, Chapter Or Track](#)

Toshiba D-RW2SU

[SD-1810 Title, Chapter And Track Playback](#)

Toshiba SD-1810

[SD-1700 Locating A Specific Title, Chapter, Or Track](#)

Toshiba SD-1700

[SD-1600 Locating A Specific Title, Chapter, Or Track](#)

Toshiba SD-1600

[SD-100X Locating A Specific Title, Chapter, Or Track](#)

Toshiba SD-100X

[D-VR7KC2 Skipping Tv Commercials During Playback](#)

Toshiba D-VR7KC2

[RD-XS34S Chapter Function Original Edit Functon 2005/06/12 19](#)

Toshiba RD-XS34S

This manual is also suitable for:

[D-r4scD-kr4su](#)