



# Playing Mp3/Wma Files - Toshiba D-R4SU Owner's Manual

 


1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131



•

## Table of Contents

- 

## Bookmarks

--







## Playback



## You can play MP3/WMA files

### Preparations

- Make sure that a disc you want to play is compatible with this recorder. See
- Set "Priority contents" (

OPEN/CLOSE  
DISPLAY FL SELECT DIMMER  
ANGLE  
SUBTITLE AUDIO/SAP FREEZE

## Start

REMAIN REC MODE EXTEND  
VOL  
MUTE  
TOP MENU

## Notes

- WMA tracks copy-protected cannot be played.

- The DIGITAL AUDIO OUT BITSTREAM/PCM jack outputs MP3/WMA sounds in the linear PCM format regardless of the current "Audio out select" (
- You cannot change the playback speed of MP3/WMA playback.

**To stop playback**

**Press STOP.**

If you press PLAY playback will start

**To pause playback**

**Press**

To resume, press button. ■

**To skip tracks**

**During playback, press SKIP FWD or SKIP REV repeatedly.**

SKIP FWD : To skip forward.

SKIP REV : To skip backward.

**Selecting a track in the disc**

2 ways are available:

Downloaded From Disc-Player.com Toshiba Manuals

**72**

page 116) to "Audio".

**1**

- PROGRESSIVE
- ZOOM
- SETUP
- CH
- TIMESLIP
- INPUT SELECT
- EASY
- MENU
- NAVI
- TV
- DVD
- SELECT/

page 114) selection.

button again or press PLAY

**Load a CD that contains MP3/WMA files.**

Playback starts from the first track of a current folder.

OPEN/CLOSE

**On "CONTENT MENU Audio List"**

**1) Press EASY NAVI.**

**2) Press**

**then press SELECT/ENTER.**

CONTENT MENU Audio List appears.

e.g.

 
 
001  
004  
007  
010

**File number**

**If you select this icon and press SELECT/ENTER button, upper folders appear.**

e.g.

JPG\_MP3  
003

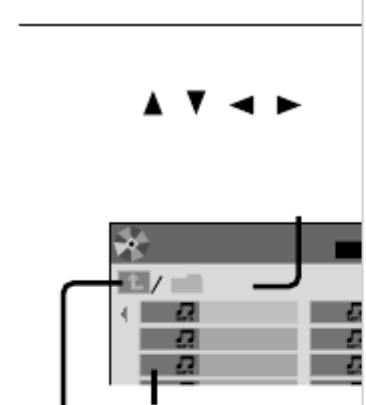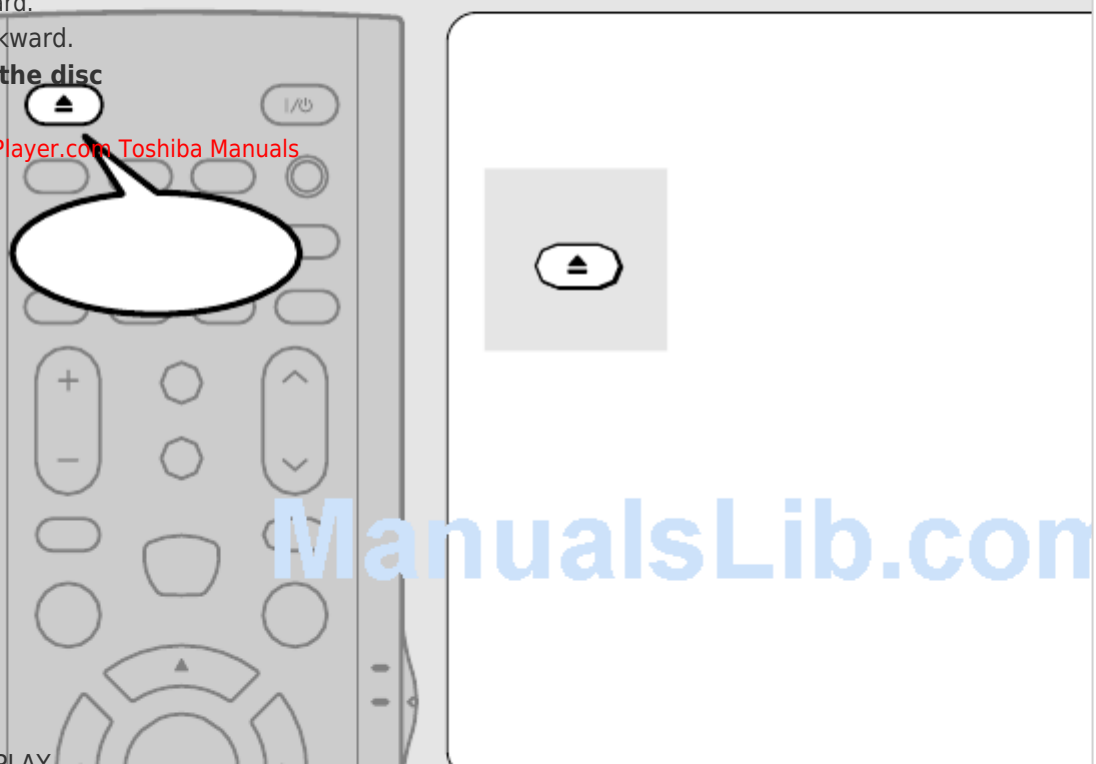

Disc name  
page 73.

/  
/  
/

to select "Play C  
Current folder

MP3  
002  
003  
  
MP3\_0002  
005  
006  
MP3\_0004  
MP3\_0005  
MP3\_0007  
008  
MP3\_0008  
009  
MP3\_0010  
011  
MP3\_0011  
012

MP3a  
001  
002  
MP3c  
MP3\_0001  
004  
MP3\_0003  
MP3\_0004

The recorder creates temporary  
folder "All", which contains all  
playable files.

MP3\_0003  
MP3\_0006  
MP3\_0009  
MP3\_0012

All  
MP3b  
MP3\_0002

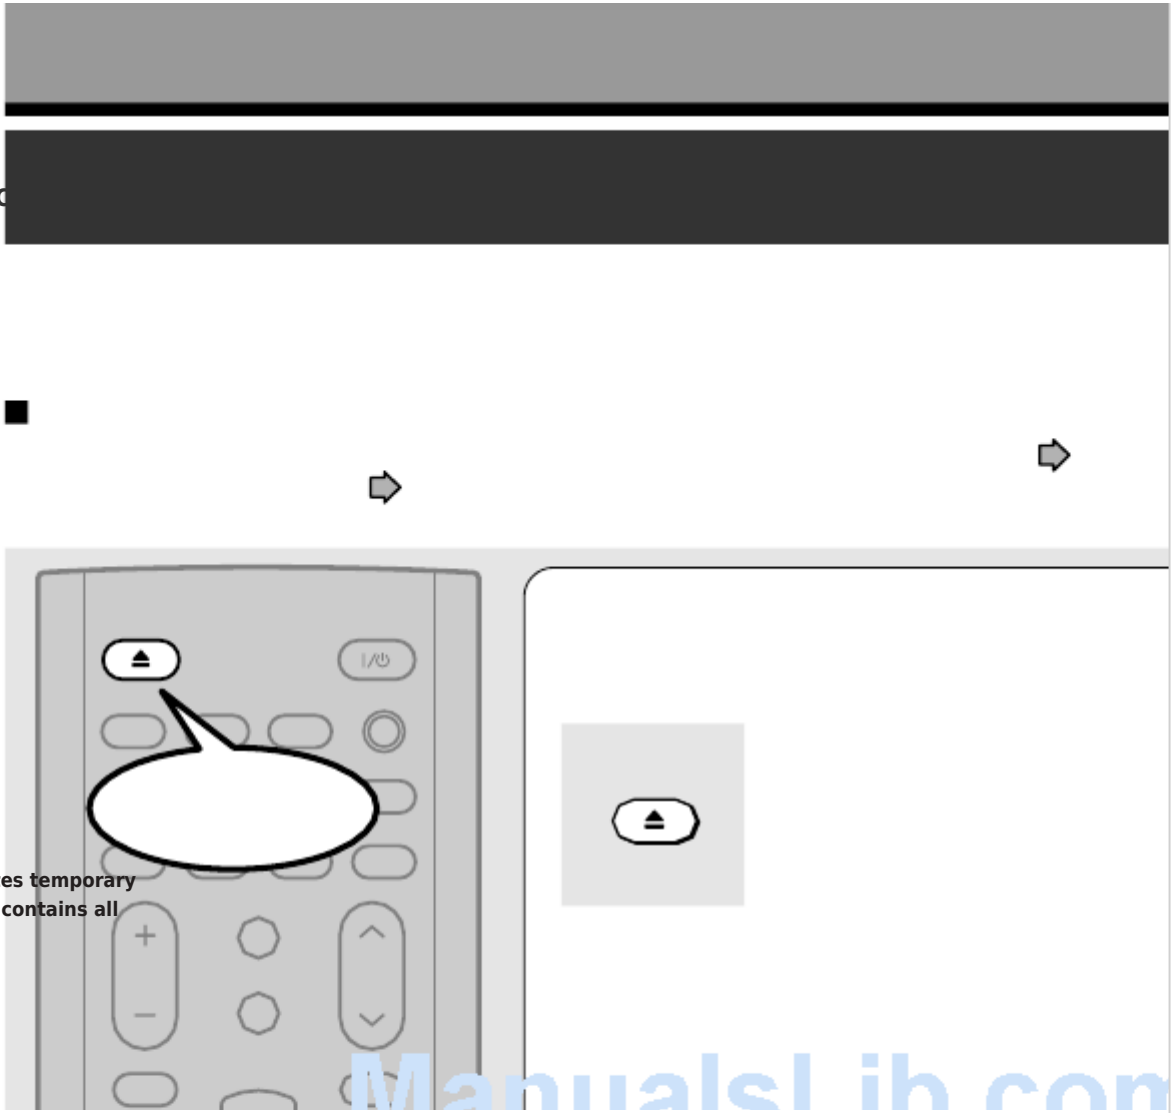 


Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
69  
70  
71  
72  
73  
74  
75  
76

Quick Links:

[Remote Control](#)

[Before Recording](#)

[Recording a Tv Program](#)

[Recording an External Source](#)

## Related Manuals for Toshiba D-R4SU

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)



Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVR Toshiba DR420 Quick Manual](#)

Dvd video recorder (2 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)

[DVR Toshiba DR420KU Owner's Manual](#)

Dvd video recorder (111 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba D-R560KU Owner's Manual](#)

D-r560ku user's guide (117 pages)

[DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Toshiba dr570ku dvd video recorder owner's manual (123 pages)

## Related Content for Toshiba D-R4SU

[D-R2SU Playing Mp3/Wma Files](#)

Toshiba D-R2SU

[RD-XS54SU Playing Mp3/Wma Files](#)

Toshiba RD-XS54SU

[RD-XS35SU Playing Mp3/Wma Files](#)

Toshiba RD-XS35SU

[RD-KX50SU Playing Mp3/Wma Files](#)

Toshiba RD-KX50SU

[D-R550KU Playing Back An Audio Cd And A Cd-Rw/-R With Mp3/Wma/Jpeg Files](#)

Toshiba D-R550KU

[D-RW2SU Playing Mp3, Wma, Jpeg Disc](#)

Toshiba D-RW2SU

[DR420KU Playing Back An Audio Cd And A Cd-Rw/-R With Mp3/Jpeg Files](#)

Toshiba DR420KU

[DR430KU Playing Back An Audio Cd And A Cd-Rw/R With Mp3/Jpeg Files](#)

This manual is also suitable for:

[D-r4scD-kr4su](#)