 




Whirlpool ACM-845BH Installation Manual

1
2
3
4
5
6
7
8
9
10
11
12

Table Of Contents



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links





DEUTSCH
ENGLISH
FRANÇAIS
NEDERLANDS
ESPAÑOL
PORTUGUÊS
ITALIANO



Installazione

ΕΛΛΗΝΙΚΑ

Εγκατάσταση

SVENSKA

NORSK

DANSK

SUOMI

POLSKI

ČESKY

SLOVENSKY

MAGYAR

Üzembe helyezés

РУССКИЙ

БЪЛГАРСКИ

Инсталиране Страница 2

ROMÂNĂ

240 mm

145 mm

280 mm

Installation

Seite 2

Installation

Page 2

Installation

Page 2

Installatie

Pagina 2

Instalación

Página 2

Instalação

Página 2

Pagina 2

Σελίδα 2

Installation

Sidan 2

Installasjon

Side 2



Installation

Side 2

Aseennus



  SENSING THE DIFFERENCE

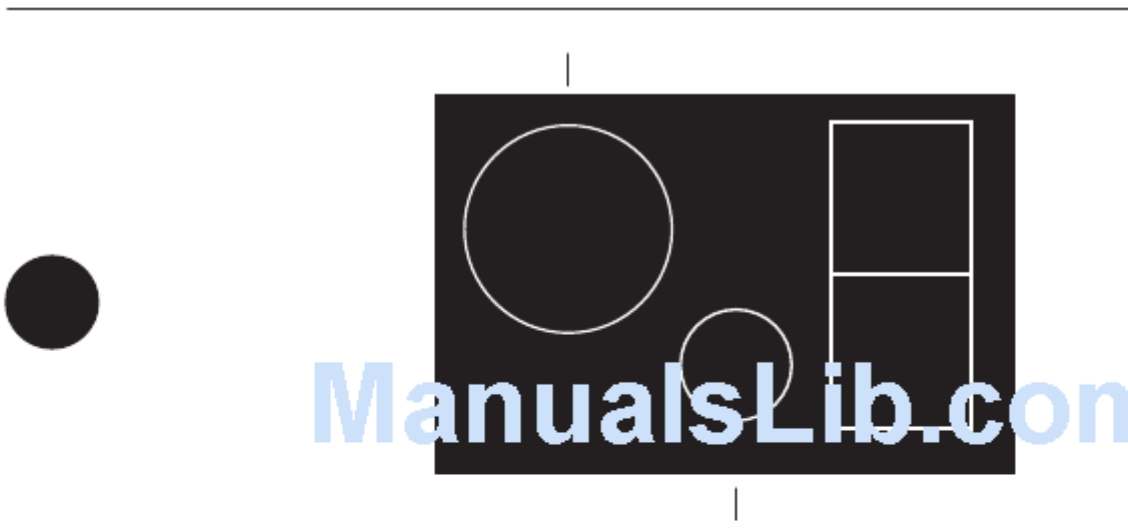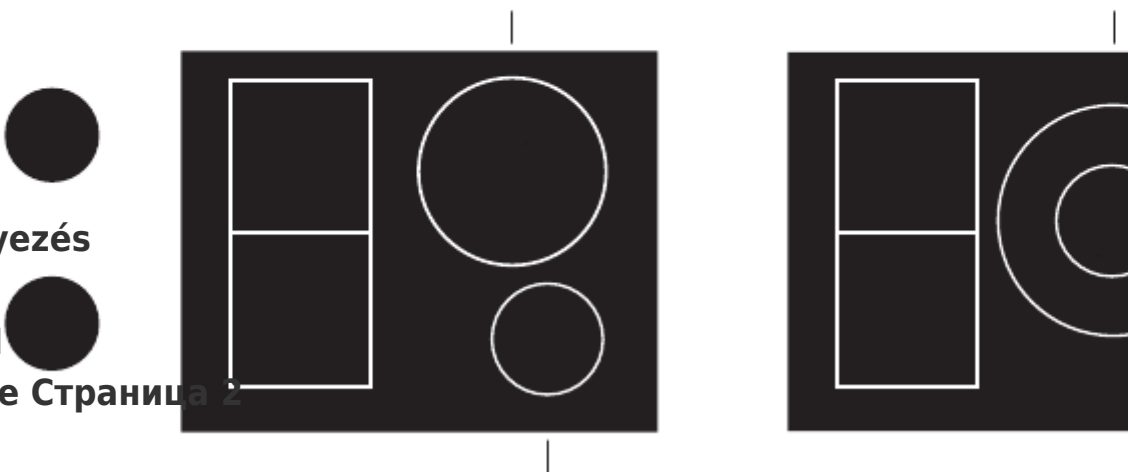

Sivu 2

Instalacja

Strona 2

Instalace

Strana 2

Inštalácia

Strana 2

Oldal 2

Установка

Стр. 2

Instalarea

Pagina 2

300/190 mm

145 mm

Bedienungsanleitung

Instructions for use

Mode d'emploi

Gebruiksaanwijzing

Instrucciones de uso

Instruções de utilização

Istruzioni per l'uso

Οδηγίες χρήσης

Bruksanvisning

Bruksanvisning

Brugervejledning

Instrukcja obsługi

Návod k použití

Návod na používanie

Használati útmutató

Инструкции по

пользованию прибором

Инструкции за употреба

Instrucțiuni de utilizare

Seite 4

Page 14

Page 23

Pagina 33



Página 43

Página 53

Pagina 63



  SENSING THE DIFFERENCE

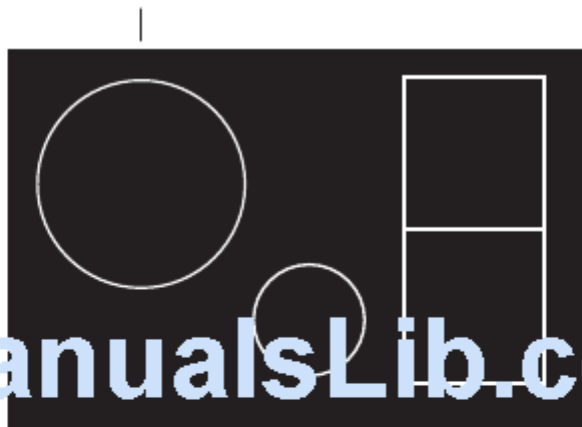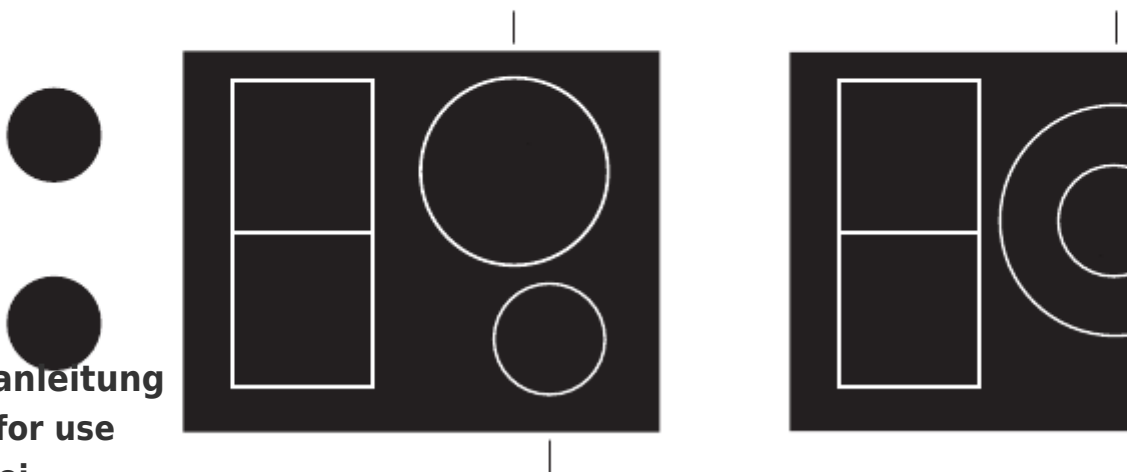

ManualsLib.com

Σελίδα 73

Sidan 83

Side 92

Side 101

Käyttöohje

Sivu 111

Strona 120

Strana 130

Strana 139

Oldal 149

Страница 169

Pagina 179

Стр 159



Whirlpool

SENSING THE DIFFERENCE

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool ACM-845BH

[Cooktop Whirlpool ACM816BA Instructions For Use Manual](#)

60cm induction electric cooktop (14 pages)

[Cooktop Whirlpool ACM795BA Instructions For Use Manual](#)

90cm induction electric cooktop (15 pages)

[Cooktop Whirlpool AKT 920 Product Description Sheet](#)

(4 pages)

[Cooktop Whirlpool AKM160/IX Service Manual](#)

Gas cooktop (9 pages)

[Cooktop Whirlpool AKC7250 C/BLM Instructions For Use Manual](#)

(18 pages)

[Cooktop Whirlpool AKR 028 User Manual](#)

(19 pages)

[Cooktop Whirlpool AKM 950/NE/01 Service Manual](#)

(7 pages)

[Cooktop Whirlpool AKM 605 Instruction Manual](#)

(10 pages)

[Cooktop Whirlpool AKM 330 IX Instructions For Use](#)

(5 pages)

[Cooktop Whirlpool 855784701000 Instructions For Use Manual](#)

(17 pages)

[Cooktop Whirlpool ACM 702 Instructions For Use Manual](#)

Acm 702 cooktop (9 pages)

[Cooktop Whirlpool GR563LXSB0 Use And Care Manual](#)

Electric range (32 pages)

[Cooktop Whirlpool GJC3055 Use And Care Manual](#)

Whirlpool electric cooktop use & care guide gjc3055, gjc3655, gjc3054, gjc3654, gjc3034, gjc3634, rcc3024 (28 pages)

[Cooktop Whirlpool Gold GJC3034R Installation Instructions Manual](#)

Whirlpool gold gjc3034r: install guide (17 pages)

[Cooktop Whirlpool GS773LXS Use And Care Manual](#)

Whirlpool gas range use and care guide (24 pages)

[Cooktop Whirlpool GCI3061X Use & Care Manual](#)

Touch-activated electronic induction cooktop (20 pages)

Summary of Contents for Whirlpool ACM-845BH

[Page 1](#) 240 mm 300/190 mm 145 mm 280 mm 145 mm DEUTSCH Installation Seite 2 Bedienungsanleitung Seite 4 ENGLISH Installation Page 2 Instructions for use Page 14 FRANÇAIS Installation Page 2 Mode d'emploi Page 23 NEDERLANDS Installatie Pagina 2 Gebruiksaanwijzing Pagina 33 ESPAÑOL Instalación Página 2...

[Page 2](#) R = Min. 6,5 mm Max. 8 mm Min. 50 mm R = 11,5 mm 483 mm 490 mm 560 mm R = 11,5 mm 6 mm R = Min. 6,5 mm Max. 8 mm R = Min. 6,5 mm Max.

[Page 3: Important Safety Instructions](#)

ENGLISH Installation Page Instructions for use Page IMPORTANT SAFETY INSTRUCTIONS YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT This manual and the appliance itself provide important safety messages, to be read and always observed. This is the danger symbol, regarding safety, warning of potential risks to users and others. All safety messages will be preceded by the danger symbol and the following words: Indicates a hazardous situation which, if not avoided, will result in serious DANGER...

[Page 4: Safeguarding The Environment](#)

SAFEGUARDING THE ENVIRONMENT Disposal of packaging materials The packaging material is entirely recyclable and marked with the recycling symbol (). Do not dispose of the various packaging materials carelessly, but do so responsibly and in full compliance with local authority regulations governing waste disposal. Scrapping This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

[Page 5: Installation](#)

INSTALLATION After unpacking the hob, check that there has been no damage during transport. If in doubt, contact the dealer or After-sales Service. PREPARING THE HOUSING UNIT Install a separator panel under the WARNING hob. The lower part of the product must not be accessible after installation.

[Page 6: Control Panel Description](#)

INSTRUCTIONS FOR USE Control Panel Description The control panel is equipped with touch controls: to use them, just press the corresponding symbol (a light touch is sufficient). To select and activate the cooking zones MIN. To set the minute counter To enable the hold Hob ON/OFF function...

[Page 7: Timer Selection](#)

Timer selection The timer can be used to set a max. cooking time of 90 minutes. Select the cooking zone to be used with the timer (a dot lights up at the bottom right of the power level indicator), then set the required cooking time using the + and - keys of the timer function: the time in minutes is shown next to the cooking zone display.

[Page 8](#) When the flexi cook function is selected, the booster and sixth sense functions cannot be used. If the timer is set, it will be displayed alongside the hotplate display at the top. Description of automatic functions The hob features automatic functions for each cooking zone. The symbols of the available functions are shown next to the selection key of each cooking zone. Every time an automatic function is selected, an indicator light turns on next to the symbol and the letter "A"...

[Page 9: Troubleshooting Guide](#)

CLEANING Never use steam cleaners. WARNING Before cleaning, make sure the cooking zones are switched off and that the residual heat indicator ("H") is not displayed. IMPORTANT: do not use abrasive sponges or pan scourers. as they could ruin the glass surface. •...

[Page 10: Power Level Table](#)

POWER LEVEL TABLE Power level Type of cooking Level use (indicating cooking experience and habits) Ideal for rapidly increasing the temperature of food to fast boiling in the case of water or rapidly Boost Fast heating heating cooking liquids Max. power Ideal for browning, starting to cook, frying deep frozen products, fast boiling Frying - boiling Ideal for sautéing, maintaining a lively boil, cooking and grilling (for a short period of time,...

[Page 11: Cooking Table](#)

COOKING TABLE Food Dishes or type Power level and cooking status categories of cooking First stage Power Second stage Power Cooking the pasta and Fresh pasta Heating the water Booster - 9 maintaining the boil Cooking the pasta and Dry pasta Heating the water Booster - 9 maintaining the boil...