



Sanyo A5527SA Basic Manual


1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



Contents/

Before Use

Phone Call

Global

Function

Inputting

Characters

Address Book

Pair Function

Basic

Manual

Mail

Camera

EZweb

EZ Navi

SimpleMode

Troubleshooting/

Remote Auto Lock

Other Features

Index

Basic Manual

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo A5527SA

[Cell Phone Sanyo A5514SA Basic Manual](#)

(104 pages)

[Cell Phone Sanyo A5514SA Operating Instructions Manual](#)

(30 pages)

[Cell Phone Sanyo A1303SA Operating Instructions Manual](#)

(22 pages)

[Cell Phone Sanyo au W22SA Basic Manual](#)

(106 pages)

[Cell Phone Sanyo SANYO Innuendo User Manual](#)

(140 pages)

[Cell Phone Sanyo Cell Phone User Manual](#)

Sprint pcs vision phone (256 pages)

[Cell Phone Sanyo Juno User Manual](#)

(115 pages)

[Cell Phone Sanyo SCP-3100 User Manual](#)

Pcs vision phone (270 pages)

[Cell Phone Sanyo VL-2300 Phone Manual](#)

Pcs vision phone (286 pages)

[Cell Phone Sanyo SCP-8100 User Manual](#)

Dual band/tri mode phone (71 pages)

[Cell Phone Sanyo SCP-2400 User Manual](#)

Sanyo cell phone user guide (140 pages)

[Cell Phone SANYO PRO -200 User Manual](#)

Mobile phone (3 pages)

[Cell Phone Sanyo PRO-200 User Manual](#)

Sanyo cell phone user guide (236 pages)

[Cell Phone Sanyo SCP-3810 Operating Manual](#)

(68 pages)

[Cell Phone Sanyo Sprint SCP-7200 User Manual](#)

Pcs vision ready link phone (197 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

Summary of Contents for Sanyo A5527SA

[Page 1](#) Contents/ Before Use Phone Call Global Functions Inputting Characters Address Book/ Pair Function Mail Camera EZweb EZ Navi SimpleMode Troubleshooting/ Remote Auto Lock Other Features/ Index...

[Page 2](#) Before using, read the A5527SA "Basic Manual (this PDF manual)" to ensure correct use of your A5527SA. After you have finished reading, store this PDF manual and the printed manuals in a safe place so that you can retrieve them whenever you need.

[Page 3: Cellphone Etiquette](#)

Cellphone Etiquette Cellphones emit weak radio waves at all times even if you just turn the power on. Enjoy and safely use your cellphone without forgetting those who are around you. The use of cellphones is forbidden in some places. •...

[Page 4: What You Can Do With The A5527Sa](#)

EZ Navi You can download Chaku-Uta Walk, Position Search, and Area wallpaper and others. Message. Page 74 Page 67 Use Overseas You can use the A5527SA overseas with global functions. Page 34 For information on other features, see page 87.

[Page 5: Silent Mode And In-Phone Ans Mach](#)

Silent Mode and In-Phone Ans Mach Silent Mode You can use the silent mode to turn incoming rings and other tones off to prevent others from being inconvenienced. Press for more than one second in the standby screen. Transportation systems Public facilities like During lectures, meetings, etc.

[Page 6: Check The Power, Radio Waves, And Battery](#)

Keep the power on to make or answer calls. Press for more than one second. Page 13 You cannot talk on the phone if A5527SA is not receiving "radio waves". It may be difficult to receive radio waves in some places even in service areas.

[Page 7: Do Not Use The Cellphone While Driving](#)

Do Not Use the Cellphone While Driving Using cellphone while driving is subject to penalties. Holding a cellphone in a hand and use it for a call or gazing at a screen to see mails, etc. while driving is subject to penalties. (November 1, 2004 Implementation of the Revised Road Traffic Law) Holding a cellphone in a Gazing at a screen to see...

[Page 8: Watch Out For Junk Mail And One-Ring Calls](#)

Watch Out for Junk Mail and One-Ring Calls! If you receive junk mail... Mail Filter ● Using the mail filter function, you can reject mail sent from specified addresses and Spoof e-mail. The following mail functions are the main methods available for preventing the arrival of junk mail: •...

[Page 9: Disaster Message Board Service](#)

Disaster Message Board Service About Disaster Message Board When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be confirmed from anywhere in Japan through EZweb or Internet. • When a big scale disaster occurs, you can register your safety information such as your condition and comments from au Registering cellphone to the "□□□□□□..."

[Page 10: Table Of Contents](#)

Contents Cellphone Etiquette 1 What You Can Do with the A5527SA 2 Silent Mode and In-Phone Ans Mach 3 Check the Power, Radio Waves, and Battery! 4 Do Not Use the Cellphone While Driving 5 Watch Out for Junk Mail and One-Ring Calls!

[Page 11](#) Mail About E-mail 50 Creating and Sending an E-mail 51 Reading a Received E-mail 54 Replying to a Received E-mail 56 Blocking Junk Mails 57 About C-mail 58 Creating and Sending a C-mail 59 Reading a Received C-mail

[Page 12: Before Use](#)

Before Use Confirming the Packed Contents ● ● ● A5527SA Main Battery Pack Desktop Holder Unit (Installed in the main unit) ● AC Adapter ● SANYO Flat-type Stereo Earphones 04 ● ● Basic Manual (Japanese) Manual (Japanese) □□ □□□□ □□□□□□□□□□...

[Page 13: Names Of Parts](#)

Names of Parts Earpiece Main display Macro Mode Selector Switch Center key Cursor key Address book key Application key EZweb key Mail key Clear/Manner key Send/Pair key

Power/End key Dial keys Microphone Built-in Antenna Camera lens Flash Infrared Port Incoming indicator Sub display microSD Memory Flat-type...

[Page 14: How To Charge The Battery Pack](#)

● To Charge Using the AC Adapter Connect the AC adapter to the external terminal of the A5527SA and plug the power plug into a power outlet. A confirmation tone sounds once when charging begins. It also sounds when charging is completed.

[Page 15: Turn The Power On/Off](#)

Turn the Power On/Off Standby screen ● To Turn the Power On Press for more than one second. The standby screen is displayed. ● To Turn the Power Off Press for more than one second. Confirming the Reception State and Remaining Battery Power Check here for remaining battery power! Fully Requires...

[Page 16: Basic Operation](#)

Basic Operation Key Functions Cursor Keys Cursor Move cursor or screen In the standby screen, Press Displays Profile Down Calendar Left Incoming Calls log Right Outgoing Calls log Cursor keys are indicated in Center Key this manual as follows: Displays Main Menu Down Left Right...

[Page 17](#) Executing Functions Displayed at the Bottom The functions displayed at the bottom of the screen correspond with the keys as follows: Pressing the key executes the function displayed at the lower right. Pressing the key executes the function displayed at the lower left.

[Page 18: Viewing The Screen](#)

Viewing the Screen Indications in the Main Screen The following icons are displayed in the main screen and indicate the status of your A5527SA. Icons and the number of cases are displayed when you have received missed calls or mails. Battery level ①...

[Page 19: About Menu](#)

About Menu About Main Menu Pressing in the standby screen launches the Main Menu. Each function can be accessed by using to select an item and pressing <Example> Accessing Camera from Main Menu Standby screen Main Menu screen Camera function screen to select "Camera"...

[Page 20: Setting The Language To English](#)

Setting the Language to English Press in the standby screen. to select "[]" and press [[]]. to select "[][][]" and press [[]]. to select "Set Language" and press [[]].

[Page 21](#) to select "English" and press [[]]. Information You can set the language to Japanese by pressing in turn from the standby screen.

[Page 22: Initial Setting For E-Mail And Ezweb](#)

Initial Setting for E-mail and EZweb To use E-mail and EZweb services, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using E-mail and EZweb services for the fi...

[Page 23: Confirming Your Cellphone Number/E-Mail Address](#)

Confirming Your Cellphone Number/E-mail Address Press in the standby screen. Your cellphone number and E-mail address are displayed. Information You can also display them from the standby screen by pressing , and then...

[Page 24: Changing Your E-Mail Address](#)

Changing Your E-mail Address E-Mail Address Domain ΔΔΔ [] ezweb.ne.jp Changeable part Press in the standby screen. to select "E-Mail Setting" and press [Select]. to select "Others" and press [Select]. to select "E[][][] [][][] (Change E-mail Address)" and press [OK].

[Page 25](#) Enter your Security Code, press [Set], use to select [] (Send), and press [OK]. •

Security Code is the 4-digit number you wrote in the application form when purchasing. • If you enter a wrong Security Code 3 times in a row within the same day, you will not be allowed to perform setup operations until the following day.

[Page 26: Phone Call](#)

Phone Call Making a Call From the standby screen, press to enter a phone number. • To call a regular phone, enter a phone number starting with the area code. Press To end the call, press ● To Select the Way of Dialing After entering a phone number, press [Dial], use...

[Page 27: Making An International Call](#)

Making an International Call au International Call Service Available without any additional application. Example: To call 212-123-XXXX in the USA 005345 -- - 123-XXXX ↑ ↑ ↑ ↑ International Country code Area code* Phone number access code (USA) * When an area code begins with "0", dial excluding "0". •...

[Page 28: Answering A Call](#)

Answering a Call Press to answer the call. To end the call, press On-screen display for Incoming calls Phone The caller noti es his/her phone number. If the caller is already saved in the Address book, number his/her name or image is also displayed. ID Unsent The caller does not notify his/her phone number.

[Page 29: Calling Back \(Outgoing Calls/Incoming Calls Log\)](#)

Calling Back (Outgoing Calls/Incoming Calls Log) <Example> Calling back from the Incoming calls log Press in the standby screen. The incoming calls log is displayed. to select a desired number and press The phone starts dialing the phone number you selected. Information To call back to a number from outgoing calls log, press in the standby screen.

[Page 30: Adjusting The Ringer Volume](#)

Adjusting the Ringer Volume Press in the standby screen. to select "Functions" and press [Select]. to select "Sound/ Vibration" and press [Select]. to select "Incoming Call" and press [Select]. The actual volume is displayed in incoming call setting screen.

[Page 31](#) to select "Volume" and press [Select]. : turns the volume up : turns the volume down 5 levels of adjustment (Level 1 to 5) are available. • To confirm the volume, press [Confirm]. • To mute the ringer, set the volume to S (OFF). •...

[Page 32: Changing The Ringer Type](#)

Changing the Ringer Type <Example> Setting the ringer type in "Original" After the step 4 on page 28, to select "Melody" and press [Select]. to select "Original" and press [Select]. Ringer list is displayed. • To confirm the selected ringer, press [Confirm].

[Page 33: Setting The Silent Mode](#)

Setting the Silent Mode When the silent mode is set, your cellphone vibrates to notify you of incoming calls and records the caller's message in the In-Phone Ans Mach when you cannot answer a call. Press for more than one second in the standby screen.

[Page 34: Using The In-Phone Ans Mach](#)

Using the In-Phone Ans Mach When the In-Phone Ans Mach is set, you can play answering message and record caller's message. Setting the In-Phone Ans Mach Press for more than one second in the standby screen. In-Phone Ans Mach is set and appears in the standby screen.

[Page 35](#) Playing Back the Recorded Messages When a message is recorded in the In-Phone Ans Mach, the standby screen noti es you. (Msgs) and the number of recorded messages are displayed. to select (Msgs) and press Playback screen is displayed. • To delete a message, press [Erase].

[Page 36: Global Functions](#)

Global Functions Using Overseas You can use the A5527SA overseas with global functions. Setting Area Press in the standby screen. to select "Global Functions", press [Select] and press [OK]. to select "Area Setting" and press [Select]. to select "Overseas" and press [Select].

[Page 37](#) Calling to Japan from Overseas From the standby screen, enter a phone number and press [Dial]. to select "Dial to Japan", press [Select] and press Information Although the preferred roaming list (PRL) is already stored in the phone at the time of purchase, the list may be updated several times a year.

[Page 38: Inputting Characters](#)

Inputting Characters About Inputting Characters It is necessary to input characters when saving an entry to the Address Book, or creating an E-mail, for instance. Kanji, Hiragana, Katakana, English, numbers, pictograms, emoticons, symbols, and phrases can be inputted. Changing the Character Input Mode Press in the text input screen.

[Page 39](#) Key Assignment of Characters Several characters are assigned to one key. Pressing the same key repeatedly displays a character you want to input. Example (in the English mode) Press once twice 3 times 4 times 5 times 6 times 7 times 8 times

[Page 40: How To Input Characters](#)

How to Input Characters Inputting Kana or Kanji <Example> Inputting "[]" in a name input screen of the Address Book In a text input screen, 5 times [] press press once [] (makes a cursor move) press once [] (voiced sound symbol)

[Page 41](#) Inputting English Characters <Example> Inputting "komatsu" in an E-mail address input screen of the Address Book In a text input screen, press twice..... [] press 3 times... [] (makes a cursor move) press once..... [] press once..... [] press once..... [] • To consecutively input characters assigned to a same key, move the press 4 times... []...

[Page 42](#) Inputting Phrases <Example> Inputting "@ezweb.ne.jp" in an E-mail address input screen Press [Submenu] in a text input screen. to select "Phrases" and press [Select]. Groups of phrases are displayed. to select "[] [] [] [] (Internet)" and press [Select]. A list of phrases is displayed. to select "@ezweb.ne.jp"...

[Page 43](#) Inputting Pictograms, Emoticons and Symbols <Example> Inputting a pictogram Press in a text input screen. A list of input mode is displayed. ...Pictogram ...Emoticon ...Symbol to select and press [Select]. A list of pictograms is displayed. • To change categories, press •...

[Page 44: Address Book](#)

Address Book Saving to the Address Book You can save phone numbers to which you call frequently, names, and E-mail addresses. <Example> Saving a name, phone number and E-mail address Press for more than one second in the standby screen. Address book registration screen is displayed.

[Page 45](#) Enter a phone number and press [Set]. • Enter the area code when saving a regular phone number. to select a type of phone number and press [Select]. The icon of selected type is displayed. • If you do not enter E-mail address, go to step 10.

[Page 46](#) Press [Set]. Pop-up screen which indicates Memory No. is displayed. Press [Set]. Saving to the Address Book is completed. Information Up to 1000 entries can be saved. You can also save some information such as group, image and address. An entry can contain up to 3 phone numbers and 3 E-mail addresses. The smallest available memory number from 000 to 999 is automatically assigned.

[Page 47: Making A Call From The Address Book](#)

Making a Call from the Address Book Press in the standby screen. Address book list is displayed. to select a person to call and press • to select the number 1 to 3 when the entry has some numbers. Press...

[Page 48: Editing An Entry In The Address Book](#)

Editing an Entry in the Address Book From the standby screen, press , use to select an entry to edit, and press [Select]. The address book detailed screen is displayed. Press [Submenu], use to select "Edit" and press [Select]. The address book registration screen is displayed.

[Page 49: Saving From Outgoing Calls/Incoming Calls Log](#)

Saving from Outgoing Calls/Incoming Calls Log <Example> Saving from Incoming calls log From the standby screen, press , use to select the log to save, and press [Submenu]. to select "Save to AdrsBk" and press [Select]. to select "New" and press [Select].

[Page 50: Setting A Pair Partner](#)

Pair Function Setting a Pair Partner You can select 5 persons from saved entries in the Address Book and set them as pair partners. This function allows you to call or send mail easily to them. Press in the standby screen. Pair menu is displayed.

[Page 51: Making A Call To A Pair Partner](#)

Making a Call to a Pair Partner Press in the standby screen. Pair menu is displayed. to select a partner to call, to select "Phone" and press [Select]. Information You can also send E-mail and C-mail to pair partners.

[Page 52: Mail](#)

* Packet charges will differ depending upon the amount of data sent or received in the E-mail. E-mail is sent using an E-mail address. (Ex.) ΔΔΔΔezweb.ne.jp E-mail E-mail can be sent to other cellphones or personal computers that support E-mail. E-mail A5527SA...

[Page 53: Creating And Sending An E-Mail](#)

Creating and Sending an E-mail Press in the standby screen. E-Mail Menu is displayed. to select "Create New" and press [Select]. Create Mail screen is displayed. to select , press [Edit] and press [Edit]. Address Entry screen is displayed. to select "Address Book" and press [Select].

[Page 54](#) to select a recipient, press [Select] and press [Select]. • to select 1 to 3 when the entry has some E-mail addresses. Press [Finish]. Press [Set]. E-mail address is entered. to select and press [Edit]. Subject input screen is displayed. Enter a subject and press [Set].

[Page 55](#) to select and press [Edit]. Body text input screen is displayed. Enter a body text and press [Set]. Body text is entered. Press [Send]. Created mail is sent. • After finished sending, the mail is saved in Outbox as sent mail.

[Page 56: Reading A Received E-Mail](#)

Reading a Received E-mail When an E-mail is received, the standby screen notifies you. (E-Mail) and the number of E-mail are displayed. to select (E-Mail) and press Inbox screen is displayed. • The color is changed and with the number of E-mail is displayed when the folder has new mail.

[Page 57](#) How to view a received mail Mail's sender Received date and time Mail's subject Body text Attached file ● Displaying an E-mail in Inbox From the standby screen, press , use to select "Inbox", and press [select]. Inbox screen is displayed. Follow the steps 2 to 3 on page 54 to display a mail.

[Page 58: Replying To A Received E-Mail](#)

Replying to a Received E-mail After the step 3 on page 54, press [Reply]. Create Mail screen is displayed. The recipient is entered and the subject and body text of the received mail is quoted. • Subject is prefixed with "Re:". • ...

[Page 59: Blocking Junk Mails](#)

Blocking Junk Mails To block junk mails, it is recommended to set □□□□□□□□ (Mail Filter). By selecting "□□□□□□(supportive settings)", you can set □□□□□□ □□ (Mail Filter) easily by answering the Inquiry on the screen. ● Setting □□□□□□□□ (Mail Filter) Example: To access "□□□□□□ □□(supportive settings)" Press in the standby screen.

[Page 60: About C-Mail](#)

C-mail safety block allows you to reject C-mails that include URL to access (http://□□□□,https://□□□□) or phone numbers in the C-mail body text. This function is valid by default. C-mail is sent using a phone number. (Ex.) 090-0001-x××× C-mail can be sent to au cellphones that support C-mail C-mail A5527SA...

[Page 61: Creating And Sending A C-Mail](#)

Creating and Sending a C-mail Press for more than one second in the standby screen. C-Mail Menu is displayed. to select "Create New" and press [Select]. Create Mail screen is displayed. to select and press [Edit]. Address Entry screen is displayed. to select "Address Book"...

[Page 62](#) to select a recipient and press [Select]. • Go to step 7 when the entry has only one phone number. • to select the number 1 to 3 when the entry has some phone numbers. Press [Select]. to select and press [Edit].

[Page 63: Reading A Received C-Mail](#)

Reading a Received C-mail When a C-mail is received, the standby screen notifies you. (C-Mail) and the number of E-Mail are displayed. to select (C-Mail) and press Received mail is displayed. • The newest mail is displayed when you have some new mails. You can display a previous or next mail by pressing •...

[Page 64: Camera](#)

You can also add frames and special effects to photos, and take picture with the timer. Photos you took can be... ●Used in the A5527SA You can set taken photos as the standby Incoming screen, or register them to the Address Book Call to display when you receive incoming calls.

[Page 65](#) How to Hold Your Cellphone When Shooting When you take photos or movies, put the subject inside the screen and hold the cellphone firmly with both hands to prevent a blur. When shooting with a vertical screen When shooting with a horizontal screen Shutter button Shutter button About the Shoot and Movie modes...

[Page 66: Taking A Photo](#)

Taking a Photo From the standby screen, press , use to select "Camera", and press [Select]. Camera functions are displayed. to select "Photo" and press [Select]. Press [Shoot]. Shutter sounds and taken photo is displayed. • To retake the photo, press Press [Save].

[Page 67: Viewing Photos](#)

Viewing Photos From the standby screen, press , use to select "Data", and press [Select]. to select "Data Folder" and press [Select]. to select "Photo Folder" and press [Select]. Photo Folder list is displayed. • All photos are saved in "All Photo". to select a folder which contains a photo to view, and press...

[Page 68: Sending Photos By E-Mail](#)

Sending Photos by E-mail After taking a photo (follow the steps 1 to 3 on page 64), press [E-Mail]. Create Mail screen appears with a taken photo attached. Follow "Creating and Sending an E-mail" (p.51) and send E-mail. Information Sending E-mail may take more time than usual, depending upon radio wave conditions.

[Page 69: Ezweb](#)

* Packet charges will be based on the actual amount of data sent and received while connected to EZweb and not on the amount of time you connect. * Some information sites are subject to additional information costs besides communication costs. Information sites @ Chaku-Uta Wallpaper Games Latest Weather news report Traffic information Fair A5527SA...

[Page 70: Accessing Information Sites](#)

Accessing Information Sites Displaying the EZ Top Menu From the standby screen, press , use select "Top Menu", and press [Select]. EZ Top Menu is displayed. EZ Top Menu Provides a search engine for information available by the ① keyword entry. ②...

[Page 71: Inquiring Toll](#)

Basic Operation while Using EZweb • You can display the next screen by using to select an item and pressing • You can return to the previous screen by pressing , and you can go back to EZ Top Menu by pressing it for more than one second. •...

[Page 72: Downloading Chaku-Uta ® And Set It As A Ringer For Incoming Calls](#)

® Downloading Chaku-Uta and Set It as a Ringer for Incoming Calls ® You can download Chaku-Uta from information site and set it as a ringer for incoming calls. You can also download wallpaper and set it to the standby screen and others.

[Page 73](#) Press [Play]. Downloaded data is played. Press [Set]. Save to screen is displayed. to select "Ringers" and press [Select]. Registration destinations of the selected target are displayed. to select "Incoming Call" and press [Select]. Downloaded data is set as ringer for "Incoming Call".

[Page 74: Registering Frequently-Accessed Information Sites](#)

Registering Frequently-Accessed Information Sites You can access information sites easily by registering frequently-accessed sites to "Bookmark(s)". Registering to Bookmark Display a site you want to register and press [BsrMnu]. Browser menu is displayed. to select "New bookmark" and press [OK]. The title, URL, and folder name are displayed.

[Page 75](#) Viewing an Information Site Registered as a Bookmark Press in the standby screen. EZweb Menu is displayed. to select "Bookmark(s)" and press [Select]. A list of registered information sites is displayed. to select a site you want to view and press [Select].

[Page 76: Ez Navi](#)

EZ Navi (Subscription to EZweb required) What You Can Do with EZ Navi EZ Navi is a useful service which provides you with global positioning information (GPS information). Packet fees will be charged whenever you use one of the functions under the EZ Navi service. Other fees may also be charged for some functions.

[Page 77](#) "Position Search" allows you to confirm the current position of your child This service allows you to use the A5527SA to confirm the position of an au cellphone that supports Position Search. The following 2 types of Position Search services are available.

[Page 78: Simplemode](#)

SimpleMode About SimpleMode Setting SimpleMode allows you to simplify operation to the frequently used functions such as phone function, Address Book, Camera, Mails, and EZweb. Setting SimpleMode Press in the standby screen. to select "SimpleMode" and press [Select]. Confirmation screen is displayed. to select "Yes"...

[Page 79](#) ● Releasing SimpleMode Press in the standby screen. Simple Menu is displayed. to select "Functions" and press [Select]. to select "Rel. Simple Mode" and press [Select]. Confirmation screen is displayed. to select "Yes" and press [Select]. SimpleMode is released. Information Setting SimpleMode may change what you have set in normal mode.

[Page 80: Simple Menu](#)

Simple Menu In SimpleMode, functions are accessed from Simple Menu. Standby screen Simple Menu to select "Camera" and press Address Book Save to or search in the Address Book Incoming Display the incoming calls log Phone Outgoing Display the outgoing calls log In-Phone Ans Mach Set/Release/Replay the In-Phone Ans Mach Create E-mail/Confi...

[Page 81: Using Simplemode](#)

Using SimpleMode Saving to the Address Book In SimpleMode, you can save names, readings, phone numbers, and E-mail addresses. From Simple Menu, use select "Phone", press [Select], to select "Address Book", and press [Select]. Address book list is displayed. Press [New].

[Page 82](#) to select "Direct Input" and press [Select] Enter a phone number and press [Set]. The ways of entering E-mail address are displayed. • Enter the area code when saving a regular phone number. • If you do not enter E-mail address, press [Next].

[Page 83](#) Creating and Sending an E-mail From Simple Menu, use to select "Mail" and press [Select]. Select mail type screen is displayed. to select "E-Mail" and press [Select]. E-Mail Menu is displayed. to select "Create New" and press [Select]. Enter Address screen is displayed. to select "Address Book"...

[Page 84](#) Enter a subject and press [Set]. Body text input screen is displayed. Enter a body text and press [Set]. Create Mail screen is displayed. • To edit a focused item, press [Edit]. • To save the created mail in Outbox, press [Save].

[Page 85](#) Taking a Photo From Simple Menu, use to select “Camera” and press [Select]. Camera functions are displayed. to select “Photo” and press [Select]. • To change the photo size, press [Mode]. Press [Shoot]. Shutter sounds and taken photo is displayed. •...

[Page 86: Troubleshooting](#)

Release the In-Phone Ans Mach. answers automatically. For detailed information, visit the website of SANYO Electric Co., Ltd. as below. □From A5527SA: Press for more than one second. (SANYO Keitai Planet, in Japanese only) □From PC: <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

[Page 87: Before Losing](#)

Set the operating condition of the remote auto lock on the assumption that you might lose the A5527SA. Receiving a specified number of calls from a specified number in a specified time locks your A5527SA automatically, which prevents other person's use.

[Page 88](#) “Valid” or “Invalid” and press [Select]. • If you select “Valid”, all data in the A5527SA will be deleted when Auto Lock is turned on. Be very careful when you select “Valid” for this setting. Unlock Phone to select “Valid” or “Invalid” and press [Select].

[Page 89: Other Features](#)

No operation on your cellphone is possible while the alarm is sounding except the procedure to turn off that alarm. The A5527SA has other useful features which are not presented in this Basic Manual. ● microSD™ Memory Card (Commercially Available) You can keep various data on a microSD™ ...

[Page 90: Index](#)

Index Download70 Number Drive Mode5 184+Dial 24 186+Dial 24 E-mail Creating51 E-mail Menu 51 AC Adapter 10,12 Initial Setting 20 Address Book Reading.....54 Editing 46 Receiving54 Making a Call

[Page 91](#) Ringer Key Functions 14 Adjusting the Volume...28 Changing.....30 Language.....18 Loudset 27 Safety Buzzer 87 SANYO Flat-type Stereo Earphones 04 10 Shoot mode63 Mail Silent Mode C-mail..... 58 Releasing31 E-mail 50 Setting

[Page 92](#) Pressing zero will connect you to an operator, after calling 157 on your au cellphone. Sales : KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY SANYO Electric Co., Ltd. Manufactured by : July 2007 Edition Access the au online manual from here.