



Toshiba CAMILEO BW10 Quick Start Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

--	--

•

•

Bookmarks

--


Quick Links

[1 Quick Start Guide](#)

[2 Charging the Battery Pack](#)

[Download this manual](#)

See also: [User Manual](#) , [Quick Start Manual](#)

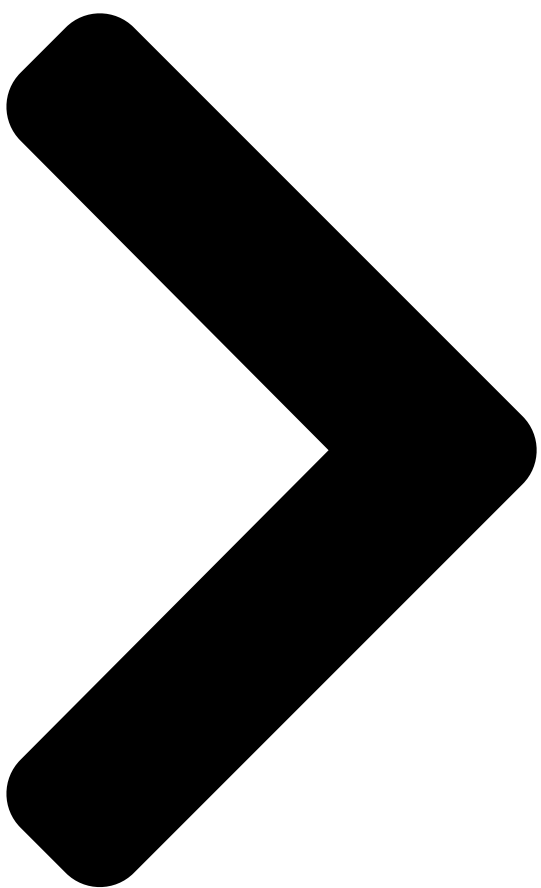

Quick Start Guide

CAMILEO BW10

Downloaded From VideoCamera-Manual.com
Manuals

EN

HR
CZ
HU
DE
IT
DK
NL
ES
NO
FI
PL
FR
PT
GR
RS
RU

[ManualsLib.com](https://manualslib.com)

SE
SK
SL
TR
AR

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba CAMILEO BW10

[Camcorder Toshiba PA3897U-1CAS Camileo BW10 - S User Manual](#)

Pa3897u-1cas camileo bw10 - s user's guide (119 pages)

[Camcorder Toshiba Camileo BW10 User Manual](#)

Camileo (66 pages)

[Camcorder Toshiba Camileo BW10 Quick Start Manual](#)

Toshiba camileo bw10 camcorder quick start guide (45 pages)

[Camcorder Toshiba CAMILEO BW10 SPORTSCAM Specification](#)

Digital h.264 full hd video camcorder (2 pages)

[Camcorder Toshiba Camileo BW10 Specifications](#)

Hd waterproof camcorder (2 pages)

[Camcorder Toshiba PA3897U-1CAS Camileo BW10 - S Specifications](#)

Toshiba the camileo full-hd camcorder (1 page)

[Camcorder Toshiba PA3961U-1CAM Camileo B10 User Manual](#)

Pa3961u-1cam camileo b10 user's guide (145 pages)

[Camcorder Toshiba Camileo B10 Quick Start Manual](#)

Toshiba camileo b10: quick start (33 pages)

[Camcorder Toshiba PA3961U-1CAM Camileo B10 Specifications](#)

Toshiba the camileo full-hd camcorder (1 page)

[Camcorder Toshiba CAMILEO B10 User Manual](#)

(49 pages)

[Camcorder Toshiba CAMILEO BW20 User Manual](#)

User guide (113 pages)

[Camcorder Toshiba PA3792U-1CAM Camileo S20 User Manual](#)

Pa3792u-1cam camileo s20 user's guide (138 pages)

[Camcorder Toshiba PA3791U-1CAM Camileo H30 User Manual](#)

Pa3791u-1cam camileo h30 user's guide (144 pages)

[Camcorder Toshiba PA3973U-1C0K Camileo X200 User Manual](#)

Pa3973u-1c0k camileo x200 user's guide (149 pages)

[Camcorder Toshiba CAMILEO AIR10 User Manual](#)

User guide (74 pages)

[Camcorder Toshiba Camileo S30 User Manual](#)

Toshiba camcorder user manual (47 pages)

Summary of Contents for Toshiba CAMILEO BW10

[Page 1: Quick Start Guide](#)

Quick Start Guide CAMILEO BW10 Downloaded From VideoCamera-Manual.com Manuals...

[Page 2: Safety Instructions](#)

CAMILEO BW10 INTRODUCTION Welcome and thank you for choosing a TOSHIBA product. For your convenience, your TOSHIBA product is furnished with two guides: a) this Quick Start Guide, and b) a comprehensive PDF User's Manual on the included DVD. SAFETY INSTRUCTIONS 1.

[Page 3: Waterproof Feature](#)

CAMILEO BW10 Concerning your camcorder's Important! waterproof feature This camcorder complies with JIS IPX8 (formerly JIS protection grade 8) waterproof standard and can be used in water. Note, however, that failing to heed the following precautions may result in damage or injury that is not covered by the warranty.

[Page 4](#) CAMILEO BW10 NOTE k Storing and maintaining your camcorder i Do not leave the camcorder unwashed after it has been immersed in salt water or if salt water is adhering to it. Doing so may cause corrosion and discoloration of the plating, as well as deterioration of the camcorder's waterproof capability.

[Page 5: Before Recording In Water](#)

CAMILEO BW10 BEFORE RECORDING IN WATER Make sure that the slot cover and the terminal cover are closed. If a cover is open, water will get inside the camcorder and damage it. When closing the slot cover and terminal cover, make sure that no foreign object such as sand, hair, dust, etc.

[Page 6: When Using For The First Time](#)

CAMILEO BW10 PREPARE THE BATTERY PACK AND CARD When using for the first time The battery pack is already installed in the camcorder. Remove the battery pack from the camcorder, remove the insulating seal, and reinstall the battery pack in the camcorder.

[Page 7: Installing The Battery Pack And Card](#)

CAMILEO BW10 Installing the battery pack and card Install the card and the supplied battery pack. i The card is not an included accessory. Please purchase a commercially sold card. i The camcorder has an internal memory, which means that you can record and save the recorded data even if no card is installed.

[Page 8: Charging The Battery Pack](#)

CAMILEO BW10 CAUTION Close the slot cover and terminal cover securely i If any cover is not closed or is not closed completely, the camcorder will no longer be waterproof. When closing a cover, make sure that no foreign object such as sand, hair, dust, etc. is caught in the rubber seal.

[Page 9](#) CAMILEO BW10 Turn on the computer. h Charging begins. h During charging, the multi-indicator is lit orange. h When charging is completed, the indicator turns off. h The charging time is approx. 220 minutes. CAUTION During charging... i Do not turn on the camcorder while the battery pack is charging. It is not possible to charge the battery pack while the camcorder is on.

[Page 10: Date And Time Setting](#)

CAMILEO BW10 DATE AND TIME SETTING When the camcorder is first turned on after purchase, the Clock Set Screen appears. Proceed from step 4 to set the date and time. Press the power button to turn on the camcorder. Press the MENU button.

[Page 11: Video Clip Recording](#)

CAMILEO BW10 VIDEO CLIP RECORDING Press the POWER button to turn on the camcorder.] button (Video recording button) Press the [] button. h Recording begins. h It is not necessary to keep the] button pressed while recording.

[Page 12: Shooting Single Shots](#)

CAMILEO BW10 SHOOTING SINGLE SHOTS Capture a still image (single-shot). Press the POWER button to] button turn on the camcorder. (Photo shooting button) Press the [] button. h The shutter releases and the image is captured. h You can view the captured...

[Page 13: Playing Back Video Clips And Still Images](#)

CAMILEO BW10 PLAYING BACK VIDEO CLIPS AND STILL IMAGES Press the play [=] button. [=] button h The display changes to (Play button) the Playback Screen. OK button Select the image to play back. h Use the arrow keys to...

[Page 14: Deleting Files](#)

CAMILEO BW10 Deleting files On the screen in step 2, move the orange frame to the file you wish to delete, and press the MENU button. Select "DELETE SINGLE", and press the OK button. h If you press [G] or [H], the screen to delete a different file will appear.

[Page 15: Copying Files To A Computer](#)

CAMILEO BW10 COPYING FILES TO A COMPUTER Start your computer, and use the supplied USB interface cable to connect your camcorder to the computer. h Connect the camcorder's USB terminal to the computer's USB connector. h The USB Connection Screen appears on the camcorder's monitor.

[Page 16](#) CAMILEO BW10 AFTER USING THE CAMCORDER IN WATER After using the camcorder in water, wash it with fresh water and dry it completely. Turn off the camcorder, and close the slot cover and terminal cover securely. Wash the camcorder with fresh water.

[Page 17: Toshiba Support](#)

This product is CE marked in accordance with the requirements of the applicable EU Directives. Responsible for CE marking is Toshiba Europe GmbH, Hammfelddamm 8, 41460 Neuss, Germany. A copy of the official Declaration of Conformity can be obtained from following website: <http://epps.toshiba-teg.com>.

[Page 18](#) CAMILEO BW10 Regulation: IEC 60825-1:2001 LED light characteristics - Continuous illumination - Wavelength 400 to 750 nm - Output 65 μ W (internal 34 mW) CAUTION If an undesignated modification etc. of the LED light used in this product is intentionally performed, the resulting light intensity that is emitted may exceed the level that is safe for the eyes.