



Toshiba 32S255 Series Owner's Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Table of Contents](#)

[2 Tv Panel Controls](#)

[3 Main Menu Operation](#)

[4 Specifications](#)

[Download this manual](#)



OWNER'S MANUAL

LED TV **TOSHIBA**

Leading Innovation >>>

32S255* Series

display

40S255* Series

TOSHIBA GULF FZE

TOSHIBA EL ARABY VISUAL & APPLIANCES

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32S255 Series

[LED TV Toshiba 32SL400U Brochure & Specs](#)

720p hd led tv (2 pages)

[LED TV Toshiba 24L2900 Owner's Manual](#)

(26 pages)

[LED TV Toshiba 32L2200U User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 23PU200 series Owner's Manual](#)

(32 pages)

[LED TV Toshiba 32L134*DG Series Manual](#)

Led backlight lcd satellite tv (46 pages)

[LED TV Toshiba 32L1400U User Manual](#)

Integrated high definition led television (115 pages)

[LED TV Toshiba 32L1400U User Manual](#)

Integrated high definition led television (115 pages)

[LED TV Toshiba 32L255 Series Owner's Manual](#)

(56 pages)

[LED TV Toshiba 49L510U18 Manual](#)

60hz led tv (81 pages)

[LED TV Toshiba 55L510U18 Manual](#)

(81 pages)

[LED TV Toshiba 32L310U20 Manual](#)

32" 720p 60hz led tv (65 pages)

[LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

[LED TV Toshiba 32L5069 Series Owner's Manual](#)

(27 pages)

[LED TV Toshiba 32WV2353DB Quick Start Manual](#)

(10 pages)

Summary of Contents for Toshiba 32S255 Series

[Page 1](#) OWNER'S MANUAL LED TV Owner's Record 32S255* Series display 40S255* Series
TOSHIBA GULF FZE TOSHIBA EL ARABY VISUAL & APPLIANCES MARKETING COMPANY © 2015 All
Rights Reserved TMF0803005...

[Page 2](#) Base assembly Follow the procedures below in order to assemble 4. After the stand is
mounted to the TV, remove the LED TV base the stand's protective film. 1. Before you begin to
assemble the base, carefully support the LED TV, with the front facing down, on a flat and soft
surface, such as a towel or blanket.

[Page 3: Table Of Contents](#)

Important Safety Instructions.....Exploring your new TV.....TV panel controls.....Learning about the remote control..... TV back panel connections..... Connecting HDMI or DVI devices..... Connecting an aerial..... Turning the TV onSelect Input Source.....Turning the TV for the first time.....Main Menu Operation.....

[Page 4 - 4 -...](#)

[Page 6: Exploring Your New Tv](#)

Exploring your new TV TV panel controls TV front view Left side view INPUT (on-screen information or input source) -This button switches to the on-screen information or the input source selection. MENU Press to select the main menu. When selectable on-screen information is displayed, it can be selected by pushing CH ▼/▲...

[Page 7: Learning About The Remote Control](#)

LIST: Press it to show channel list on screen. 10. NICAM: NICAM button. 11. REC: Press to start recording. (Only in the DTV mode.) 12. Q.MENU: Press this key to go to quick menu. 13. INFO: Display the program information. 14.

[Page 8: Tv Back Panel Connections](#)

TV back panel connections TV back view HDMI2 HDMI1 PC AUDIO Connecting HDMI or DVI devices HDMI2 HDMI1 PC AUDIO display - 8 -...

[Page 9: Connecting An Aerial](#)

Switching off the TV Press on the remote control or POWER on the TV left side panel to switch to the standby mode. TV may not display small text properly. Select Input Source Connecting an aerial Press INPUT button to display the input source list Press ▼/▲...

[Page 10: Main Menu Operation](#)

Auto Tuning First tuning ATV, press Menu and left arrow button to skip ATV tuning, Second tuning DTV, press Menu and left arrow button to skip DTV tuning. Main Menu Operation Channel Menu Press MENU button to display the main menu. Press ◀/▶...

[Page 11](#) ATV Manual Tuning Current CH Set the channel number. Color System Select the color system (Available System: AUTO, PAL, SECAM) Sound System Select the sound system Fine-Tune Adjust the frequency of the channel finely. Search After setting the channel number and frequency, you can choose "search"...

[Page 12](#) Picture Mode Press ▼/▲ button to select Picture Mode, then press OK button to enter sub-menu. You can change the value of contrast, brightness, color, Cool: Increase the blue tone for the white. sharpness and tint when the picture is in User mode. Medium: Increase the sex-linked colors for the white.

[Page 13](#) Sound Mode Press ▼/▲ button to select Sound Mode, then press Enter button to enter sub-menu. Press ▼/▲ button to select. NOTE: Balance: This item can adjust the speaker's output, it enables you to listen to best at your position. Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

[Page 14](#) Time Zone Auto Standby Press ▼/▲ button to select Time Zone, then press Press ▼/▲ button to select Auto Standby, then press Enter button to enter sub-menu. Enter button to enter sub-menu. Press ▼/▲ button to select. Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically.

[Page 15](#) Lock Menu Press MENU button to display the main menu. Press ◀/▶ button to select Lock in the main menu. 1. Press ▼/▲ button to select the option that you want to adjust in the SYSTEM LOCK menu. 2. Press Enter/◀/▶ button to adjust. 3.

[Page 16](#) Hotel Mode Press ▼/▲ button to select Hotel Mode, then press ◀/▶ button to select on or off. Source Lock Press ▼/▲ button to select Source Lock, then press Enter button to enter sub-menu to select. Default Source Press ▼/▲ button to select Default Source, then press Enter

button to enter sub-menu to select.

[Page 17](#) Screen Menu Press MENU button to display the main menu. Press ◀▶ button to select SCREEN in the main menu. Hearing Impaired Press ▼▲ button to select Hearing Impaired, then press Enter button to select On or Off. Aspect Ratio Press ▼▲...

[Page 18: Media Operation](#)

Media Operation Note: Before operating Media menu, Plug in USB device, then press INPUT button to set the Input Source to Media . Press ▼▲ button to select Media in the Source menu, then press Enter button to enter. Press ◀▶ button to select the option you want to adjust in the main Media menu, then press Enter button to enter.

[Page 19](#) Movie Menu Press ◀▶ button to select MOVIE in the main menu, then press Enter button to enter. Press Exit button to return to the previous menu and exit menu to quit. Press ◀▶ button to select drive disk you want to watch, then press Enter button to enter.

[Page 20: Media Player Supported Formats](#)

- 20 -...

[Page 21: Troubleshooting](#)

LED TV 32S255* Series 40S255* Series 110-240V AC, 50/60Hz 32S255* Series: 65W, 0.5W 40S255* Series: 75W, 0.5W 32S255* Series: 734 x 180 x 489 mm (with base) 734 x 90 x 443 (without base) 40S255* Series: 923 x 220 x 595 mm (with base) 923 x 90 x 549mm (without base) 32S255* Series: 6.5 (with base) 40S255* Series...

[Page 22](#) SCREWS: ST4x16mm*4pcs, M4x10mm*4pcs (32S255* Series) ST4x20mm*4pcs, M4x10mm*4pcs (40S255* Series) display - 22 -...

[Page 45](#) 39056877...

This manual is also suitable for:

40s255 series