



Asus RP-AC68U Quick Installation Manual

Dual band wireless ranger extender

1
2
3
4

--

•

Bookmarks

--

[Download this manual](#)

Quick Links



RP-AC68U
Dual band Wireless Ranger Extender


Quick Installation Guide



Method One

Power On

Plug your RP-AC68U into a
Near
power outlet
your
Router/AP

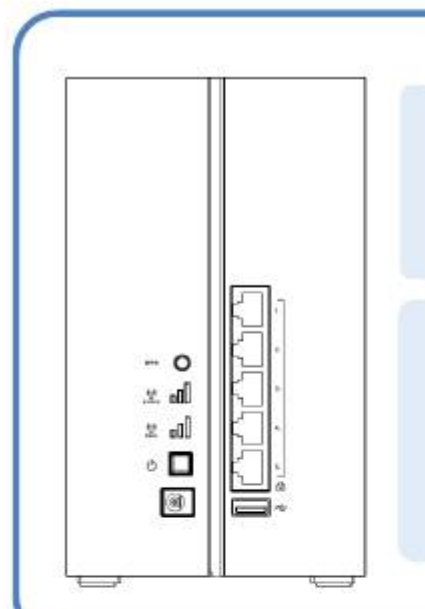

Relocate RP-AC68U to a location you like.

After the extender is relocated to a new place, RP-AC68U will reconnect to your router automatically in about one minute.

The ideal location for RP-AC68U is between your wireless router and wireless device.

Enjoy! **ASUS**

The Range Extender shares your router's Wireless Network Name (SSID) and Wireless Password

Q1: What should I do if my router doesn't have a WPS button?

A1: You can use Method Two to set up RP-AC68U

Q3 How do I reset RP-AC68U

A1: Press the RESET button on the button of RP-AC68U for about two seconds. Wait for about five (5) seconds until the LEDs blink slowly.

Push the two WPS buttons

Push the WPS button on your

Router/AP

Make sure RP-AC68U is in a location where signals indicator LED has over 2 led on at least.

Frequently Asked Questions (FAQ)

Q2 Why is that the Wi-Fi LED does not light up after completing Method Two?

A1: You may have entered the wrong router SSID and password. Reset your RP-AC56, double check your router SSID/password, and set up RP-AC56 again.

A quick look

Five LAN Gigabit ports

USB 3.0 port x 1

WPS button x 1

Power on/off button x 1

Wi-Fi LED:

2.4G LED / 5G LED:

Three LEDs on: RP-AC68U has good signal connection with router.

Two LEDs on: RP-AC68U has normal signal connection with router.

One LED on: RP-AC68U has weak signal connection with router.

Off: RP-AC68U doesn't connect to a router.

Immediately push the WPS

button on your RP-AC68U.

Keep the RP-AC68U away from devices like cordless

phones, Bluetooth devices, microwave ovens to

minimize wireless interference.

If possible, try to place the extender in open

corridors or spacious locations, not in a

crowded room.

Reset button

The Stylish LED should go


flashing in about 2 minutes.

Wait until the Wi-Fi LED turn

on. You could know the

signal quality with different

LED number.

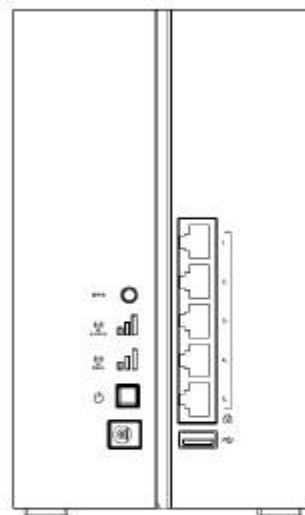

2

①

②



[Next Page](#)

1
2
3
4

Related Manuals for Asus RP-AC68U

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (176 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (68 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual range wireless-ac750 range extender (2 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

(155 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual band wireless-ac750 range extender (75 pages)

[Extender Asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 (2 pages)

[Extender Asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 range extender (9 pages)

[Extender Asus RP-AX58 Quick Start Manual](#)

Ax3000 dual-band wifi range extender (2 pages)

[Extender Asus RP-AX58 Quick Start Manual](#)

Ax3000 dual-band wifi range extender (2 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug (39 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug range extender (119 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (178 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (37 pages)

[Extender Asus rp-n14 Quick Start Manual](#)

Wireless-n300 range extender (28 pages)

[Extender Asus RP-N14 Quick Start Manual](#)

Wireless-n300 range extender (144 pages)

[Extender Asus RP-N14 Quick Start Manual](#)

Wireless-n300 range extender (29 pages)

Summary of Contents for Asus RP-AC68U

Page 1 LED number. Relocate RP-AC68U to a location you like. After the extender is relocated to a new place, RP-AC68U will reconnect to your router automatically in about one minute. Keep the RP-AC68U away from devices like cordless phones, Bluetooth devices and microwave ovens to minimize wireless interference.

Page 2 Configure IMPORTANT! For the best Wi-Fi extender performance, place your RP-AC68U in an ideal location. Refer to Step 3 in Method One 1. On a web browser, enter <http://repeater.asus.com>. 3. You can either tick "Use default setting" or enter the SSID and security key/password for your extended network.

[Page 3](#) FCC Notices This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

[Page 4](#) Canada, avis d'Industry Canada (IC) Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

This manual is also suitable for:

Rp0s01