

Chapter 2: Basic Installation; Building Your Pc System; Motherboard Installation - Asus STRIX H270F GAMING User Manual

1	
2	
Table Of Contents	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113


•

[Table of Contents](#)

•

Bookmarks

--

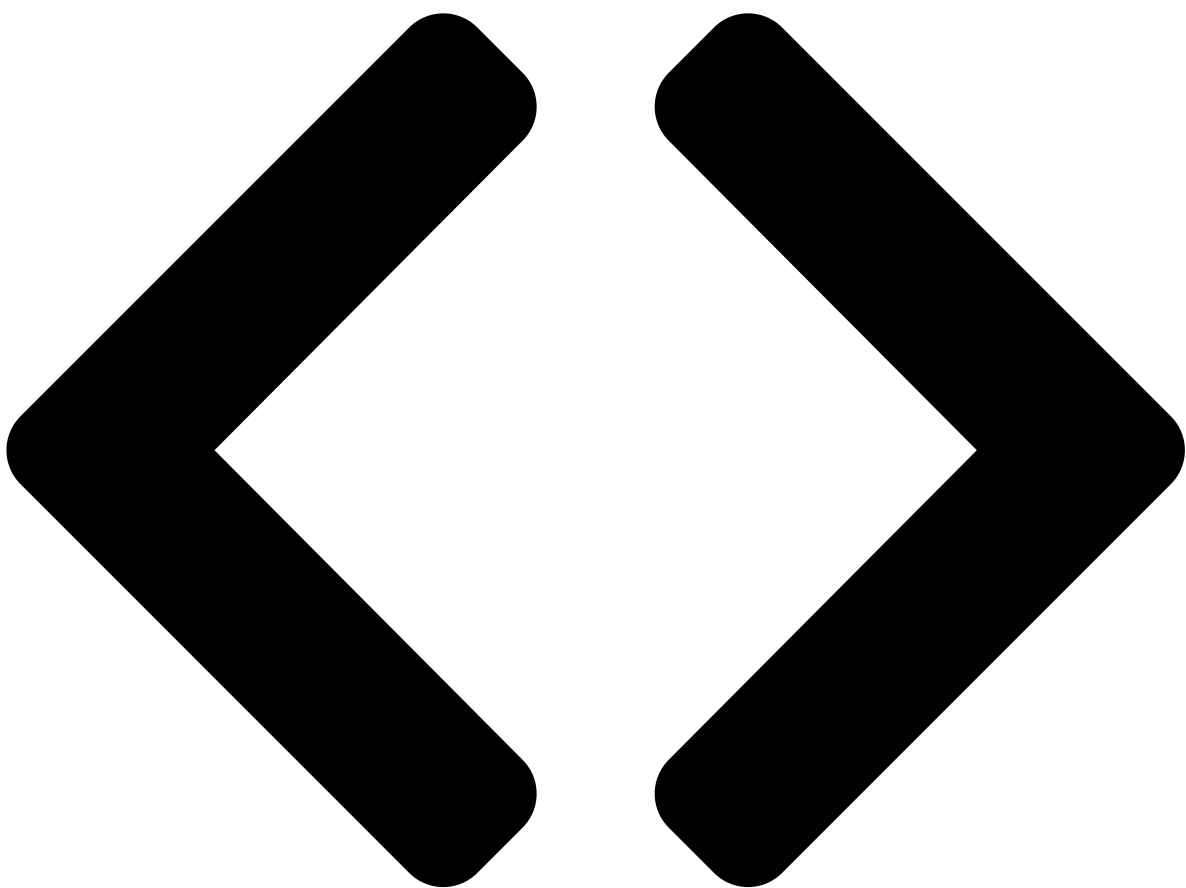

Basic Installation

2.1

Building your PC system

The diagrams in this section are for reference only. The motherboard layout may vary with models, but the installation steps are the same for all models.

2.1.1



Motherboard installation

1.
- Install the ASUS Q-Shield to the chassis rear I/O panel.
2.
- Place the motherboard into the chassis, ensuring that its rear I/O ports are aligned to the chassis' rear I/O panel.
- ASUS STRIX H270F GAMING



2-1



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
32
33
34
35
36
37
38
39

Quick Links:

[Motherboard Layout](#)

Related Manuals for Asus STRIX H270F GAMING

[Motherboard Asus STRIX H270F GAMING Manual](#)

(113 pages)

[Motherboard Asus STRIX H270F GAMING Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H270-Plus User Manual](#)

(36 pages)

[Motherboard Asus STRIX H270I GAMING Manual](#)

(75 pages)

[Motherboard Asus Prime H270-PRO Manual](#)

(38 pages)

[Motherboard Asus PRIME H270M-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H270M-PLUS Manual](#)

(37 pages)

[Motherboard Asus H97-PRO Manual](#)

(48 pages)

[Motherboard Asus H110M-A/M.2 User Manual](#)

(26 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus Prime H410M-CS Manual](#)

(28 pages)

[Motherboard Asus PRIME H510M-R Manual](#)

(30 pages)

[Motherboard Asus PRIME H510TS Manual](#)

(30 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

Related Content for Asus STRIX H270F GAMING

[MAXIMUS VII HERO Chapter 2: Basic Installation](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Chapter 2: Basic Installation](#)

Asus STRIX Z270H GAMING

[TUF X470-PLUS GAMING Chapter 2: Basic Installation](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Chapter 2: Basic Installation](#)

Asus PRIME X570-P

[WS C621E SAGE Series Chapter 2: Basic Installation](#)

Asus WS C621E SAGE Series

[RAMPAGE V EDITION 10 Chapter 2: Basic Installation](#)

Asus RAMPAGE V EDITION 10

[ROG STRIX X399-E GAMING Chapter 2: Basic Installation](#)

Asus ROG STRIX X399-E GAMING

[PRIME Z370-A II Series Chapter 2: Basic Installation](#)

Asus PRIME Z370-A II Series