



# Layout Contents - Asus STRIX B250I GAMING User Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78



•

•

## Bookmarks








•  
M.2\_2 is located on the bottom of the motherboard.

•  
Refer to 1.1.8 Internal connectors and 2.2.1 Rear I/O connection for more information about rear panel connectors and internal connectors.

## Layout contents

---

1. ATX power connectors (24-pin EATXPWR, 8-pin EATX12V)
  2. M.2 sockets
  3. LGA1151 CPU socket
  4. CPU, AIO pump, and chassis fan connectors  
(4-pin CPU\_FAN, 4-pin AIO\_PUMP, 4-pin CHA\_FAN)
  5. DDR4 DIMM slots
- 

- 6. POST State LEDs
- 7. RGB LED
- 8. RGB header (4-pin RGB\_HEADER)
- 9. System panel connector (10-1 pin F\_PANEL)
- 10. Speaker connector (4-pin SPEAKER)
- 11. Intel  
Serial ATA 6 Gb/s connectors (7-pin SATA6G\_1~4)  
®
- 12. USB 3.0 connector (20-1 pin USB3\_12)
- 13. Clear RTC RAM (2-pin CLRRTC)
- 14. TPM connector (14-1 pin TPM)
- 15. Front panel audio connector (10-1 pin AAFP)
- 16. RTC Battery header (2-pin BATT\_CON)

ASUS STRIX B250I GAMING

- 1-15
- 1-13
- 1-4
- 1-14
- 1-5
- 1-10
- 1-10
- 1-9
- 1-16
- 1-15
- 1-11
- 1-12
- 1-8
- 1-12
- 1-11
- 1-8
- 1-3

ManualsLib.com

[Previous Page](#)  
[Next Page](#)

1  
...  
14  
15  
16  
17  
18  
19  
20  
21

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Headers](#)

[Onboard Leds](#)

[Front I/O Connector](#)

## Related Manuals for Asus STRIX B250I GAMING

[Motherboard Asus PRIME B250M-C/CSM User Manual](#)

(26 pages)

[Motherboard Asus STRIX B250F GAMING User Manual](#)

(84 pages)

[Motherboard Asus STRIX B250G GAMING Manual](#)

(72 pages)

[Motherboard Asus B250 MINING EXPERT Manual](#)

(29 pages)

[Motherboard Asus prime B250M-K Manual](#)

(26 pages)

[Motherboard Asus STRIX B250H GAMING Manual](#)

(76 pages)

[Motherboard Asus PRIME B250-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME B250-PRO Manual](#)

(28 pages)

[Motherboard Asus PRIME B250M-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME B250M-J User Manual](#)

(27 pages)

[Motherboard Asus B250M-C PRO Manual](#)

(26 pages)

[Motherboard Asus ROG STRIX B350-F GAMING Manual](#)

(78 pages)

[Motherboard Asus ROG STRIX X470-F GAMING Configuration Manual](#)

(26 pages)

[Motherboard Asus ROG STRIX X470-F GAMING Bios Manual](#)

(56 pages)

[Motherboard Asus ROG STRIX Z390-E GAMING Manual](#)

(100 pages)

[Motherboard Asus ROG STRIX X570-E GAMING User Manual](#)

(94 pages)

## Related Content for Asus STRIX B250I GAMING

[P9D-C Series Layout Contents](#)

Asus P9D-C Series

[P11C-M/10G-2T Layout Contents](#)

Asus P11C-M/10G-2T

[M3A78 Layout Contents](#)

Asus M3A78

[P9D-X Layout Contents](#)

Asus P9D-X

[CUW-AM Layout Contents](#)

Asus CUW-AM

[P10S-M-DC Layout Contents](#)

Asus P10S-M-DC

[P10S-E/4L Layout Contents](#)

Asus P10S-E/4L

[P5S-MX SE Layout Contents](#)

Asus P5S-MX SE