



# Chapter 3: Bios Setup; Knowing Bios

 
## - Asus STRIX B250I GAMING User Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78



•

•

## Bookmarks







# BIOS Setup

## 3.1

### Knowing BIOS

The new ASUS UEFI BIOS is a Unified Extensible Interface that complies with UEFI architecture, offering a user-friendly interface that goes beyond the traditional keyboard-only BIOS controls to enable a more flexible and convenient mouse input. You can easily navigate the new UEFI BIOS with the same smoothness as your operating system. The



term "BIOS" in this user manual refers to "UEFI BIOS" unless otherwise specified.

BIOS (Basic Input and Output System) stores system hardware settings such as storage device configuration, overclocking settings, advanced power management, and boot

device configuration that are needed for system startup in the motherboard CMOS. In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. DO NOT change the default BIOS settings except in the following

circumstances:

- An error message appears on the screen during the system bootup and requests you to run the BIOS Setup.

- You have installed a new system component that requires further BIOS settings or update.

Inappropriate BIOS settings may result to instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.

When downloading or updating the BIOS file, rename it as B250IG.CAP for this motherboard.

ASUS STRIX B250I GAMING

# 3

ManualsLib.com

3-1



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
46  
47  
48  
49  
50  
51  
52  
53

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Headers](#)

[Onboard Leds](#)

[Front I/O Connector](#)

## Related Manuals for Asus STRIX B250I GAMING

[Motherboard Asus PRIME B250M-C/CSM User Manual](#)

(26 pages)

[Motherboard Asus STRIX B250F GAMING User Manual](#)

(84 pages)

[Motherboard Asus STRIX B250G GAMING Manual](#)

(72 pages)

[Motherboard Asus B250 MINING EXPERT Manual](#)

(29 pages)

[Motherboard Asus prime B250M-K Manual](#)

(26 pages)

[Motherboard Asus STRIX B250H GAMING Manual](#)

(76 pages)

[Motherboard Asus PRIME B250-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME B250-PRO Manual](#)

(28 pages)

[Motherboard Asus PRIME B250M-PLUS Manual](#)

(28 pages)

[Motherboard Asus PRIME B250M-J User Manual](#)

(27 pages)

[Motherboard Asus B250M-C PRO Manual](#)

(26 pages)

[Motherboard Asus ROG STRIX B350-F GAMING Manual](#)

(78 pages)

[Motherboard Asus ROG STRIX X470-F GAMING Configuration Manual](#)

(26 pages)

[Motherboard Asus ROG STRIX X470-F GAMING Bios Manual](#)

(56 pages)

[Motherboard Asus ROG STRIX Z390-E GAMING Manual](#)

(100 pages)

[Motherboard Asus ROG STRIX X570-E GAMING User Manual](#)

(94 pages)

## Related Content for Asus STRIX B250I GAMING

[Pro Q670M-CE D4 Bios Setup Program](#)

Asus Pro Q670M-CE D4

[Z790 GAMING WIFI7 Bios Setup Program](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Chapter 3: Bios Setup](#)

Asus PRIME X299-A Series

[ROG RAMPAGE V EDITION 10 Chapter 3: Bios Setup](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Chapter 3 Bios Setup](#)

Asus Q170A-IM-A

[Z13PE-D16 Chapter 4: Bios Setup](#)

Asus Z13PE-D16

[WS X299 SAGE Chapter 3: Bios Setup](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Bios Setup Program](#)

Asus Pro A620M-C-CSM