 


Remove And Replace The Ballast/Power Supply Insulator - Toshiba TDP-MT8 Service Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Remove and Replace the Ballast/Power Supply Insulator

The ballast/power supply insulator provides electrical insulation between the power supply, ballast and chassis.

WARNING

The insulator must always be installed between the ballast and power supply and the chassis. Inspect the gasket closely whenever the ballast or power supply is removed. Never use a gasket with holes or tears.

The lamp connector retainer fastens to the chassis near the thermal switch. It holds the lamp connector securely in the lamphouse.

1.

Remove the following items:

Ballast (see page 7)

Power supply (see page 43)

2.

Tilt the ballast/power supply insulator away from the front wall of the chassis and the ballast mounting standoffs. Then lift the insulator out of the projector.

Assembly Notes



Position the ballast/power supply insulator in the chassis so that the holes in the bottom of the insulator align with the ballast mounting slots and power supply standoffs that protrude from the floor

of the chassis. Then press the insulator over the ballast mounting standoffs on the front of the chassis.

TDP-MT8 Service Guide

10

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
7
8
9
10
11
12
13
14

Quick Links:

[Power and Start-Up Problems](#)

Related Manuals for Toshiba TDP-MT8

[Projector Toshiba TDP-MT8 User Manual](#)

Home cinema dlp technology (42 pages)

[Projector Toshiba TDPMT8U User Manual](#)

Owners manual (42 pages)

[Projector Toshiba TDP-MT200 Owner's Manual](#)

Toshiba dlp projector owner's manual tdp-mt200 (44 pages)

[Projector Toshiba TDP- T80 Service Manual](#)

(93 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Toshiba projector tdp-mt500 owner's manual (42 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Home projector (40 pages)

[Projector Toshiba TDP-MT400 Service Manual](#)

(118 pages)

[Projector Toshiba TDP TDP-MT700 Owner's Manual](#)

Toshiba owner's manual video projector tdp-mt700 (34 pages)

[Projector TOSHIBA TDP-MT700 Owner's Manual](#)

Home theater projector (36 pages)

[Projector Toshiba TDP-MT700 Service Manual](#)

(49 pages)

[Projector Toshiba mt200 Technical Data](#)

Contrast 2,500 : 1 true 16 : 9 wide screen truevision de-interlacing (2 pages)

[Projector Toshiba TDP MT200 Specifications](#)

Dlp projector (2 pages)

[Projector Toshiba TDP MT700 Specifications](#)

Hd dlp home theater projector (2 pages)

[Projector Toshiba PROJECTORS Brochure & Specs](#)

Home cinema projectors (8 pages)

[Projector Toshiba TDP-MT5 User Manual](#)

(78 pages)

[Projector Toshiba Projector Manual](#)

(43 pages)

Related Content for Toshiba TDP-MT8

[TDP ET20/U Power Supply Cord Selection](#)

Toshiba TDP ET20/U

[TLP470A Power Supply Unit](#)

Toshiba TLP470A

[TLP-X4100U I Power Supply Lines](#)

Toshiba TLP-X4100U

[TLP470EF Power Supply Unit](#)

Toshiba TLP470EF

[TLPB2U Power Supply Unit](#)

Toshiba TLPB2U

[TLP-X3000 Power Supply Cord Selection](#)

Toshiba TLP-X3000

[TDP-TW355J Power Supply Cord Selection](#)

Toshiba TDP-TW355J

[TLP-XC2500 Power Supply Cord Selection](#)

Toshiba TLP-XC2500