



Asus RP-AC56 Quick Start Manual

Wireless-ac1200 range extender

1
2
3
4
5
6
7
8
9

--

-

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

[1 Quick Start Guide](#)

[2 Package Contents](#)

[3 A Quick Look](#)


[4 Setting up the Range Extender](#)

[5 Signal Indicator](#)

[6 Frequently Asked Questions](#)

[Download this manual](#)

[See also: Quick Start Manual](#)

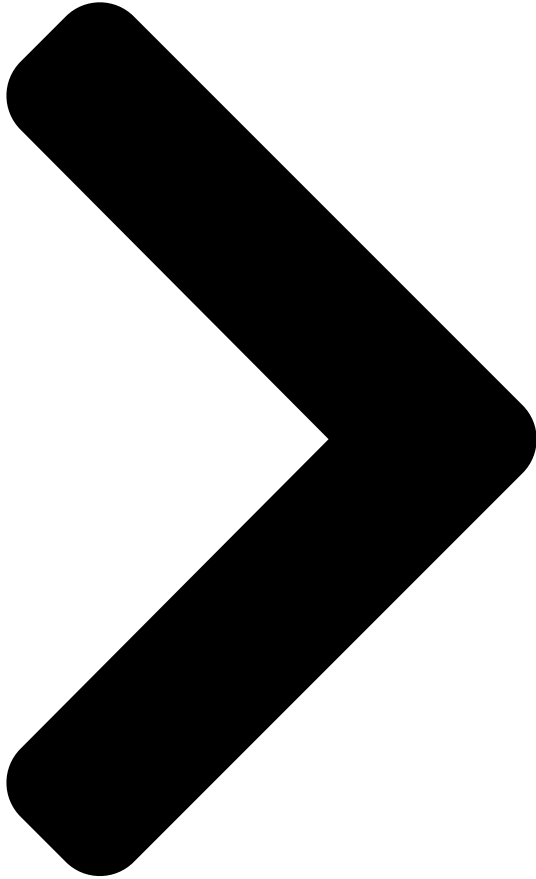

RP-AC56

IN SEARCH OF INCREDIBLE

Wireless-AC1200 Range Extender


Quick Start Guide

Q10396 / First Edition / April 2015

RP-AC56

Wireless-AC1200 Range Extender

ManualsLib.com

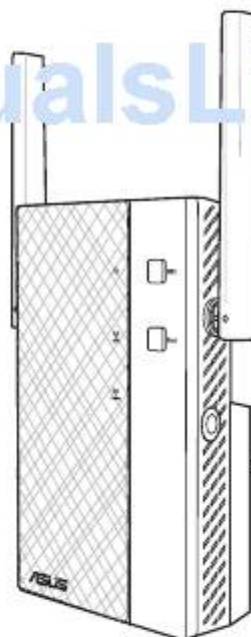

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus RP-AC56

[Network Router asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 range extender (172 pages)

[Extender Asus RP-AC56 Quick Start Manual](#)

Wireless-ac1200 (2 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

(155 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual band wireless-ac750 range extender (75 pages)

[Extender Asus RP-AC52 Quick Start Manual](#)

Dual range wireless-ac750 range extender (2 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug (39 pages)

[Extender Asus RP-N53 Quick Start Manual](#)

Dual band wireless-n600 wall-plug range extender (119 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (2 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (178 pages)

[Extender Asus RP-N12 Quick Start Manual](#)

Wireless-n300 range extender (37 pages)

[Extender Asus RP-AC68U Quick Installation Manual](#)

Dual band wireless ranger extender (4 pages)

[Extender Asus rp-n14 Quick Start Manual](#)

Wireless-n300 range extender (28 pages)

[Extender Asus RP-N14 Quick Start Manual](#)

Wireless-n300 range extender (144 pages)

[Extender Asus RP-N14 Quick Start Manual](#)

Wireless-n300 range extender (29 pages)

[Extender Asus RP-AX58 Quick Start Manual](#)

Ax3000 dual-band wifi range extender (2 pages)

[Extender Asus RP-AX58 Quick Start Manual](#)

Ax3000 dual-band wifi range extender (2 pages)

Summary of Contents for Asus RP-AC56

[Page 1: Quick Start Guide](#)

RP-AC56 Wireless-AC1200 Range Extender Quick Start Guide Q10396 / First Edition / April 2015...

[Page 2](#) English3 Frenchxx Brazilian
.....xx Portuguesexx Spanish
.....xx...

[Page 3: Package Contents](#)

Quick Start Guide Warrenty Card NOTE: If any of the items is damaged or missing, please contact your retailer. A quick look 1) Power LED On: RP-AC56 is on. Off: RP-AC56 is off. 2) WPS button 3) Reset button 4) 5GHz LED 5) 2.4GHz LED...

[Page 4: Setting Up The Range Extender](#)

Option B: Using WPS (Wi-Fi Protected Setup) 1. Press the WPS button on the router/AP. 2. Press the WPS button on the top of the RP-AC56 for more than two (2) seconds, until the Power LED starts to blink. Connecting to a network NOTE: Refer to the router's manual for the location of the WPS...

[Page 5: Signal Indicator](#)

3. Check if RP-AC56's Wi-Fi indicator turns solid light, which indicates that the Range Extender has connected to the wireless network successfully. The Range Extender's wireless network name (SSID) changes to your existing Wi-Fi network name, ending with _RPT or _RPT5G. For example: Existing Wi-Fi network name: existing NetworkName New Extender 2.4GHz network name: existing Networ-...

[Page 6: Frequently Asked Questions](#)

IP address back. Q5: How do I reset RP-AC56? • Press the RESET button on the top of RP-AC56 for about two (2) seconds. Wait for about five (5) seconds until the LEDs blink slowly. Q6: Why doesn't the 5GHz signal indicator of the Range Extender light up? • Check whether your router supports 5GHz band. If your router is single band, the Range Extender's 5GHz Signal Indicator will not...

[Page 7](#) Q7: When I connect a speaker or stereo system to RP-AC56, there is no sound coming out when I play audio files. • Make sure that you have not turned off the audio output via the touch controller. The touch controller is set to turn on/off the night light and mute/unmute the audio by default. You can log into the Range Extender's Web GUI to change the settings. Q8: I cannot access the web GUI to configure the RP-AC56 settings. • Close all running web browsers and launch again.

[Page 8](#) 4. Click OK when done. Manufacturer ASUSTeK Computer Inc. Tel: +886-2-2894-3447 Address: No. 150, LI-TE RD., PEITOU, TAIPEI 112, TAIWAN Authorised ASUS Computer GmbH representative in Address: HARKORT STR. 21-23, 40880 RATINGEN, GERMANY Europe Authorised BOGAZICI BIL GISAYAR SAN. VE CIZGI Elektronik San. Tic. Ltd. Sti.

[Page 9](#) This equipment also should be installed and operated with minimum distance 20cm between the radiator & your body.