



Asus P535 Assembly & Disassembly Instructions

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [User Manual](#)



Doc. No:	
Date: 2006.10.25	
ASUSTeK	
P535 Assembly & Disassembly	
Revision:	
COMPUTER INC.	

SOP		
Page:		
Grade:		

Rev. Modification
Modify description

Issue div.		
Originator		
V101		
English		
Jacky		
P535 Assembly & Disassembly		

SOP		
Review		

Originator	
Authorize	
Jacky	
by	
by	
by	
Form No : D2-001-11 Rev.01	

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus P535

[Cell Phone Asus P535 User Manual](#)

Asus cell phone user manual (132 pages)

[Cell Phone Asus P535 Quick Start Manual](#)

(27 pages)

[Cell Phone Asus P535 Quick Start Manual](#)

P535 quick start guide (26 pages)

[PDA Asus P527 - Smartphone - GSM Service Manual](#)

Service manual (35 pages)

[PDA Asus P505 Quick Start Manual](#)

Smart pda phone (13 pages)

[PDA Asus P505 User Manual](#)

(326 pages)

[PDA Asus MyPal A636 Handbook](#)

(142 pages)

[PDA Asus R50A User Manual](#)

Ultra mobile pc (76 pages)

[PDA Asus Galaxy mini 2 Assembly & Disassembly](#)

Sop (15 pages)

Summary of Contents for Asus P535

[Page 1](#) Doc. No: Date: 2006.10.25 ASUSTeK P535 Assembly & Disassembly Revision: COMPUTER INC. Page: Grade: Rev. Modification Modify description Issue div. Originator V101 English Jacky P535 Assembly & Disassembly Review Originator Authorize Jacky Form No : D2-001-11 Rev.01...

[Page 2](#) P535 Assembly & Disassembly Purpose : This SOP is separated into three parts : (1)Overview & Tools (2)Disassembly (3)Assembly This purpose of this SOP is to help engineer assembly & disassembly more easily (1) Overview 1. Top site...

[Page 3](#) P535 Assembly & Disassembly Tools Item Picture Part Name Tweezers 16-000600014 Screwdriver (T5) 16-T00362002 Screwdriver (+) 16-000511307 PLASTIC WRENCH 13GV0400PZZZ (2)Disassembly Remove Battery cover...

[Page 4](#) P535 Assembly & Disassembly 2. Remove Battery 3. Remove Stylus...

[Page 5](#) P535 Assembly & Disassembly 4. Remove antennal cover...

[Page 6](#) P535 Assembly & Disassembly 4. Remove 4 screws...

[Page 7](#) P535 Assembly & Disassembly 6. Remove bottom cover...

[Page 8](#) P535 Assembly & Disassembly 7. Remove RF connector covre 8. Remove Flash LED board Caution : stick...

[Page 9](#) P535 Assembly & Disassembly 9. Remove speaker 10. Remove vibrator...

[Page 10](#) P535 Assembly & Disassembly 11. Remove antennal...

[Page 11](#) P535 Assembly & Disassembly...

[Page 12](#) P535 Assembly & Disassembly 12. Remove phone jack cover 13. Remove LCD connector mylar...

[Page 13](#) P535 Assembly & Disassembly 14. Remove camera rubber 15. Remove camera...

[Page 14](#) P535 Assembly & Disassembly 16. Remove speaker seal 17. Open LCD FPC connector cover 18. Remove LCD FPC...

[Page 15](#) P535 Assembly & Disassembly 19. Remove keypad FPC 20. Remove main board 2 screws...

[Page 16](#) P535 Assembly & Disassembly 21. Remove the main board module 22. Remove mic rubber 23. Remove keypad ASSY...

[Page 17](#) P535 Assembly & Disassembly 24. Remove receiver LCD cu-foil 25. Remove LCD module...

[Page 18](#) P535 Assembly & Disassembly 26. Remove receiver 27. Remove keypad FPC...

[Page 19](#) P535 Assembly & Disassembly (2) Assmble 1. Assmble keypad FPC...

[Page 20](#) P535 Assembly & Disassembly 2. Assmble LCD module 3. Assmble receiver...

[Page 21](#) P535 Assembly & Disassembly 4. Assmble receiver LCD cu-foil Caution : 5. Assmble mic rubber...

[Page 22](#) P535 Assembly & Disassembly 6. Assmble the main board module Caution : stick...

[Page 23](#) P535 Assembly & Disassembly 7. Assmble keypad B TO B connector 8. Assmble keypad B TO B sponge 9. Assmble LCD FPC 10. Assmble LCD FPC connector cover...

[Page 24](#) P535 Assembly & Disassembly 11. Assmble LCD connector mylar Caution : 12. Assmble keypad ASSY...

[Page 25](#) P535 Assembly & Disassembly 13. Assmble 2 screws 14. Assmble camera cu-foil Caution :...

[Page 26](#) P535 Assembly & Disassembly 15. Assmble camera 16. Assmble camera sponge...

[Page 27](#) P535 Assembly & Disassembly 17. Assmble camera rubber 18. Assmble speaker seal 19. Assmble antennal...

[Page 28](#) P535 Assembly & Disassembly 20. Assmble Flash LED board Caution : PAD UP Caution : stick...

[Page 29](#) P535 Assembly & Disassembly 21. Assmble speaker 22. Assmble vibrator 23. Assmble phone jack cover...

[Page 30](#) P535 Assembly & Disassembly 24. Assmble bottom cover Caution :...

[Page 31](#) P535 Assembly & Disassembly 25. Assmble 4 screws 26. Assmble RF connector covre...

[Page 32](#) P535 Assembly & Disassembly 27. Assmble antennal cover 28. Assmble Stylus...

