

 
Installation Location; Electrical Requirements; Safety Instructions - Sanyo SAP-KMV91G-S Technical & Service Manual

Inverter multi-split system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78



•

-

Troubleshooting

•

Bookmarks



Avoid:
CAUTION

4

Installation Location

We recommend that this air conditioner be installed properly by qualified installation technicians in accordance with the Installation Instructions provided with the unit.

Before installation, check that the voltage of the electric supply in your home or office is the same as the voltage shown on the nameplate.



WARNING

Do not install this air conditioner where there are fumes or flammable gases, or in an extremely humid space such as a

greenhouse.

Do not install the air conditioner where excessively high heat-generating objects are placed.

To protect the air conditioner from heavy corrosion, avoid installing the outdoor unit where salty sea water can splash directly onto it or in sulphurous air near a spa.

Electrical Requirements

- 1. All wiring must conform to the local electrical codes. Consult your dealer or a qualified electrician for details.**
- 2. Each unit must be properly grounded with a ground (or earth) wire or through the supply wiring.**
- 3. Wiring must be done by a qualified electrician.**



Safety Instructions

Read this Instruction Manual carefully before using this air conditioner. If you still have any difficulties or problems, consult your dealer for help.

This air conditioner is designed to give you comfortable room

conditions. Use this only for its intended purpose as described in this Instruction Manual.

Never use or store gasoline or other flammable vapor or liquid near the air conditioner — it is very dangerous.

This air conditioner has no ventilator for intaking fresh air from outdoors. You must open doors or windows frequently when you use gas or oil heating appliances in the same room, which consume a lot of oxygen from the air. Otherwise there is a risk of suffocation in an extreme case.

Do not turn the air conditioner on and off from the power mains switch. Use the ON/OFF operation button.

Do not stick anything into the air outlet of the outdoor unit. This is dangerous because the fan is rotating at high speed.

Do not let children play with the air conditioner.

Do not cool the room too much if babies or invalids are present.

01-306-04EG

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
51
52
53
54
55
56
57
58

Quick Links:

[Specifications in Combination with Indoor Units](#)

Chapters

[Table of Contents](#) 3

[Table of Contents](#) 53

Troubleshooting

[TROUBLESHOOTING](#) 41

[Troubleshooting Using the Self-Diagnostic Monitor](#) 42

[Troubleshooting](#) 77

Related Manuals for Sanyo SAP-KMV91G-S

[Air Conditioner Sanyo SAP-CMRV1424EH Technical & Service Manual](#)

Dc inverter multi-system air conditioner (114 pages)

[Air Conditioner Sanyo SAP-KMRV74EH Installation Instructions Manual](#)

Inverter split system air conditioner (24 pages)

[Air Conditioner Sanyo SAP-KMRV74EH Installation Instructions Manual](#)

Inverter multi split system air conditioner (28 pages)

[Air Conditioner Sanyo SAP-CMRV1426EH Technical & Service Manual](#)

(148 pages)

[Air Conditioner Sanyo SAP-KM97AHA Technical & Service Manual](#)

Multi-split system air conditioner (50 pages)

[Air Conditioner Sanyo SAP-KM97GHS5A Technical & Service Manual](#)

Multi-split system air conditioner (48 pages)

[Air Conditioner Sanyo SAP-CMRV3143GJH Technical & Service Manual](#)

Dc inverter multi-system air conditioner (45 pages)

[Air Conditioner Sanyo SAP-KMRV93GJH Technical & Service Manual](#)

Dc inverter multi-system air conditioner (64 pages)

[Air Conditioner Sanyo SAP-K9AP Instruction Manual](#)

Split system air conditioner (37 pages)

[Air Conditioner Sanyo SAP-KRV9AG Instruction Manual](#)

Inverter-controlled split system air conditioner (22 pages)

[Air Conditioner Sanyo SAP-KRV123EH Technical & Service Manual](#)

Dc inverter split system air conditioner (77 pages)

[Air Conditioner Sanyo SAP-CRV93EHN Technical & Service Manual](#)

Dc inverter split system air conditioner (77 pages)

[Air Conditioner Sanyo SAP-KRV94EHDX Technical & Service Manual](#)

Dc inverter split system air conditioner (85 pages)

[Air Conditioner Sanyo SAP-KRV9AEH Service Manual](#)

Dc inverter split system air conditioner (108 pages)

[Air Conditioner Sanyo SAP-K181AHA-S Technical & Service Manual](#)

(78 pages)

[Air Conditioner Sanyo SAP-K181AA Technical & Service Manual](#)

Split system air conditioner (66 pages)

Related Content for Sanyo SAP-KMV91G-S

[SAP-K91AA Installation Location](#)

Sanyo SAP-K91AA

[SAP-FDRV96EH Installation Location](#)

Sanyo SAP-FDRV96EH

[SAP-K77GHAX Installation Location](#)

Sanyo SAP-K77GHAX

[SAP-K71GJA Installation Location](#)

Sanyo SAP-K71GJA

[SAP-K161GJA Installation Location](#)

Sanyo SAP-K161GJA

[KS2432 Installation Location](#)

Sanyo KS2432

[SAP-K91A Installation Location](#)

Sanyo SAP-K91A

[SAP-DMRV93GJ Installation Location](#)

Sanyo SAP-DMRV93GJ

This manual is also suitable for:

[Sap-kmv181g-sSap-cmv2441g](#)