



 
# **TOSHIBA**

Toshiba Softbank 810T User Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
Table Of Contents  
55



•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links







# Abridged English Manual

**For more information about handset operations and functions, please go to the SoftBank Website ([www.softbank.jp](http://www.softbank.jp)) for the full manual\* or dial 157 from a SoftBank handset for Customer Service.**

Please note that the full manual may not be available in

\*

English at time of purchase. In this case, call Customer Service or check SoftBank Website again at a later date.

06.9.4 4:14:16 PM

06.9.4 4:14:16 PM

ManualsLib.com

Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba Softbank 810T

### [Cell Phone Toshiba 803 Quick Start Manual](#)

Toshiba cell phone quick start guide (13 pages)

### [Cell Phone TOSHIBA 803 User Manual](#)

Toshiba 803 mobile phone (195 pages)

### [Cell Phone Toshiba PORTEGE G910 User Manual](#)

(13 pages)

### [Cell Phone Toshiba W45T Basic Manual](#)

(126 pages)

### [Cell Phone TOSHIBA TS10 User Manual](#)

Toshiba mobile phone (83 pages)

### [Cell Phone Toshiba Regza ISO4 Basic Manual](#)

Toshiba regza is series mobile phone basic manual (79 pages)

### [Cell Phone Toshiba VM4050 User Manual](#)

Pcs vision phone (249 pages)

### [Cell Phone Toshiba SG4-E01 User Manual](#)

(33 pages)

### [Cell Phone Toshiba Portege G710 User Manual](#)

Toshiba cell phone user guide (140 pages)

### [Cell Phone Toshiba 2032SP Online User's Manual](#)

Dual-band pcs phone (106 pages)

### [Cell Phone Toshiba A5509T Basic Manual](#)

(102 pages)

### [Cell Phone Toshiba G500 User Manual](#)

Toshiba cell phone user manual (123 pages)

### [Cell Phone Toshiba T-01B User Manual](#)

(176 pages)

### [Cell Phone Toshiba W53T Manual Manual](#)

Cdma 1x win (93 pages)

### [Cell Phone Toshiba TX80 User Manual](#)

Toshiba cell phone user manual (145 pages)

### [Cell Phone Toshiba A5523T Basic Manual](#)

Au by kddi (118 pages)

## Summary of Contents for Toshiba Softbank 810T

[Page 1](#) Abridged English Manual For more information about handset operations and functions, please go to the SoftBank Website ([www.softbank.jp](http://www.softbank.jp)) for the full manual\* or dial 157 from a SoftBank handset for Customer Service. Please note that the full manual may not be available in English at time of purchase.

### [Page 2: What's In The Box](#)

What's in the Box 7 Handset 7 Battery Pack (TSBAE1) 7 Battery Cover 7 AC Charger (TSCS01) 7 User Guide 7 Guide for Advanced Simple Mode (Japanese only) 7 First Step Guide (Japanese only) 7 BeatJam 2007 for 810T/811T Guide Book (Japanese only) 7 Utility Software for

810T/811T (CD-ROM)\* Complimentary sample not available for purchase.

### [Page 3: Navigation Key](#)

Keys & Notations Navigation Key The following notations are used to indicate Navigation Key operations. Soft Keys Notation/ Function Use Soft Keys to perform operations indicated at the bottom of the Main Operation Display. Opens Active Window Increases volume Press up Moves cursor up Accesses Phone Book Decreases volume...

[Page 4](#) (as the user) and TOSHIBA CORPORATION ("Toshiba") are a business organisation, you will use your best efforts to prevent with regard to the copyrighted software as installed in a Toshiba 3G your employees, servants and contractors from attempting to reverse handset supplied to you (the "Handset").

[Page 5](#) 8. Third Party Beneficiary. You agree that certain suppliers of the Software LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, to Toshiba have a right as a third party beneficiary to enforce the TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE terms of this EULA against you as a user.

### [Page 6: Safety Precautions](#)

1 Serious injury includes loss of sight, wounds, high temperature burns, Safety Precautions low temperature burns (burns causing reddish areas, blistering and other damage to the skin as a result of heat exceeding the body temperature 7 To ensure proper usage, be sure to read the Safety Precautions contacting your skin for a prolonged time), electric shock, fractures and thoroughly before using your handset.

### [Page 7: Limitation Of Liability](#)

foods, as well as fires through no fault of SoftBank and Toshiba, Doing so may cause overheating, rupturing, fire, electric shock, acts by third parties, other accidents, improper use by the user, injury or malfunction.

[Page 8](#) Danger Do not expose the handset, charger or battery pack Do not touch the battery pack connectors (metal to fluids such as water, perspiration or seawater parts) with any metal objects (necklace, hairpin, etc.) Doing so may cause overheating, rupturing, fire, electric shock Doing so may cause the battery pack to overheat, rupture or malfunction.

[Page 9](#) Warning Do not charge the battery pack while it is wet or Turn off the handset while you are near any damp precision electronic equipment Doing so may cause overheating, rupturing, fire, electric shock Radio waves may adversely affect the operation of electronic or short circuit.

[Page 10](#) Warning Do not use the handset with any power voltage When thunder is heard outside, stop using the other than the specified voltage handset immediately Doing so may cause a fire. The power voltages are 100 to 240 V Turn off the handset and do not touch it AC for the AC Charger and 12 or 24 V DC (for a negative ground Failing to do so may attract lightning and cause electric shock.

[Page 11](#) Warning If something unusual happens to the handset, If the handset is used near an implanted cardiac battery pack or charger; for example, it emits smoke pacemaker, defibrillator or other electronic medical or an unusual odour or is damaged, perform the equipment, radio waves may interfere with such a following steps immediately device or equipment...

[Page 12](#) Warning The above information conforms to "The Guidelines on Use of Mobile Phones and Other Devices to Prevent Electromagnetic Wave Interference with Electronic Medical Equipment" (Electromagnetic Compatibility Conference Japan, April 1997), as well as refers to "The Investigative Research Report on the Infl..."

[Page 13](#) Caution Do not use or leave the handset or battery pack in Do not pull, bend with excessive force or twist the places where it will be exposed to direct sunlight or cords of the AC Charger and In-Car Charger in hot places such as inside a car in the sun Do not damage or modify them Doing so may cause overheating, fire...

[Page 14](#) Caution Do not place the handset on an unstable or unlevel If the fuse for the In-Car Charger blows, replace it surface with a designated fuse Doing so may result in the handset

falling and causing injury or Replacing the fuse with other than a designated fuse may cause malfunction.

[Page 15](#) Caution If your skin becomes irritated, immediately stop using the handset and consult with a dermatologist The following materials and surface treatments have been used for the handset. Some of these materials may cause itching, irritation, eczema, etc. in some rare cases depending on the individual's constitution and physical condition. Material (Surface Treatment) Part 810T...

[Page 16](#) Caution Before using the handset, make sure that no metal Do not turn the volume up too high while using the objects (such as pins) are stuck to the Earpiece stereo earphone-microphone with audio remote Failing to do so may result in a metal object causing an ear injury, control etc.

[Page 17](#) Caution Do not subject the memory card to vibration or Do not use excessive force when inserting or shock or remove it from the slot or turn off the removing the USIM card handset while data is being written to or read from Doing so may cause a malfunction.

### [Page 18: General Notes](#)

SoftBank and Toshiba accept no liability whatsoever for the corruption or General Notes loss of stored data. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum. Using Your Handset 7 Be sure to charge the battery pack before using the handset for the fi...

[Page 19](#) 7 Before using the handset, stop the vehicle in a safe area where parking lost or altered. SoftBank and Toshiba accept no liability whatsoever for or stopping is permitted.

### [Page 20: Mobile Camera](#)

7 When Earphone Microphone Jack and Cable and Handset Charging Mobile Camera Terminal are not in use, make sure to replace the caps. Otherwise dust or 7 Be sure to observe proper etiquette when using the camera. water may enter the handset causing handset malfunction. 7 Do not expose the camera lens to direct sunlight.

### [Page 21: Fcc Notice](#)

Copyrights FCC Notice Copyrighted materials, such as music, images, computer programs and The handset may cause TV or radio interference if used in close proximity to databases, and their respective holders are protected by copyright laws. receiving equipment. The FCC can require you to stop using the handset if Duplication of copyrighted materials is permitted only for individual or such interference cannot be eliminated.

### [Page 22: Fcc Rf Exposure Information](#)

FCC RF Exposure Information [fcc.gov/oet/fccid](http://fcc.gov/oet/fccid) after searching on SP2-CC4-J03 for 810T and SP2-CC4-J04 for 811T. Your handset is a radio transmitter and receiver. It is designed and Additional information on Specific Absorption Rates (SAR) can be found on manufactured not to exceed the emission limits for exposure to radio the Cellular Telecommunications &...

### [Page 23: Federal Communication Commission Statement](#)

can be found on the websites of the World Health Organization (<http://www.who.int/emf>). Any changes or modifications not expressly approved by the party responsible for product compliance could void the user's authority to \* The tests are carried out in accordance with international guidelines for testing. \*\* Please see the <FCC RF Exposure Information>...

[Page 24](#) 23-24 810T\_811T\_0608.indb 23-24 810T\_811T\_0608.indb 23-24 06.9.4 4:14:25 PM 06.9.4 4:14:25 PM...

[Page 25](#) 23-25 810T\_811T\_0608.indb 23-25 810T\_811T\_0608.indb 23-25 06.9.4 4:14:26 PM 06.9.4 4:14:26 PM...

[Page 26](#) PIN Lock & PUK Codes USIM Card PIN lock is set when an incorrect PIN1 or PIN2 is entered three times consecutively. PUK (Personal Unblocking Key) codes are required to cancel



The USIM card is an IC card that stores customer information such as your PIN1 lock/PIN2 lock.

## [Page 27: Handset Parts & Functions](#)

Handset Parts & Functions 810T 811T 23-27 810T\_811T\_0608.indb 23-27 810T\_811T\_0608.indb 23-27 06.9.4 4:14:27 PM 06.9.4 4:14:27 PM...

[Page 28](#) 14. Shortcut Key S : Access the Shortcut menu. 1. Earpiece 15. End/Power Key O : Power handset on/off, end calls/operations and 2. Display 3. Navigation Key E : Move cursor up, down, left or right, access return to standby. 16.

[Page 29](#) 30. Earphone Microphone Jack: Connect the stereo earphone- microphone with audio remote control. 31. Music Player Menu Key W \*: Access the Music Player menu. Left Music Player Key U \*: Used for selecting a Music Player menu item or rewinding music files, etc. Right Music Player Key V \*: Used for selecting a Music Player menu item or forwarding music fi...

## [Page 30: Display Indicators](#)

Display Indicators Displaying Picture File with Location Information Packet Transmission Ready Packet Network Range ①②③④⑤⑥⑦⑧⑨⑩ □ ④ 3G Network Connection/Roaming GSM Network Connection/Roaming □□□□ GPRS Network Connection/Roaming Service Area of Operator Other Than SoftBank New S! Cast ⑤ □□□□□□□□ Reception of Rights Object Indicates the reception of a content key during operation.

## [Page 31: External Display Indicators](#)

Streaming External Display Indicators ⑤ Manner Mode (Silent) Manner Mode (Alarm) ① ② ③ ④ ⑤ Original Manner Mode □□□□ ⑥ Battery Level ⑩ Sufficiently Charged Very Low Charge Immediately ① Signal Strength Charging Strong Weak □...

## [Page 32: Charging The Battery Pack](#)

⑤ Battery Level Charging the Battery Pack Sufficiently Charged Very Low Charge Immediately Charging ⑥ Time Codes Your security code, center access code and call barring service code are required for some functions and settings. Security Code Your security code is "9999"...

## [Page 33: Basic Operations](#)

Language Setting Basic Operations In standby mode, press @ Turning Handset Power On The Main menu appears. Press and hold O Select → → Language □□ □□□□ Select a language and press @ Turning Handset Power Off □□□□ : Automatically selects the language set for USIM card. Press and hold O □□□...

[Page 34](#) Redialing Viewing Call Log In standby mode, press D In standby mode, press D Dialed appears. Select a phone number and press N Press F Press O to end the call Received appears. Answering a Call C from standby. Press F once to switch 7 To display Received, press Press N to answer a call...

[Page 35](#) Viewing the Call Cost Select Settings → Call Settings → Call Services → In standby mode, press @ Intl. Calls → Operator → Auto/Manual Select Automatic or Manual Select Settings → Call Settings → Call Time&Cost Automatic: Selects an available network automatically. Select Last Call or All Calls →...

## [Page 36: Answer Phone](#)

Answer Phone This feature can record a caller's message when you are unable to answer a In T9 mode: voice call. S to switch between initial caps, lowercase, numeric and □ Press uppercase, input modes. Setting Answer Phone In T9 mode or Multi Tap mode: When receiving a call, press and hold L S to switch between T9 mode and Multi Tap mode.

## [Page 37: Creating A New Entry](#)

Dialling from Phone Book Entries 1 and use G to select a symbol. To enter a symbol, press In standby mode, press B Select an entry and press @ Entering Characters in Multi Tap Mode Select a phone number and press N In Multi Tap mode, each press of a key cycles through the letters and symbols assigned to the key.

## [Page 38: Rejecting A Call](#)

Placing a Call on Hold Video Call Press O when a video call is received A video call allows two parties with video call compatible handsets to see Voice guidance in Japanese notifies the caller that you are unable to see each other's image during the call.

## [Page 39: Recording A Video](#)

Recording a Video Press and hold P Video: Record videos up to 20 minutes long and save them to your When you obtain the right to speak, " ■ " appears. handset or a memory card. You can speak while P is pressed. Video Mail: Record videos for sending as S! Mail attachments.

## [Page 40: Media Player](#)

Playing a Playlist Media Player In standby mode, press H Play video/melody files, stream files and create your own playlists. Select Playlist Playing a Media File Select a playlist and press J (Play) In standby mode, press @ Select Media Player →...

## [Page 41: Memory Card Configuration](#)

7 If the memory card or battery pack is removed while reading/writing PRIVATE data or formatting the memory card, the data may be lost or the memory TOSHIBA card may be damaged. Stores Dictionary files copied from the supplied 7 Processing may take a while for some types of fi...

## [Page 42: Files Storable In Data Folder](#)

Files Storable in Data Folder Data Folder Folder File Format (Extension) Save pictures, videos and various downloaded files to Data Folder. JPEG (.JPEG, .JPG, .JPE) 7 Pictures, My Pictograms, Ring Song Tone, S! Appli, Music, Videos, Pictures\* GIF (.GIF) Books and Templates folders contain a link to a download site in Yahoo! PNG (.PNG)\* Keitai.

## [Page 43: Using Infrared](#)

\*1: Folders can be created in each folder. Connectivity \*2: Only Data Folder on the memory card can be viewed. Files that do not comply with the DCF standard cannot be displayed. Using Infrared \*3: Downloaded frames and stamps are saved in PNG (.PNG) format. Use the Infrared feature to transfer fi...

## [Page 44: Using Usb](#)

Receiving Data Safety NAVI When connection is requested by a sending device, Sending Departure/Arrival Notification select YES and press @ When leaving or arriving at a specified area during a predefined time To reject the reception of files, select NO. period, a notifi...

## [Page 45: Optional Services](#)

Optional Services Messaging Call Divert S! Mail Use this service to forward calls to a preset phone number. Exchange long text messages with S! Mail compatible SoftBank handsets and email compatible devices. Send images, melodies and other files as Voicemail attachments.

## [Page 46: Receiving Messages](#)

Press @ twice K (Menu) after Step 4 to perform the following. (Available items Enter an account name and press @ Press will vary depending on the message type.) Select OK and press @ Menu Item Description Note View Displays the message properties. If the message □□□□...

## [Page 47: Sending Messages](#)

Retrieving S! Mail Message Press K (Menu) When an S! Mail exceeds 285 characters (285 bytes), the initial portion of Select Divert and press @ the message is delivered as a notification. To retrieve the complete message, perform the following steps: For details on creating messages, see below.

## [Page 48: Messaging Settings](#)

Messaging Settings 7 Retrieve Mode Receiving 7 Auto-extract In standby mode, press J 7 Reject Message Select Settings and press @ 7 Auto Play 3D Pict. Setting 7 Colors Select an item and press @ You can configure the following settings. Internet Connects to the network to change your mail Mail□Address...

## [Page 49: Hot Status](#)

Using the PC Browser Communications In standby mode, press @ S! Town Select Yahoo! Keitai → PC Browser → Homepage S! Town is a 3D virtual space. Enjoy the S! Town virtual space e.g. when chatting or shopping. Select OK or Ask Once Only and press @ In standby mode, press @ S! Appli Select Communications →...

## [Page 50: S! Gps Navi](#)

S! GPS Navi Subscribing/Canceling Subscription In standby mode, press @ Use S! GPS Navi to access navigation functions. Send and receive location information to and from compatible SoftBank handsets. Select Entertainment and press @ NAVI Select CAST and press @ Access the preset navigation application.

## [Page 51: Downloading Content Manually](#)

Checking Content from Information Prompt Checking History Past updates are saved to History. Information Prompt appears In standby mode, press @ Select New CAST and press @ Select Entertainment and press @ Downloading Content Manually Select CAST and press @ When an update cannot be received because your handset is turned off or Indicator Description: the signal is weak, manually download the update.

## [Page 52: Main Specifications](#)

Main Specifications 810T 811T 3G/UMTS 2100 1920 - 2170 MHz GSM 900 880 - 960 MHz Frequency Range DCS 1800 1710 - 1880 MHz PCS 1900 1850 - 1990 MHz Within 3G/UMTS area Approx. 190 min. Continuous Talk Video call Approx.

[Page 53](#) 7 The continuous standby time refers to the average length of time a AC Charger signal can be received normally when the handset is closed, the handset Input Voltage : 100 to 240 V AC is in a stationary state, a new fully charged battery pack is attached and : 50/60 Hz there are no calls made/received or operations performed.

## [Page 54: Customer Service](#)

Customer Service If you have any questions about a SoftBank handset or service, please call General Information. For service or handset repairs, please call Customer Assistance. SoftBank Customer Centers SoftBank International Call Center From a SoftBank handset, dial toll free at 157 for General From outside Japan, dial Information or 113 for Customer Assistance.

This manual is also suitable for:

[Softbank 811t](#)