

TOSHIBA

Toshiba TW-G520L User Manual

1
2
3
4
5
6

--

•

[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links



Washer /Dryer Display Manual

Information

Display shows
remaining time and
To Clean Filter/Capacity over/Soft
Keep/Cooling

Error sign

Childlock/Clothing deflection/Water at Dram
EX.)

takes 2 hours :
40min.

WASH
RINCE DRAIN



Change function

Wash→Rinse→Dry

* if necessary

If you have your own specific
washing plan, push the
button to choose each time

Change Water Level

High

Middle

Low

Change function to

Dry

Regular

Low temperature

Little Time Dry

TIMER

DRY

*if necessary

Timer

You can choose the finish time
from after 2-24 Hour.

Don't need to use this button.

(Use bathtub water)

Start/Pause

Dial (to adjust
function)

WASH

WASH/DRY

OF

ON

DRY

Adjust Dial

Choose the Wash Function

①Regular ②Light Dirt

②Own Way

④Powerful ⑤Very Dirt

⑥Soft

⑦Small Qty ⑧Sanitization dehydration Dry Wash ⑨Delicate Dry

⑩Blanket ⑪Weak Dry


⑫Tub Wash

ON/OFF

Door Lock light

light on : lock

light off : un-lock

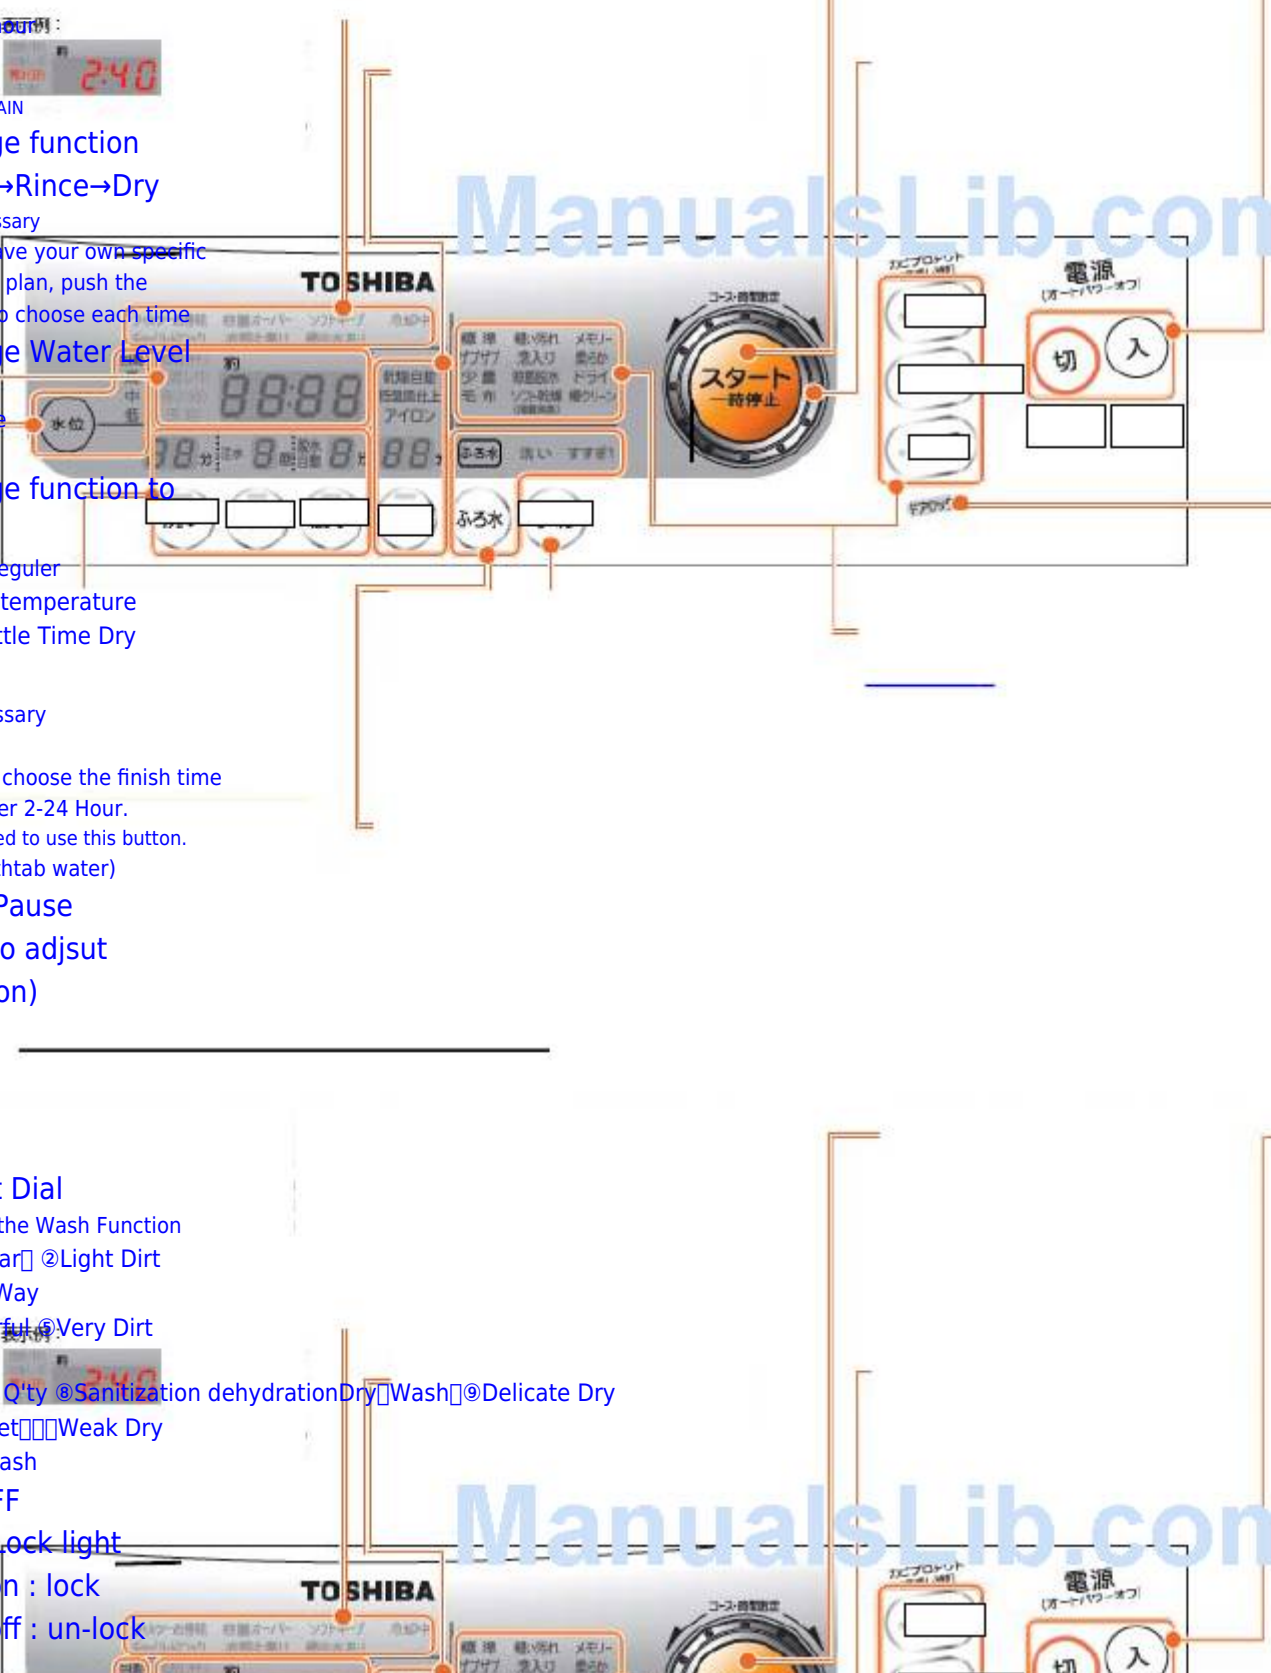

* Usually choose ①Regular

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba TW-G520L

[Washer/Dryer Toshiba TWD-BJ120M4M Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BK90S2 Series Owner's Manual](#)

(29 pages)

[Washer/Dryer Toshiba TWD-BM105GF4 Series Owner's Manual](#)

(36 pages)

[Washer/Dryer Toshiba TWD-BK90S2H Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BH90W4H Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BL160D4 Series Owner's Manual](#)

Dual drum washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWM Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU105MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BN90GF4H Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BH90W4PH Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWT Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BH90W4M Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-T27BZP115MW Series Owner's Manual](#)

Front loading washer dryer (36 pages)

Summary of Contents for Toshiba TW-G520L

[Page 1](#) Washer /Dryer Display Manual Information Display shows Start/Pause ON/OFF remaining time and To Clean Filter/Capacity over/Soft Keep/Cooling Error sign Childlock/Clothing deflection/Water at Dram Change function to EX.) Dial (to adjsut Door Lock light takes 2hour function) light on : lock 40min.

[Page 2](#) ERROR Sign on LED Display Error Detail Solution Restart Turn the power off and take out some clothes. Over Capathty Too Much Clothes Usually happens when it move to Dryer. Turn the faucet on? Check the water tube? C 52 Water Feed Error Push Start Building water failure ?

[Page 3](#) Maintenance Lint Filter Maintenance after ③Remove the lint which ①I take off a filter and I attract collected in the internal filter upper both sides of the cover toward you and open the filter ②Remove the lint which collected in the filter gently and dry it well ④Set a filter in the original place until a sound click...

[Page 4](#) How to operate Wash & Dry Just Wash Just Dry 1. Press "Dry" 1. Press "Wash" 1. Press "Wash/Dry" 2. Adjust Dial to select function 2. Adjust Dial to select function 2. Adjust Dial to select function Normally stay "□□=Standard" Normally stay "□□=Standard"...

[Page 6](#) Soap Dispenser Liquid Soap Powder Soap and liquid and Powder bleach bleach Softner...