



Sanyo W32SA Basic Manual

Up to 700 phone numbers


1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112

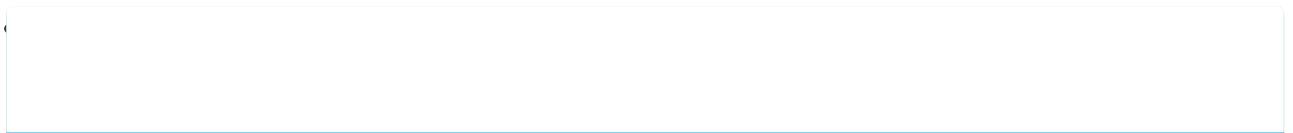

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

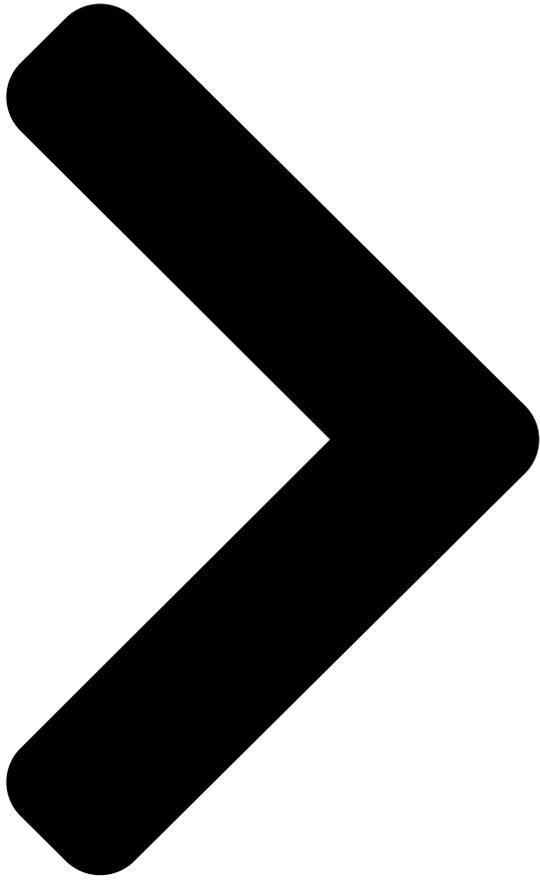

Basic Manual

W32SA

by SANYO

Before Use

Phone Call

Address Book

Mail

Camera

EZweb

TM

EZ Chaku-Uta-Full

EZ Channel

EZnavi

EZ Television

EZ · FM

Inputting Text

Troubleshooting/

Remote Auto Lock

Other Features/

Index

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo W32SA

[Telephone Sanyo KDDI au WIN W31SA Basic Manual](#)

(112 pages)

[Telephone Sanyo TEL-2095 User Manual](#)

Caller id phone (10 pages)

[Telephone Sanyo SCP-4000 User Manual](#)

Dual-band sprint pcs phone (96 pages)

[Telephone Sanyo SCP-7200 Operating Manual](#)

Dual band (84 pages)

[Telephone Sanyo Sprint SCP-4000 User Manual](#)

Pcs phone (69 pages)

[Telephone Sanyo Sprint SCP-8100 User Manual](#)

Vision-enabled pcs phone (113 pages)

[Telephone Sanyo Sprint VM4500 User Manual](#)

Pcs vision video phone (244 pages)

[Telephone Sanyo Sprint SCP-5400 User Manual](#)

Pcs vision ready link phone (205 pages)

Summary of Contents for Sanyo W32SA

[Page 1](#) Basic Manual Before Use Phone Call Address Book Mail Camera EZweb EZ Chaku-Uta-Full EZ Channel EZnavi EZ Television EZ · FM Inputting Text W32SA by SANYO Troubleshooting/Remote Auto Lock Other Features/ Index...

[Page 2](#) Preface Thank you very much for purchasing the W32SA. Before using your W32SA, be sure to read the W32SA "Basic Manual (this PDF manual)" to ensure correct use of your W32SA. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe place so you can retrieve them whenever you need them.

[Page 3: Manners For Using Cellphones](#)

Manners for Using Cellphones A cellphone always generates weak electric waves while its power is ON. Be considerate of others and the environment around you, and have fun using your cellphone safely. In some places, the use of Consider where to use your cellphones is prohibited.

[Page 4: What You Can Do With The W32Sa](#)

Basics of the Cellphone What You Can Do with the W32SA Mail EZweb EZ Channel You can send mails You can automatically You can access the to other cellphone or receive information by Internet to check the personal computers. simply registering news or download []...

[Page 5: Useful Manner Mode And Answer Phone](#)

Useful Manner Mode and Answer Phone Manner Mode Answer Phone With Manner Mode, you can set the The caller can leave a message ringer not to sound so as not to when you cannot answer the phone. Press C for more than one second bother the people around you.

[Page 6: Not Using Your W32Sa While Driving](#)

Not Using Your W32SA While Driving Using your hands to make phone calls on a cellphone and/or watching the screen to view E-mails, etc., while driving shall be subject to penalties. (The implementation of the revised Road Traffic Law on November 1, 2004)

[Page 7: Beware Of Junk Mail And One-Ring Calls](#)

Making Side Key Operation Invalid Making Side Key Operation Invalid To carry the W32SA closed in your bag, press c (u) for more than one second while the standby screen is displayed to prevent side key misoperation. To Release from the Locked Status Open the W32SA and press c (u) for more than one second while the standby screen is displayed.

[Page 8: Disaster Bulletin Board Service](#)

Disaster Bulletin Board Service About Disaster When a big scale disaster occurs, you can register your safety information through EZweb. The Bulletin Board registered safety information can be referred from Service anywhere in Japan through EZweb or Internet. When a big scale disaster occurs, from au cellphone, you ◆...

[Page 9](#) <Safety information registration display> □□□□□□ <Top display of the ~ □□~ Disaster Bulletin Board> □□□□ □□□□□□ □□□□□□□□ Register □□□□□□□ □□□□ □□□□□□□□ □□□□□□ ~□□□□□□~ □□□□□□□□□□ □□□□ □□□□□□ □□□□ □□ □□□□□□ □□□□ <Safety information □□□□□□□□□□ reference display> □□ □□ □□□□□□ □□□□□□□□ Refer *□□□□□□□□□□...

[Page 10: Table Of Contents](#)

Contents Manners for Using Cellphones 1 Basic of the What You Can Do with the W32SA2 Useful Manner Mode and Answer Phone3 Cellphone Check the Power, Reception and Battery3 Not Using Your W32SA While Driving 4 Beware of Junk Mail and One-Ring Calls!

[Page 11](#) Entering E-mail Addresses100 Entering Pictographs 101 Inputting Phrases102 Troubleshooting Setting the Remote Auto Lock Activation Conditions ..104 In Case You Lose Activating Auto Lock on the W32SA through Remote Operation ... 105 Your W32SA Other Features Index...

[Page 12: Before Use](#)

Before Use Confirming the Package Contents The W32SA phone and accessories are included in the package. W32SA Phone Battery Pack SANYO AC Adapter 04 (Assembled inside of the phone) SANYO Flat-type Desktop Holder Warranty (Japanese) Stereo Earphones 03 Precautions in Use <Conversion...

[Page 13: Names Of Parts](#)

Names of Parts Receiver (Earpiece) Main Display Speakers Flexible Keys Optical Sensor Cursor Key Center Key Mail Key EZ Key Clear/Memo Key Start Key Power/End Key Dial Keys Microphone Built-in Camera (Lens) Flash/Pocket Light Built-in Antenna Antenna Strap Hole (EZ Television/ Flat-type EZ ...

[Page 14: Charging The Battery Pack](#)

Charging the Battery Pack The battery pack is not fully charged at the time of purchase. When you use the W32SA for the first time, charge the battery pack. How to Charge the Battery Pack Connect the SANYO AC Adapter 04 to the Desktop Holder.

[Page 15: Inserting The Minisd™ Memory Card \(Commercially Available\)](#)

- If you flick the miniSD™ Memory Card inward with your fingernail, the miniSD™ Memory Card may pop out suddenly. Be careful not to direct it toward someone's face.
- The miniSD™ Memory Card is not included with W32SA. Please purchase this item separately.

[Page 16: Turning The Power On/Off](#)

" is displayed, you may not be able to make or receive calls. Turning the Power OFF Press F for more than one second. About the Default Settings When purchased, the W32SA is configured with the following default settings. Lock No. 1234 Font Size...

[Page 17: Switching The Screen Display To English](#)

Switching the Screen Display to English Menus, messages and other screen displays can be switched between Japanese and English. Press c (1) while the standby screen is displayed. The Main Menu (Japanese) appears. Use a to select "□□□□ □□□□ □□□□□□□□ (Basic Settings)"...

[Page 18](#) Use j to select “Set Language” and press c (4). The Set Language settings screen appears. Use j to select “English” and press c (z). The screen display is set to English.

[Page 19: Basic Usage Of The Phone](#)

Basic Usage of the Phone Basic Operation Various functions and settings of the W32SA can be operated by selecting an item with the cursor keys (a) and pressing the center key (c). In this Basic Manual, the usage of the cursor and center keys is indicated as follows.

[Page 20: Using The Main Menu](#)

Press F to return to the standby screen. How to Use the Launcher Menu The W32SA enables you to use each service menu from the launcher menu by pressing u while the standby screen is displayed. You can select and launch functions from the menu using a.

[Page 21: Icons](#)

Icons Number Displayed Contents When the miniSD™ Memory Card is inserted
Communicating/Running the EZ · FM () /Running the EZ Television ()
Running EZ apps (BREW)
Using EZweb Unread mail exists Side Key Operation Invalid EZ Channel registered program
(Auto Update Check ON) While the Manner Mode is ON While the Answer Phone is ON...

[Page 22: Setting The E-Mail And Ezweb Default Settings](#)

Setting the E-mail and EZweb Default Settings You must subscribe to the EZweb service to use the E-mail and EZweb services. Please contact the au shop or the au Customer Service Center if you did not subscribe for the service at the time of purchase. Perform initialization before using the E-mail and EZweb services.

[Page 23: Confirming Your Phone Number And E-Mail Address](#)

Confirming Your Phone Number and E-mail Address Press c (q) while the standby screen is displayed. The Main Menu appears. Use a to select “Basic Settings” and press c (x). The Basic Settings screen appears.

[Page 24: Changing Your E-Mail Address](#)

Changing Your E-mail Address E-mail address Example: $\Delta\Delta\Delta$ @ezweb.ne.jp Changeable part Domain Press K while the standby screen is displayed. The E-Mail Menu appears. Use j to select “E-Mail Setup” and press c (x). Enter an E-mail address and press c (3).

[Page 25](#) After checking the cautions, use j to select “Agree” and press c (x). Use j to select the entry area and press c (r). Enter an E-mail address and press c (3).

[Page 26: Phone Call](#)

Phone Call Making Calls Use the 0 - 9 keys to enter the receiver’s phone number, then press N. Press F to hang up. Making a call to a regular telephone, enter the phone number starting with the area code. How to Make a Call Add “184”...

[Page 27: Calling Back \(Outgoing Calls/Incoming Calls\)](#)

1 ring so as to be left in the Incoming Calls. Receivers who call back will access programs for which they must pay. Icon as a Countermeasure for One-Ring Calls With the W32SA, One-Ring Calls (ringer time is 3 seconds or less) O . C ...

[Page 28: Changing Ringer Type](#)

Changing Ringer Type Press c (q) while the standby screen is displayed. The Main Menu appears. Use a to select “Basic Settings” and press c (x). The Basic Settings screen appears. Use j to select “Sound/” ...

Page 29 Use j to select “ ” and press c (x). The Call Ringer selection screen appears. “Original” Selects the ringer that was registered at the time of purchase. “Data Folder” Selects the ringer that was downloaded via EZweb. Connects to EZweb so that you can download “Search from EZweb”...

Page 30: Adjusting Ringer Volume

Adjusting Ringer Volume Perform steps 1 to 5 on page 26 to display the Call Notice setting screen. Use j to select “ ” and press c (x). The Ringer Volume setting screen appears. Use j to adjust volume...

Page 31: Adjusting The Other Party's Voice Volume

Press d to decrease the volume. The voice volume can be adjusted in 9 levels during the call. Setting the Manner Mode The W32SA notifies you of the incoming call by vibrating. Press x for more than one second. “ ” and “...”

Page 32: Using Answer Phone

Using Answer Phone Press C for more than one second while the standby screen is displayed. Answer Phone is turned ON and “ ” appears on the standby screen. To Turn the Answer Phone OFF Press C for more than one second while the standby screen is displayed. Information •...

Page 33: Playing Back Messages On Answer Phone

Playing Back Messages on Answer Phone When a message is recorded on Answer Phone: A message appears on the standby screen. Use s to select “ ” and press c (;); The Play Ans Ph/Ph Memo selection screen appears.

Page 34: Address Book

Address Book Registering Data in the Address Book Press G (y) for more than one second while the standby screen is displayed. The Edit Address Book screen appears. Use j to select “ ”...

Page 35 Enter a phone number and press c (3). The No. Type selection screen appears. Enter the area code when registering a regular telephone number. Use j to select a type of...

Page 36 Use j to select a type of E-mail address and press c (x). The Edit Address Book screen returns. Press G (w). The numbers of entries remaining appear. Information • Up to 700 phone numbers and E-mail addresses can be registered. •...

Page 37: Making A Call From The Address Book

Making a Call from the Address Book Press I (y) while the standby screen is displayed. The address book list screen appears. Use s to switch between...

Page 38: Editing Address Book Data

Editing Address Book Data Example: To change a phone number Press G (y) while the standby screen is displayed. The address book list screen appears. Use s to switch between...

Page 39 Use j to select “ ” (Phone No.) and press c (x). Edit data and press c (3). Pressing C erases the selected character. Pressing C for more than one second erases all characters. Use j to select a type of...

Page 40: Registering Data From Outgoing/Incoming Calls

Registering Data from Outgoing/Incoming Calls Press r while the standby screen is displayed. The Outgoing Calls

appears. If I is pressed while the standby screen is displayed, the Incoming Calls appears. Outgoing Calls Use j to select the...

Page 41: Mail

Mail You must subscribe to the EZweb service to use the E-mail feature. Please contact the au shop or the au Customer Service Center if you did not subscribe for the service at the time of purchase. Be sure to perform initialization before using the E-mail and EZweb services. If you have not performed initialization yet, see page 20.

Page 42: Creating And Sending E-Mail

Creating and Sending E-mail Press K while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Create New" and press c (x). The Create Mail screen appears. Icons : "Address"...

Page 43 Search the address book with a and press c (v). The address book detail screen appears. Use j to select a desired E-mail address and press c (x). The Create Mail screen returns.

Page 44 Use j to select " " (Body) and press c (x). The Body input screen appears. Enter the body and press c (3). The Create Mail screen returns. Press G (u).

Page 45: Reading Received E-Mail

Reading Received E-mail When You Receive E-mail: A message appears on the standby screen. Use s to select " " and press c (;). The Inbox appears. Use j to select the folder...

Page 46 Viewing Received Photos or Movies Example: To view a photo attached to a received E-mail Perform steps 1 to 3 on page 43 to display the Attached data received mail. Press G (u) to view the photo or movie.

Page 47: Reading E-Mail From The Inbox

Reading E-mail from the Inbox Press K while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Inbox" and press c (x). The Inbox appears.

Page 48: Replying To Received E-Mail

Replying to Received E-mail Press K while the standby screen is displayed. The E-Mail Menu appears. Use j to select "Inbox" and press c (x). The Inbox appears.

Page 49 Use j to select " " (Body) and press c (x). The Body input screen appears. Enter the body and press c (3). The Create Mail screen returns.

Page 50: Blocking Junk Mail

Blocking Junk Mail Junk mail can be rejected with the mail filter feature. Press K while the standby screen is displayed. Use j to select "E-Mail Setup" and press c (x). Use j to select

“Other” and press c (x). Use j to select “...

[Page 51: C-Mail](#)

C-mail C-mail is a service for sending/receiving mail to/from “C-mail” compatible au cellphones. Phone numbers can be used for sending/receiving C-mail. Example : 090-0000-XXXX Via au C-mail can be sent to au cellphones. All you have to do is to enter a message and select the receiver ‘...

[Page 52: Creating And Sending C-Mail](#)

Creating and Sending C-mail Press K for more than 1-second while the standby screen is displayed. The C-Mail Menu appears. Use j to select “Create New” and press c (x). The Body input screen appears. Enter the body and press ...

[Page 53](#) Search the address book with a and press c (v). The address book detail screen appears. Use j to select a desired phone number, and press c (x). ...

[Page 54: Reading Received C-Mail](#)

Reading Received C-mail When You Receive C-mail: A message appears on the standby screen. Use s to select “ ” and press c (;). The Inbox appears. The received C-mail is usually stored in the “ ”...

[Page 55: Reading C-Mail From The Inbox](#)

Reading C-mail from the Inbox Press K for more than 1-second while the standby screen is displayed. The C-Mail Menu appears. Use j to select “Inbox” and press c (x). ...

[Page 56: What You Can Do With The Camera](#)

Open your feet to the breadth of your shoulders and maintain your back and sides firm. To Prevent from Jiggling 1. Do not move the W32SA after pressing the shutter key until you hear the shutter sound. 2. It is possible to shoot a photo using the Self-Timer. By using the Self-Timer, you do not need to press the shutter key at the moment you want to shoot the photo, so you can prevent from jiggling.

[Page 57](#) Easy Image-Shooting Thanks to the Auto Focus The camera incorporates an auto focus mechanism. When you press the shutter key, the image is automatically focused before the photo is shot. Key Operation in Image-Shooting When shooting photos/movies, the icons along the bottom of the display correspond to the following keys.

[Page 58](#) Selecting the Photo Size/Recording Mode Before shooting a photo or recording a movie, select an appropriate Photo Size or Recording Mode. (See page 60.) ■Photo Mobile Size (120 x 160 dots) VGA Size (640 x 480 dots) Select this size to shoot a photo that Select this size if you wish to save can be attached to E-mails and sent memory with images used on personal...

[Page 59](#) What You Can Do with the Camera Use Shot Photos on the W32SA It is possible to display the photos you shoot on the standby screen, display them when a call comes in and register them in the address book.

[Page 60: Shooting Photos](#)

Camera Shooting Photos Press T for more than one second while the standby screen is displayed. The view seen through the lens appears on the main display. Pressing \$ toggles between the light and flash. Aim at the object and press c (t).

[Page 61: Recording Movies](#)

Recording Movies Press T for more than one second while the standby screen is displayed and then press G (w). 00:00:15 The view seen through the lens appears on the main display.

Pressing \$ turns the light ON/OFF. Aim at the object and press c (j).

Page 62 Title of a Photo You Shoot Photo Size* Title of a Photo Where to Save Mobile/Wallpaper Size shooting date_shooting time~serial "Photo Folder" of the W32SA number VGA/SXGA Size SA34 + serial number "DSC Folder" on the miniSD™ Memory Card* Example : For the first photo shot at 19:30 on December 24 2005 Mobile/Wallpaper Size: 051224_1930~01...

Page 63: Viewing Recorded Photos Or Movies

Viewing Recorded Photos or Movies Press T for more than one second while the standby screen is displayed and then press G (T). To view a movie, start the camera, press G (w), then press G (T).

Page 64: Attaching A Photo Or A Movie To An E-Mail Message

Attaching a Photo or a Movie to an E-mail Message Perform steps 1 and 2 on page 58 or 59 to shoot a photo or a movie. Press G (i) and use j to select "YES" and then press c (3).

Page 65: Ezweb

Be sure to perform initialization before using the E-mail and EZweb services. If you have not performed initialization yet, see page 20. EZweb EZweb is a data service for enjoying the Internet via your W32SA. Chaku-Uta and the latest news can be obtained from information sites.

Page 66: Displaying The Ez Top Menu

Displaying the EZ Top Menu Press O while the standby screen is displayed. Use j to select "Top Menu" and press c (x). The EZ Top Menu appears. It may take some time to display the screen. (Search by category) Searches for a site by category.

Page 67: Bookmarking Frequently-Accessed Sites

Bookmarking Frequently-Accessed Sites Display the site to bookmark and press G (d). The Browser Menu appears. Use j to select "New bookmark" and press c (x).

Page 68: Accessing Bookmarked Sites

Accessing Bookmarked Sites Press O while the standby screen is displayed. The EZ Menu appears. Use j to select "Favorite Site" and press c (x). The Favorite Site screen appears. Use j to select a site and press c (o).

Page 69: Viewing Charges

Viewing Charges Approximate charges of calls and transmission can be viewed on EZweb. Press c (q) while the standby screen is displayed and press 1 twice. The Inquire Toll selection screen appears. Use j to select "YES".

Page 70: Downloading Chaku-Uta

Downloading Chaku-Uta Example: To download the latest Chaku-Uta and set it for the ringer. Press O while the standby screen is displayed. The EZ Menu appears. Use j to select "Top Menu" and press c (x).

Page 71 Use j to select and download a Chaku-Uta Download the Chaku-Uta prompted by on-screen instructions. When the additional information cost is charged to use the site, you must input your EZ password or Premium EZ password. EZ password : 4-digit number to be set when you subscribe to the paid contents for the first time.

Page 72: Ez Chaku-Uta-Full

Ezweb subscription required EZ Chaku-Uta-Full™ EZ Chaku-Uta-Full is a service that allows you to download the whole song with a CD jacket, lyric, etc. You can play back the downloaded

Chaku-Uta-Full with Music Player and use a part of the song as Chaku-Uta ®...

[Page 73](#) EZ Music!" from the Chaku-uta-Full Menu and press c(x). Your W32SA connects to the EZ Music!. Follow the on-screen instructions after connection. When the additional information cost is charged to use the site, you must input your Premium EZ password. The Premium EZ password is a 4-8 digit number set when you apply to "...

[Page 74: Playing Back Chaku-Uta-Full](#)

Playing Back Chaku-Uta-Full Press O while the standby screen is displayed. Use j to select "EZ Service Menu" and press c(x). The EZ Service Menu appears. Use j to select "Chaku-Uta-Full"...

[Page 75](#) Use j to select Chaku-Uta-Full and press c(x). 00:00:00 Information Part of Chaku-Uta-Full™ can be converted into Chaku-Uta ® and used as a ringer.

[Page 76: What You Can Do With Ez Channel](#)

What You Can Do with EZ Channel With EZ Channels, the latest contents are distributed and downloaded to the W32SA automatically just by registering the program you want to subscribe to in the W32SA. Displaying the EZchannel Menu

[Page 77](#) "Program Guide" to Search for the Desired Programs Search for programs among the program introductions and recommendations provided on EZ Channel. Select a program. "Regd.Program List" to View Downloaded Programs You can play back downloaded programs. Downloaded programs can be viewed even in areas where electric waves cannot be picked up.

[Page 78: Enjoying Ez Channel](#)

- The layout and contents of the screens shown here are only an example and are subject to change.
- If you change your cellphone with which you have accessed EZ Channel to the W32SA, access "Program Guide" and select "(For Customers Who Have Changed the Cellphone)".

[Page 79](#) program starts being downloaded automatically when the broadcasting start time arrives. Set the W32SA phone on the charger with the power ON in a location where signals can be picked up. Information • Up to 3 programs can be registered.

[Page 80: Playing Back Programs](#)

Playing Back Programs Programs can be played back by simply selecting one from the Regd. Program List of the EZchannel Menu. Perform steps 1 to 3 on pages 76 and 77 to display the EZchannel Menu. Use j to select "Regd. Program List"...

[Page 81](#) Key Operation in Program Playback I Decreases the volume. G Increases the volume. Pauses the program. (While the program is paused, " (Resume)", " (Play from Start)" and " (End)" can be selected from the screen. Select "...

[Page 82: Saving Programs](#)

Saving Programs Downloaded programs are displayed on the Regd.Program List of the EZchannel Menu. Updated programs will be overwritten. You should move your favorite programs to the Multi Folder or Book Folder. Perform steps 1 to 3 on pages 76 and 77 to display the EZchannel Menu.

[Page 83](#) Use j to select "YES" and press c (3). Program data is saved in the "Multi Folder", and e-book data is saved in the "Book Folder". Some programs cannot be saved because of copyright protection. Information Data in the Multi Folder and Book Folder can be played back as follows. Example: To play back data in the Multi Folder Use j to select the "Multi Folder"...

[Page 84: What You Can Do With Eznavi](#)

<Launcher Menu> "Position Search" to Check Where Your Kids Are You can locate an au cellphone that supports Position Search from your W32SA. The "(Position Search Mail)" (free service) and "(Position Search Anytime)" <EZnavi screen> (pay

service) services are available.

Page 85 [□□△△△△△△△△ “ ”](#) in real-time by continuous positioning. Your W32SA can display the map of your When you are to meet with someone, it present location in real-time, by simply is possible to inform the other party of selecting “View My Map”.

Page 86: How To Use Eznaviwalk

How to Use Eznaviwalk The Eznaviwalk service can be of great help for an outing or if you get lost on the way to your destination. Registering Your Home as the Checking Ways to Place Where You Are Return Home Info Information •...

Page 87 Use j to select “EZnaviwalk” and press c (x). The Eznaviwalk screen appears. Use j to select “ □□ (Navigation)” and press c. Use j to select “My □□□ □ □□□□□□ □□□□□□ (MySpot)” and press c . □□ □□ □□ □□...

Page 88: Checking Ways To Return Home

Checking Ways to Return Home This service can help you easily navigate from Where You Are to your home, using GPS information registered in MySpot with “Home” as the destination. Press O while the standby □□ □□□□□□ □□□□ □□□□□□□□□□ screen is displayed. □□□□□-□□ □-□□□□...

Page 89 Use j to select “ □□□□ □ (Return Home)” and press Use j to select “□□ (YES)” and then press c. Search result screen appears. Use j to select “ □□□□□□□ (Start Navigation)” and press c. Select a guide indication, followed by “□□ (YES)” and then press c .

Page 90: Ez Television

You can watch and record TV programs on the W32SA. • With EZ Television, you can watch ground analog broadcasts in Japan. • The EZ Television service expires upon termination of the W32SA subscription. What You Can Do with EZ Television...

Page 91 ” during use of the EZ Television, the EZ Television will end automatically. • The continuous audible time is about 1 hour in the W32SA. After 1 hour of starting the EZ Television, the EZ Television ends automatically. • The layout and contents of the screens shown here are only an example and are...

Page 92: Watching Ez Television

Watching EZ Television When using EZ Television for the first time, take the following steps to configure your W32SA. Press c (q) while the standby screen is displayed. The Main Menu appears. Press a to select “EZ Television” and press c (x).

Page 93: Switching Between The Earphones And Speakers

Press j to select “ □□ □ (Auto)” and press c (4). Select “□□□□□(Manual)” to set the area manually. Press j to select “OK” and press c (4) and then press c (3). Press j to select “OK” and press c. The reception area and channels are set automatically.

Page 94: Recording The Tv Program

Recording the TV Program While TV program is displayed, press I (V). Menu screen appears. □KDDI powered by NANO Media Inc. Press a to select “ □□ (Recording)” and press c (4). Press c (/). The recording starts. You can select the recording size. Press I (.) and then press c (6) to save the displayed image on the screen as a still image.

Page 95: Ending The Ez Television

Information • Movies are stored in the “EZmovie” folder and still images are stored in the “Graphics” folder. • Recording may be impossible if the data folder does not have enough space available. • Maximum recording time depends on the amount of available space in the data folder. Maximum recording times with maximum available space in the data folder (approximately 50 MB) are as follows: For 240 (H) x 320 (W) dot screen: Approximately 25 minutes...

number within the specified time activates Auto Lock.

[Page 107: Activating Auto Lock On The W32Sa Through Remote Operation](#)

Auto Lock. Remote Auto Lock is activated and you will hear a message telling that it has been activated. Information Remote Auto Lock cannot be activated if the W32SA is not powered on or is out of the service area.

[Page 108: Other Features](#)

DVD player. □□□□□□□□ (BARCODE READER) By recording a bar code (QR code) with the W32SA, it is possible to read bar-coded characters. The read information can be used for the address book or mails. □ The QR code is a bar code with high information ability.

[Page 109](#) You can convert the wallpaper, ringer, images on the sending/receiving screen and Main Menu into Disney Mode all at once. Hands-free Call You can call without holding the W32SA. You will hear the other party's voice from the speakers. Mass Storage Mode By connecting the attached USB Cable WIN (sold separately) to a personal computer, it is possible to use the miniSD™ ...

[Page 110](#) Index Accessories 10 Electric Waves Reception3, 14 Address Book32 E-mail 39 Edit 36 Attach a Photo or a Movie62 Make a Call35 Create and Send 40 Register32 Default Settings

[Page 111](#) Mail Filter 5, 48 Main Menu18 Make Calls24 Make a Call from the Address Book ... 35 SANYO AC Adapter 0410, 12 Make Side Key Operation Invalid5 SANYO Flat-type Stereo Manner Mode3, 29 Earphones 03

[Page 112](#) Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone. Sales : KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY SANYO Electric Co., Ltd. Manufactured by : June 2005 Edition Access the au online manual from here.