



Toshiba ASC400-T Operation Manual

Wireless sound system

1
2
3
4

--



•

[Table of Contents](#)

•

Bookmarks

Available languages

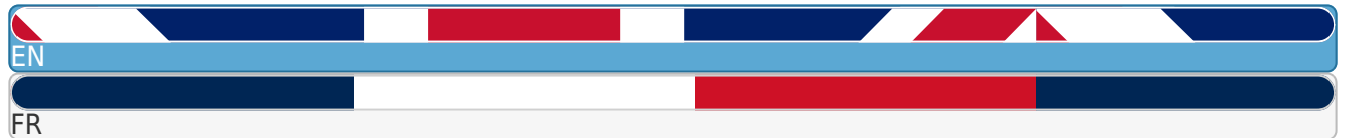 


Table of Contents

- 1 Safety Precautions
- 2 Basic Functions
- 3 USB/SD Operation

[4 Bluetooth Operation](#)

 
[5 FM Operation](#)

[6 MIC Jack Operation](#)

[7 Troubleshooting](#)

[8 Specifications](#)

[Download this manual](#)

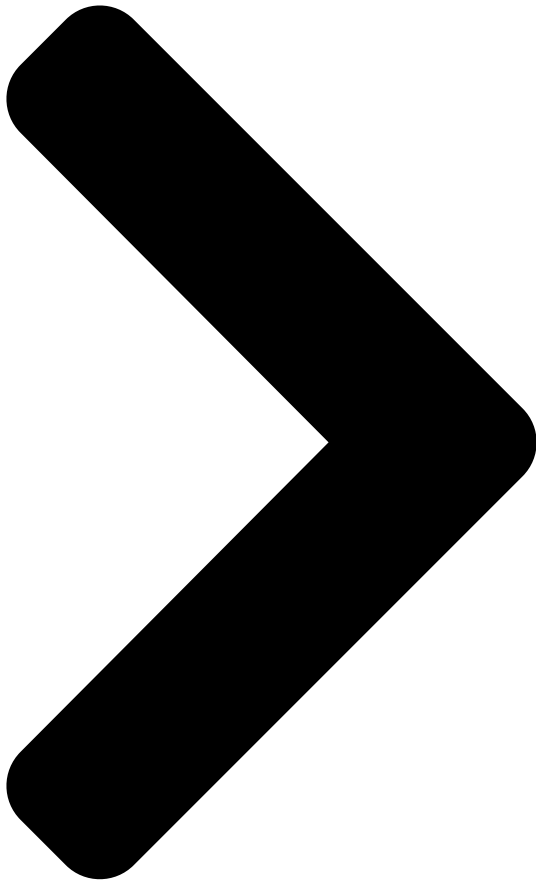

TY-ASC400

Toshiba Wireless Sound System

Operation Manual

Thank you for purchasing this product. Please read this manual thoroughly before using it. After reading this manual, please refer to when necessary.



Safety precautions

The information you need to prevent danger to the user and other people as well as property damage is described below. "Description of signs" shows different levels of danger or damage that may occur due to wrong handling.

Important notes

- This book is only a guide for user's operation, not a criterion for configuration.
- Only use attachments/accessories specified by the manufacturer.
- The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.

The exclamation mark is intended to alert the user to the presence of important operating instructions.

To reduce the risk of electric shock, do not touch the cover. Refer servicing to qualified service personnel.

Description of signs

Indicates that there is a risk of death or serious injury.

Injury or property damage.

What to do in the case of an abnormality

- Stop using the device immediately in the case of an abnormality or failure.
- Remove the power plug from the receptacle immediately when water or any foreign object enters the device.

It may cause a fire or electric shock. Remove the power plug immediately, and contact your dealer for repair.

Power cord and power plug

- To reduce the risk of fire, electric shock, or product damage:
 - Insert the power plug fully into the receptacle.
 - If you find dust on the power plug, remove the power plug and remove the dust.
 - If you find dust on the power plug, remove the power plug and remove the dust.

The main plug or an extension cord must be a disconnecting device, the disconnecting device shall remain ready for operation.

- Do not start or remove the power cord.
- Observe the following when using the power cord:
 - Do not damage it.
 - Do not modify it (e.g., extension).
 - Do not pull it.
 - Do not place a heavy object on it.
 - Do not bend it forcibly.
 - Do not weld it.

If the device will not be used for a long period, remove the power plug from the receptacle. Do not use any power cord other than the one that comes with the device.

Do not use the power cord that comes with the device for any other product.

Usage

- To reduce the risk of fire, electric shock or product damage:
 - Do not disassemble, repair or modify the device.
 - Do not insert any foreign object into the device.
 - In case of lightning, do not touch the power cord.

Before carrying the device, remove the power plug from the receptacle. Do not place a heavy object on the device.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Installation

To reduce the risk of fire, electric shock or product damage:

- Place the unit on a flat surface away from sources of direct sunlight or excessive heat.

Do not install the device in a confined or built-in space such as a book case or similar area, and keep the rear well-ventilated condition. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table cloths, curtains, etc.

Do not place the device on top of other electronic equipment, such as a television set, on the device.

Not to do

- If a color shift occurs on the screen, do not touch the screen. Turn off the device and wait for 10 minutes before using it.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Refer to the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one blade that is wider than the other. A grounding-type plug has a third blade that breaks into the ground outlet. Grounding prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being tripped over or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.

Use only the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart, stand, tripod, bracket, or table is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.

Unplug the apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

This equipment is a Class B or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

The outer frame sources, such as lighted candles, should be placed on the apparatus.

Attention should be drawn to environmental aspects of battery disposal.

The product is designed to use in moderate climates.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC-CANADA

This device complies with Industry Canada license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class (B) digital apparatus complies with Canadian ICES-003.

Get appareil conforme à la norme ICES-003. L'opération est soumise aux conditions suivantes: (1) cet appareil ne peut pas causer d'interférence, et (2) cet appareil doit accepter de toute interférence qui peut causer l'opération non désirée de l'appareil.

Get appareil conforme à la classe B est conforme à la norme NMB-003 du Canada.

California Prop 65 Warning: This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Disclaimer

Toshiba is not responsible for any damage caused by an earthquake, thunderstorm, flood damage, fire for which it is not responsible, acts of a third party, other accident, or damages caused by the user's willful and negligent misuse, or use in abnormal conditions.

Toshiba shall not be responsible for any damage caused by failure to observe the information described in the operation manual.

Disposal

When disposing of the device, observe the laws, or ordinances and rules of the local government.

Notes

This unit is designed for use with Bluetooth® wireless compatible with the A2DP and AVRCP streaming audio profiles. Refer to your Bluetooth® device's user guide for technical support to determine if your Bluetooth® device supports these profiles.

Frequency band used

This unit uses the 2.4 GHz frequency band. However other wireless devices may use 2.4 GHz frequency band as well and may cause interference with each other. To avoid interference, please refrain from the use of the unit at the same time with other wireless devices.

Certification of this device

This unit conforms to frequency regulations and has received certification based on frequency laws, so a wireless permit is not necessary.

- Do not heat it.
- However, the following action is punishable by law in some countries:
 - Do not punch it.
 - Taking apart/modifying the unit.
 - Do not handle it.

Usage restrictions

Wireless transmission and/or use with all Bluetooth® equipped devices is not guaranteed.

A device featuring the Bluetooth® function is required to conform to the Bluetooth® standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned Bluetooth® standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.

Range of use

Use this device within an unobstructed 10 m range. The range of use or perimeter may be shortened depending on any obstructions, device causing interference, other objects in the room, or the construction of the building. Please note that the range mentioned above is not guaranteed.

The Bluetooth® word mark and logo are owned by the Bluetooth SIG, Inc. and are used under license.

1

2

3

4

5

6

7

8

9

10

11

12

 
 
 
 
 
13

14

15

16

17

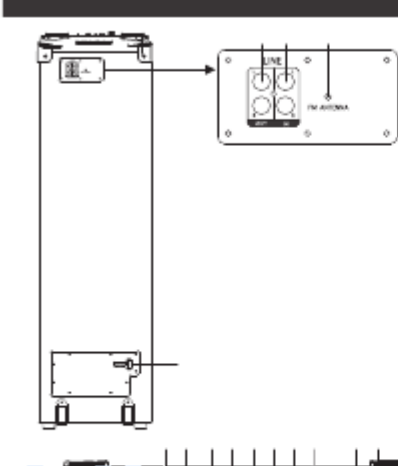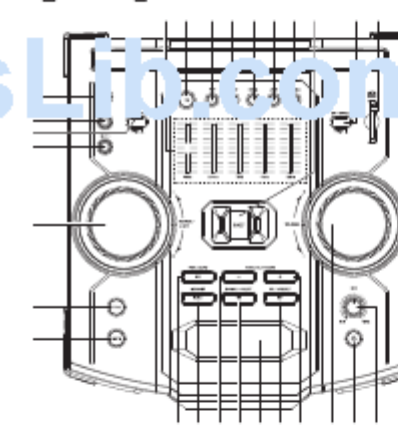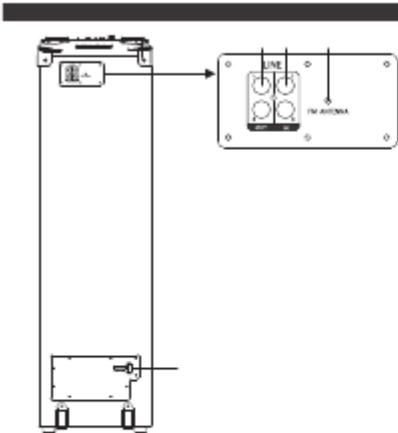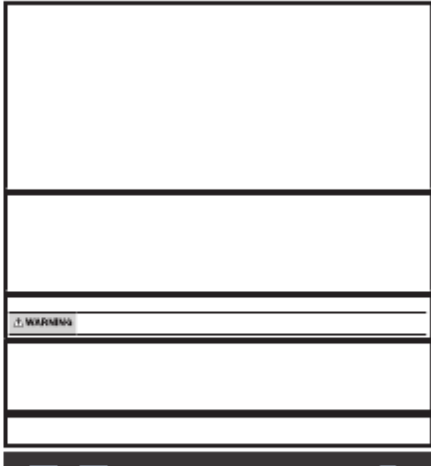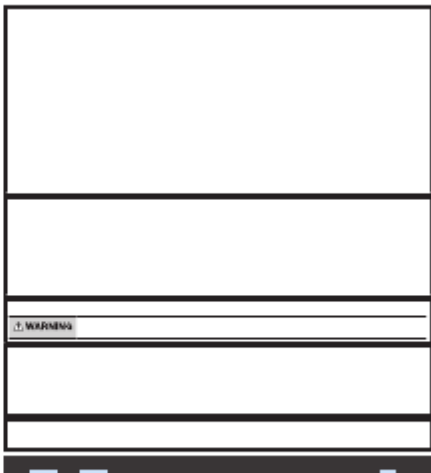

ManualsLib.com

18
19 20

LINE OUT jack L/R

17
(UP)+PRESET button

2

18
LINE IN jack L/R

(TUN/10/FOLDER) button

3

FM ANTENNA

19

VOL knob

4

20
AC POWER SOCKET

POWER button

5

3.5mm AUX INPUT jack

21

MIC VOL knob

6

22

6.3 mm MIC2 jack

SD card slot

7

USB port A

23

USB port B

8

24

6.3 mm MIC1 jack

SAMBA mode button

9

DIMMER/LIGHT knob

25

JAZZ mode button

10

26

FUNC button

ROCK mode button

11

MUTE button

27

DISCO mode button

12

28

PAIR/AUTO button

POP mode button

13

29

ECHO button

14

30

(TUN/10/FOLDER) button

EQUALIZER Slide Volume

15

(DOWN-PRESET) button

31

Extra Bass button

16

DISPLAY

1

Turning the unit on/off

1

Press the POWER button to switch the unit on/off.

Setting the function mode

1

To change the function mode, press the FUNC button on the unit to choose the USB A/USB B/SD/AUX/Bluetooth®/LINE/FM function.

Note

*In USB A/USB B/SD/AUX/Bluetooth®/LINE mode, when no operation is performed for 30 minutes, the unit will automatically enter standby mode. To resume operation, press POWER button to switch the unit on again.

Adjusting the volume

1

Rotate the VOL knob on the unit to increase or decrease the music volume.

Muting the Volume

1

Press MUTE button to switch the sound off temporary.

2

To switch the sound on, press the MUTE button again.

Light function

1

Press the DIMMER/LIGHT knob repeatedly to switch the different lighting mode (L1-L4 and OFF) of LED indicator light on the speaker.

L1: Turning the light on. Hold down the LIGHT knob on the unit to choose BLUE/YELLOW/CYAN/PINK/WHITE/RED/OFFEN color.

L2: Blinking the light on.

L3: Blinking the light a long faster. The color changes to BLUE/YELLOW/CYAN/PINK/WHITE/RED/GREEN automatically.

L4: Flashing the light.

2

Rotate the DIMMER/LIGHT knob on the unit to adjust brightness of the display screen.

Equalizer function

1

Press the EQ button to enter to equalizer manual mode.

2

Adjust the EQUALIZER Slide Volume for five frequencies (63Hz, 250Hz, 1kHz, 4kHz, 12kHz) on the unit to adjust the equalizer volume.

3

To select the preset equaliser modes, press the POP/DISCO/ROCK/JAZZ/SAMBA button.

Extra bass

22

1

Press Extra bass button to switch the extra bass on/off.

Microphone echo

1

Press ECHO button repeatedly to switch to microphone ECHO ON/OFF mode.

Listening to a USB device/SD card

This unit provides a USB port for music playback.

1

Press the FUNC button on the unit to select USB A/USB B/SD mode.

2

USB: Connect a USB memory stick to the USB port A/USB port B on the front of the unit.

SD: Insert an SD memory card into the SD card slot on the front of the unit.

The display will show the total number of playable tracks on the USB device/SD card.

3

To playback and resume playback, press the PAIR button.

The current track number will be displayed on the display.

4

To pause playback, press the PAIR button on the unit.

The current track number will be displayed on the display.

5

To select a desired Track, press the button either while the unit is paused until the desired track appears on the display.

The unit will start playing automatically.

6

To search for a particular track during playback, press and hold the forward and fast backward until the desired point (passage) is reached, then release the button for normal playback.

 
 
 
 
 
 
 
 
Playback will start again from this point.

7

To jump to +/-10 track, press or (TUN/10/FOLDER) button.

8

TOSHIBA

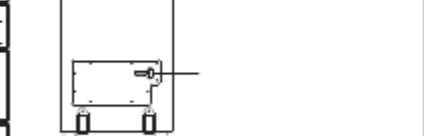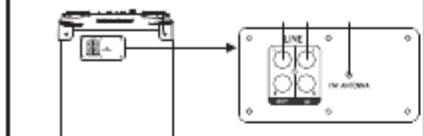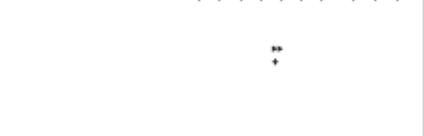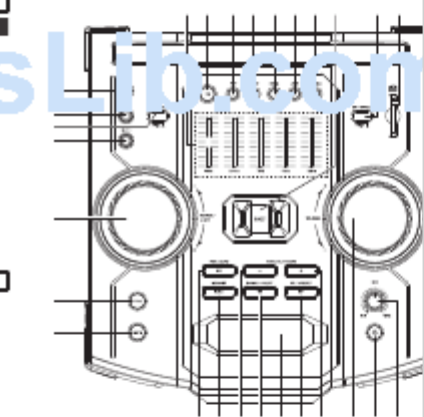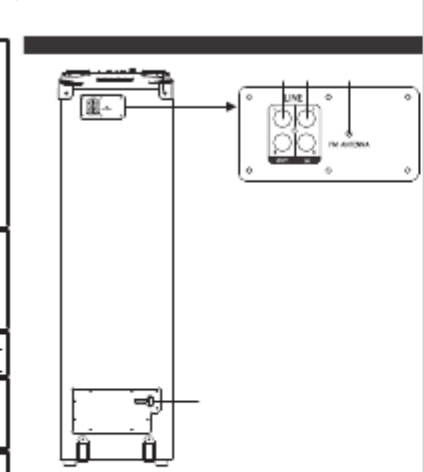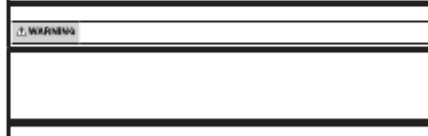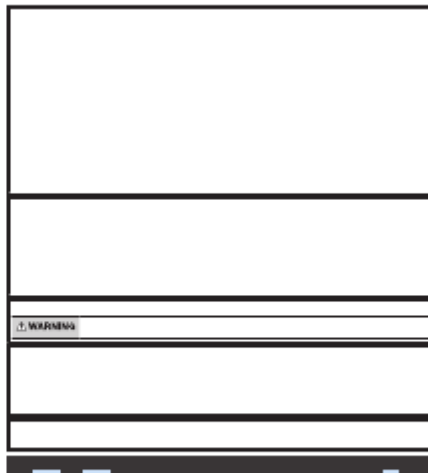

ManualsLib.com

ManualsLib.com

To select folder, press and hold
OF
(TUNER/OLDER) button.

CAUTION
To prevent harmful interference, always connect USB device/SD card directly to the unit. Do not use a USB/SD card
extension cable to connect USB device/SD card to the unit.

TOSHIBA

1
Press the FUNC button on the unit to switch to the Bluetooth® mode.
The display will show "BT".

2
Following the instructions in your device's user manual, activate Bluetooth® on your device and
search for the unit "TY-ASC400" and connect. Input the password "0000" if required.
The display will show "BT".

3
Press the
PAIR button on the unit to start playback.

4
Rotate the VOL knob on the unit or adjust the volume on the external device to increase or
decrease the music volume.

Notes
• Press and hold the
PAIR button to disconnect the Bluetooth®.
• The Bluetooth® works best within 10 meters.
• In Bluetooth mode,
PAIR, VOLUME, MUTE etc. are also active.

1
Press the FUNC button on the unit to select "AUX/LINE" mode.

 
 
2
Connect your audio device to the input terminal AUX LINE INPUT on the front panel on the rear
panel of the unit with an audio cable.

3
Rotate the VOLUME knob on the unit or adjust the volume on the external device to increase or
decrease the music volume as desired.

4
Control playback with your audio device.

OR
button to fast
10-154-02
10-42-42

WARNING

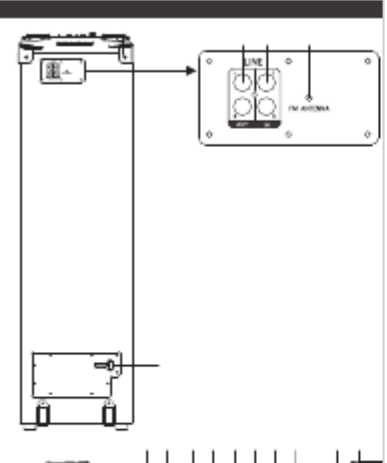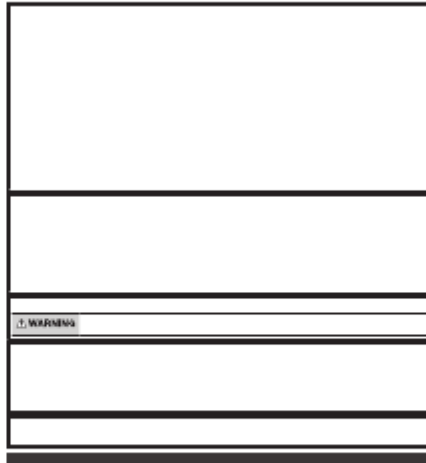

[Next Page](#)

1
2
3
4

Related Manuals for Toshiba ASC400-T

[Stereo System Toshiba SL-3329 Owner's Manual](#)

Stereo sound system (39 pages)

[Stereo System Toshiba TY-AS100TW Operation Manual](#)

Dvd (34 pages)

[Stereo System Toshiba TY-ASW8000 Operation Manual](#)

(2 pages)

[Stereo System Toshiba SX-150C Service Data](#)

Stereo radio-phonograph (22 pages)

[Stereo System Toshiba TY-SP3 Operation Manual](#)

2.1ch stereo sound system portable bluetooth wireless speaker and speaker phone (2 pages)

Summary of Contents for Toshiba ASC400-T

[Page 1](#) • Toshiba shall not be responsible for any damage caused by an earthquake, thunderstorm, flood damage, fire Press the EQ button to enter to equalizer manual mode. for which Toshiba is not responsible, acts of a third party, other accidents, or damages caused by the user's Description of signs willful acts or negligence, misuse, or use in abnormal conditions.

[Page 2](#) FM operation Listening to the FM Press the FUNC button on the unit to select "FM" mode. Press (TUN/10/FOLDER) button to tune in the station. Press and hold the (UP) or (DOWN) button to perform automatic tuning. Tuning stops automatically when a station is received. •...

[Page 3](#) • Toshiba ne peut être tenu responsable pour tout dommage causé par une tremblement de terre, un orage, des Réglez le curseur de volume EQUALIZER selon cinq fréquences (63Hz, 250Hz, 1kHz, 4kHz, 12kHz) sur inondations ou un incendie pour lesquels Toshiba n'est pas responsable, pour toute action d'une tierce partie,...

[Page 4](#) Fonctionnement FM Écouter via FM Appuyez sur le bouton FUNC de l'appareil pour sélectionner le mode « FM ». Appuyez sur le bouton (TUN / 10 / FOLDER) pour syntoniser la station. Maintenez le bouton (UP) ou (DOWN) enfoncé pour effectuer la syntonisation automatique. La syntonisation s'arrêtera automatiquement lorsqu'une station est reçue.