



 
# Toshiba AT10-B User Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86



•

[Table of Contents](#)

- 

Troubleshooting




•

## Bookmarks

[Download this manual](#)

## Quick Links

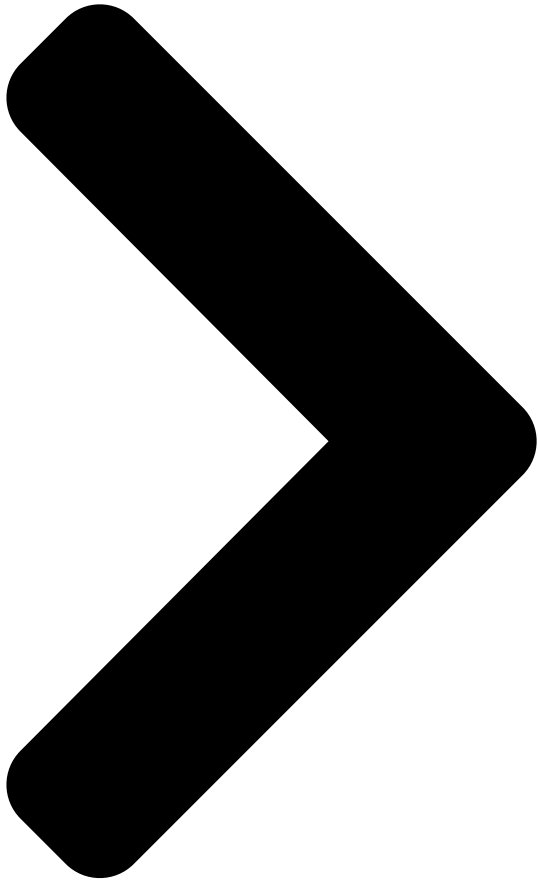

# **TOSHIBA** User's Manual

**Leading Innovation >>>**

**TOSHIBA AT10-B**

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba AT10-B

[Tablet Toshiba AT1S5-SP0101M User Manual](#)

7" tablet (123 pages)

[Tablet Toshiba AT105-SP0160M User Manual](#)

At105-sp0160m user's guide (132 pages)

[Tablet Toshiba AT105-SP0102C Manual Del Usuario](#)

User guide 2 (142 pages)

[Tablet Toshiba Thrive 10.1 8GB Specifications](#)

Toshiba thrive 10.1 8gb: specifications (3 pages)

[Tablet Toshiba Thrive AT105-T108S Specifications](#)

Toshiba thrive tablet detailed product specification (3 pages)

[Tablet Toshiba PDA01U-00101F Brochure](#)

Brochure (3 pages)

[Tablet Toshiba Thrive AT105-T10162 Specifications](#)

Toshiba thrive tablet detailed product specification (3 pages)

[Tablet Toshiba Thrive 32GB User Manual](#)

Toshiba thrive 32gb: user guide (131 pages)

[Tablet Toshiba Thrive 10.1 8GB User Manual](#)

Toshiba thrive 10.1 8gb: user guide (131 pages)

[Tablet Toshiba AT100 User Manual](#)

(86 pages)

[Tablet Toshiba AT1S0 User Manual](#)

(82 pages)

[Tablet Toshiba Excite Pure AT10 User Manual](#)

A series (132 pages)

[Tablet Toshiba AT10LE-A Series User Manual](#)

(103 pages)

[Tablet Toshiba AT10-C User's Information Manual](#)

(18 pages)

[Tablet Toshiba Excite Pro Specifications](#)

(3 pages)

[Tablet Toshiba Excite Write Specifications](#)

(3 pages)

## Summary of Contents for Toshiba AT10-B

[Page 1](#) User's Manual TOSHIBA AT10-B...

### [Page 2: Table Of Contents](#)

Table of Contents Chapter 1 Legal & Regulatory Copyright .....1-1 Disclaimer  
.....1-1 Trademarks ..... 1-2 H.264/AVC and MPEG-4 License Notice .....1-2  
FCC information .....1-3 CE compliance .....1-4 Working environment  
.....1-4 Additional environments not related to EMC .....1-5 REACH - Compliance  
Statement .....

[Page 3](#) Email ..... 5-5 Gallery .....5-5 The Google Play™ Music App

..... 5-6 People ..... 5-7 Service Station .....5-7 TOSHIBA File Manager  
..... 5-9 TruCapture ..... 5-12 Online Manual .....5-12 Chapter 6 Settings  
Wireless & networks .....6-1 Device .....

[Page 4](#) Chapter 9 Specifications Physical Dimensions .....9-1 Environmental  
Requirements ..... 9-1 Chapter 10 Information for Wireless Devices Wireless Technology  
Interoperability .....10-1 CAUTION about Wireless Devices ..... 10-1 Wireless Devices and  
your health ..... 10-2 Radio Regulatory Information .....10-2 Device Authorization  
.....

## [Page 5: Legal & Regulatory Copyright](#)

Chapter 1 Legal & Regulatory Copyright © 2014 by TOSHIBA Corporation. All rights reserved.  
Under the copyright laws, this manual cannot be reproduced in any form without the prior  
written permission of TOSHIBA. No patent liability is assumed, with respect to the use of the  
information contained herein.

## [Page 6: Trademarks](#)

Until the date that is three years after you acquired the Software, you may obtain a copy of the  
source code corresponding to the binaries for GPL- licensed file by sending a request to  
TOSHIBA customer service at [http:// support.toshiba-tie.co.jp/android/index\_e.htm], and  
TOSHIBA will send you a link to such source code.

## [Page 7: Fcc Information](#)

Only peripherals complying with the FCC class B limits may be attached to this equipment.  
Operation with non-compliant peripherals or peripherals not recommended by TOSHIBA is likely  
to result in interference to radio and TV reception. Shielded cables must be used between the  
external devices and the device's Universal Serial Bus (USB 2.0) ports and microphone/...

## [Page 8: Ce Compliance](#)

Medical environment: The compliance to the Medical Product Directive has not been verified by  
Toshiba, therefore this product cannot be used as a medical product without further verification.  
The use in usual office environments e.g.

## [Page 9: Additional Environments Not Related To Emc](#)

The new European Union (EU) chemical regulation, REACH (Registration, Evaluation,  
Authorization and Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will  
meet all REACH requirements and is committed to provide our customers with information  
about the chemical substances in our products according to REACH regulation.

## [Page 10: Following Information Is Only For India](#)

Radio Interference Regulation of the Canadian Department of Communications. Note that  
Canadian Department of Communications (DOC) regulations provide, that changes or  
modifications not expressly approved by TOSHIBA Corporation could void your authority to  
operate this equipment. User's Manual...

## [Page 11: Canada - Industry Canada \(Ic\)](#)

The term "IC" before the equipment certification number only signifies that the Industry Canada  
technical specifications were met. Following information is only for Turkey: Compliant with EEE  
Regulations: Toshiba meets all requirements of Turkish regulation 26891 "Restriction of the use  
of certain hazardous substances in electrical and electronic equipment".

## [Page 12: Introduction](#)

Introduction Welcome and thank you for choosing a TOSHIBA product. About the guide For your  
convenience, your TOSHIBA product is furnished with two guides: a Quick Start Guide, and this  
comprehensive PDF User's Manual We recommend making a backup of this User's Manual in  
case of future reference.

## [Page 13: Chapter 3 Getting Started](#)

This chapter provides a general overview of your tablet and some basics before using your  
tablet. If you use an operating system that was not pre-installed by TOSHIBA, some of the



features described in this manual might not function properly.

## [Page 14: Display Screen](#)

Figure 3-1 Grand tour of the tablet 1. Display screen 2. Web Camera (front) 3. Power button 4. Volume down/up button 5. Microphone 6. Headphone/Microphone combo jack 7. Speakers 8. Memory media slot 9. SIM card slot \* 10. Micro-HDMI port 11.

[Page 15](#) Microphone Built-in microphone allows you to record sounds. Headphone/ A 3.5 mm mini headphone/microphone combo Microphone combo jack enables connection of a monaural jack microphone or stereo headphone. The external microphone will be disabled if you use a 4-pin headset other than the type as shown below.

## [Page 16: Hardware](#)

Micro-USB port The tablet acts both as a host and a client via this port. It allows you to connect the tablet to a computer for transferring data. When acting as a host, the tablet can fast and directly communicate with other client devices without the assistance of a computer.

[Page 17](#) AC adaptor The AC adaptor provides power to the system and charges the battery when it is low. As the AC adaptor is universal, it can receive a range of AC voltages from 100 volts to 240 volts, however you should note that the output current varies among different models.

## [Page 18: Using The Tablet For The First Time](#)

Using the tablet for the first time This section provides basic information about how to start using your tablet. It covers below steps followed by the details. Connecting the AC adaptor Turning on the power Initial Setup Turning off the power Use a virus-check program and make sure that it is updated regularly.

[Page 19](#) Always use the TOSHIBA AC adaptor that was included with your tablet, or use AC adaptors specified by TOSHIBA to avoid any risk damage to the tablet. Use of an incompatible AC adaptor could cause fire or damage to the tablet possibly resulting in serious injury.

## [Page 20: Turning On The Power](#)

Plug the other smaller connector of the Micro-USB cable into the Micro-USB port on your tablet. The Micro-USB connector of the Micro-USB cable must be correctly plugged into the Micro-USB port on the tablet. Failure to do so correctly might result in possible damage to the Micro-USB port. Figure 3-4 Connecting the AC adaptor 2 3-pin 2-pin...

## [Page 21: Turning Off The Power](#)

Tap Learn more to read the privacy policy and other terms. Tap agree. Tap Finish to exit Setup Screen. 10. Read the Toshiba legal information. Tap Agree. Your tablet is now set up and ready to use. Turning off the power If you are not going to use your tablet for a long time, shut it down.

## [Page 22: Care And Use Of The Battery](#)

Celsius. Otherwise, the electrolyte solution might leak, battery performance might deteriorate and the battery life might be shortened. Never try to remove or replace the battery by yourself which might possibly result in serious injury. Contact an authorized Toshiba service provider, if necessary. Charging the battery When the battery power becomes low, you must charge it to avoid losing any data.

## [Page 23: Battery Charging Time](#)

An icon shaped like an actual battery appears in the center of the screen allowing you to keep track of the battery level. When the battery is fully charged, the meter reaches its full capacity. Likewise, a battery meter on the right side of the System Bar indicates the battery level.

[Page 24](#) The battery is nearly completely discharged. In this instance, the tablet cannot be turned on immediately. You should leave the AC adaptor connected for a few minutes and the battery should begin charging. A battery meter icon ( ) will appear indicating the charging status. The indicator may show a rapid decrease in battery operating time when you try to charge a battery under the following conditions: The battery has not been used for a long time.

## [Page 25: Basics](#)

Chapter 4 Basics This chapter describes the basic operations of your tablet and the Home screen. Using the touch screen You can use your finger to manipulate icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen. Simply tap your finger on the touch screen to act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to tap onscreen buttons.

[Page 26](#) Figure 4-1 Home screen 1. System bar 2. App shortcuts 3. All Apps 4. Favorite tray 5. Back 6. Home 7. Recent apps Item Description System bar The System bar is located at the top of the screen. The notifications icons and notification panel are on the left, and the status icons and Quick settings panel are on the...

## [Page 27: Opening And Switching Applications](#)

Swipe left or right to see more Home screen panels. You can place app shortcuts and widgets on Home screen. See Customizing the Home screen section for the details. Opening and switching applications Opening an application You may open an application by: Tapping its icon on the Home screen.

## [Page 28: Managing Notifications](#)

Auto rotate Tap to turn on/off the auto-rotate screen feature. Battery Tap to open Battery option in Settings app. Airplane mode Tap to turn on/off airplane mode. All wireless radios are disabled when it is turned on. Bluetooth Press & hold to turn on/off Bluetooth. You can also tap to open Bluetooth option in Settings app.

## [Page 29: Capturing Your Screen](#)

Locking your screen with a Pattern lock For example, you can use a Pattern lock to lock your screen with following steps. Open the security settings by tapping All Apps -> Settings -> Security. Tap Screen lock -> Pattern. Follow the onscreen instructions to finish the creation. The next time you turn on your tablet or wake up the screen, you will be prompted to draw your unlock pattern to unlock the screen.

## [Page 30: Changing The Screen Orientation](#)

Press & hold the item you want to move until its icon is magnified. Don't lift your finger from the screen. Drag the item to a new location on the screen. It will pause at the left or right edge of the screen to drag the item onto extended Home screen.

## [Page 31: Connecting To A Computer](#)

Tap All Apps -> Settings -> Apps. Tap an item you want to manage from DOWNLOADED/RUNNING/ ALL/DISABLED tab. Refer to Apps section in Settings chapter for details. You can stop some of the running applications. Connecting to a computer With a Micro-USB port on the tablet, you can connect your tablet to a computer for data transfer.

## [Page 32: Factory Reset](#)

Factory Reset The tablet provides you with the function to reset it. Before executing the reset, you need to backup the system settings, application settings, user installed applications and data in the internal storage. To perform the factory data reset, do the following: Tap All Apps ->...

## [Page 33: Calculator](#)

Chapter 5 Applications This chapter describes the usage of applications & widgets. Your tablet has some Google Mobile services™ installed and the availability of the applications may vary depending on your country or region. Some applications will be automatically hidden after the first power Calculator You can use Calculator to solve simple arithmetical problems or use its advanced operators to solve more complex equations.

[Page 34](#) Camera will open, ready to take a still picture. You can switch Camera to video or panorama mode anytime by tapping the proper icon in option 3 of the following figure. The back camera is set for default. You can switch to front camera by tapping icon in option 1 of the following figure.

## [Page 35: Clock](#)

More options ( ): Tap to find the following options: Store location ( ): Tap to enable or disable storing location information of pictures you take. Countdown timer ( ): Set the duration before the picture is taken. Check Beep during countdown to allow beeps during countdown.

## [Page 36: Downloads](#)

Tap an existing alarm clock to change its time and other settings. Or tap the icon ( ) to add a new one. Tap the icon ( ) to find more settings for alarms: Silence after: Select the time when you want your alarm to stop ringing.

## [Page 37: Email](#)

Email You can use the Email application to read and send emails. To open the Email, tap All Apps -> Email. Read an email You can read emails in the Inbox or other folders for individual accounts. Tap the email to read. If two or more accounts are added, you can read all received emails by tapping combined view.

## [Page 38: The Google Play™ Music App](#)

If you have a large number of pictures or videos on your tablet, it may take Gallery a few minutes when you open it to discover and organize them. Gallery will display all images and videos without distinction of internal or external storage.

## [Page 39: People](#)

Playing music You can listen to music by tapping a song you like. Working with playlists You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle. To create a playlist, you can add the songs that are playing by tapping beside the song and tapping Add to playlist.

## [Page 40: Main Window](#)

To open Service Station: Tap All Apps -> Service Station. Main Window The main window of this application includes four areas: Menu, Buttons, Information, and Check for Updates. Menu Tap Menu icon ( ), you can access the following options: Select All Applications, View Hidden Update(s), View Hidden Alert(s), View Access Agreement, and About.

## [Page 41: Toshiba File Manager](#)

TOSHIBA File Manager TOSHIBA File Manager is a featured application that manages files and folders. It allows you to create, rename, copy, cut, paste or delete files, and folders stored in both internal and external storage.

[Page 42](#) To open TOSHIBA File Manager, tap All Apps -> File Manager from the Home screen. System files cannot be accessed by TOSHIBA File Manager. TOSHIBA File Manager may not be able to open a file without its associated application. Navigation The main window of TOSHIBA File Manager is divided into four panels.

## [Page 43: Creating A Folder](#)

Copy, Cut, and Paste Tap Copy ( ) or Cut ( ) in the Control panel. After TOSHIBA File Manager exits the multi-selection mode, you can redirect to a folder where to paste the selected items. Tap Paste ( ) in the Control panel to complete the operation.

## [Page 44: Trucapture](#)

Only some options are supported in MUSIC, VIDEOS, PICTURES, and DOCUMENTS tabs. Adding folder shortcut Folder shortcut makes it faster to access the folder. TOSHIBA File Manager is designed to create folder shortcut in the Device panel. Press & hold a folder to select it, and then tap to open the menu.

## [Page 45: Settings](#)

Chapter 6 Settings This chapter describes the Settings app - a quick and easy access to the global options that allows you to configure how your tablet communicates and functions. A scrollbar is displayed on the right side of the screen. This scrollbar is only used to show the position of the displaying area.

[Page 46](#) Tethering & portable hotspot settings You can share your tablet's mobile data connection with other devices (up to 8) via USB, Bluetooth, or by turning your tablet into a portable Wi-Fi hotspot. Tap to adjust these settings. This function is only supported by 3G models. Mobile networks Tap to set up your wireless service provider's mobile network.

[Page 47](#) Tap a network name to see more details. If the network is open, you are prompted to confirm that you want to connect to that network by tapping Connect. If the network is secured, you're prompted to enter a password or other credentials.

[Page 48](#) Proxy settings are used by Browser and may not be used by other apps. In the Wi-Fi settings screen, press & hold the network name you have added. Tap Modify network. Check Show advanced options. If the network has no proxy settings, tap None and select Manual. Enter the required proxy settings you have obtained.

[Page 49](#) Wi-Fi frequency band Tap this option to change the setting to Auto, 5 GHz only or 2.4 GHz only. Install certificates Installs network certificates stored on the SD card. Wi-Fi optimisation Check this option to minimize battery usage when Wi-Fi is turned on. MAC address Shows MAC address of your device IP address...

### [Page 50: Turning Bluetooth On Or Off](#)

To connect to a Bluetooth device, you must turn on your tablet's Bluetooth radio. The first time you use a new Bluetooth device, you must "pair" it with your tablet so that they connect securely to each other. After that, you can simply connect to a paired device.

### [Page 51: Configuring Bluetooth Settings](#)

Make sure that the Bluetooth is turned on. In the list of Bluetooth devices, tap a paired but unconnected device. If the device you expected isn't displayed, tap SEARCH FOR DEVICES. When your tablet and this device are connected, this device is shown as connected in the PAIRED DEVICES list.

### [Page 52: Data Usage](#)

Disabling data when roaming Open the Settings app from All Apps. Under Wireless and networks, tap More -> Mobile networks, and uncheck Data roaming. However you can still transmit data via a Wi-Fi connection. Editing or creating a new access point If you and your wireless service provider determine that you need to change the settings of your current APN or to create a new one, you must obtain the APN and detailed settings from your provider.

### [Page 53: Device](#)

Setting data usage Data usage of each network type (Mobile, Wi-Fi or Ethernet) are illustrated. By default, Wi-Fi or mobile network is displayed. Tap the network tab to switch between them. Tap Data usage cycle to choose a different cycle. This date range is the period for which data usage is displayed in the graph below.

[Page 54](#) Brightness Drag the slider left or right to adjust the screen brightness. Wallpaper Tap to select a wallpaper source and change wallpaper. Sleep Tap to open a dialog where you can set the time of inactivity before the tablet goes to sleep. Daydream Slide the Daydream switch to the ON position.

### [Page 55: Internal Storage](#)

Storage Storage shows your internal storage and external storage status. Internal storage Internal storage contains the following options: Total Space Shows the total memory space of internal storage in your tablet. Available Shows the free space of internal storage. The following options will be displayed under the current user: Apps (app data &...

[Page 56](#) USB computer connection You can choose how the USB port works by tapping the Menu icon ( and select USB computer connection. Refer to the Connecting to a computer section for more details. Battery Battery allows you to check what is using the battery and the battery usage data.

[Page 57](#) This tablet does not support another Operating System. TOSHIBA cannot guarantee or support applications that are installed by a user. Users You can add additional users and restricted profiles on your tablet. Add users You can share your tablet with family and friends.

Each new user you set up here can use a separate space on the tablet with its own Home screen, account, apps, settings and so on.

[Page 58](#) Change user name: tap icon ( ) to open a screen where you can change user name. Add or change additional text: tap icon ( ) to open a screen where you can add or change the text displaying on the lock screen. Delete a user The tablet's owner can delete any user's space by tapping the Trash icon (...)

### [Page 59: Personal](#)

Delete a restricted profile The tablet's owner can delete any restricted profile by tapping the Trash icon ( ) beside the profile to be deleted. Other restricted profiles can only delete their own space by tapping Menu icon ( ) on the top right of the screen and selecting Delete from this device.

[Page 60](#) Screen Security Screen lock Tap to open a screen where you can configure the tablet to lock screen with a Slide, Face Unlock, Pattern, PIN, Password. The following options will be displayed depending on the lock mode you select. Make pattern visible: Check to make the pattern visible while unlocking the tablet.

[Page 61](#) Passwords Make passwords visible Check this option to show each password character as you enter them, so that you can see what you enter. Device Administration Device administrators Tap to open a screen where you can view and manage device administrators.

[Page 62](#) Personal dictionary Tap to open your personal dictionary. To add your words, tap ADD on the top right of the screen. Keyboard & Input Methods Default Tap to open a dialog where you can select the default input method you want to use, if you have more than one installed, tap Set up input methods to open the screen where you can configure each input method.

### [Page 63: Accounts](#)

Personal Data Factory data reset Tap to erase all user data in the internal storage. Follow the on-screen instructions to reset it. Note that data in the removable media won't be erased. Refer to the section Factory Reset "Basic" chapter for details. Accounts You can tap an account to edit account settings which may vary with different account type.

[Page 64](#) Accessibility You can use Accessibility settings to enable accessibility functions, such as reading or enlarging text on the screen. TalkBack Slide the switch to the ON position to enable TalkBack which provides spoken feedback to help blind and low-vision users. Captions Captions allow the hearing impaired to specify if and how they want captions displayed on video, for example, the language, size, and...

### [Page 65: About Tablet](#)

Accessibility shortcut Slide the switch to the ON position to turn on this feature, which allows you to touch your tablet's screen and hear what's under your finger via spoken feedback. This feature is helpful to blind users. When this feature is turned on, you can quickly enable accessibility features by the following steps: 1.

[Page 66](#) Baseband version Display the baseband version. This function is only supported by 3G models. Build number Display the build number. User's Manual 6-22...

### [Page 67: Optional Accessories](#)

Chapter 7 Optional Accessories Optional devices can expand the tablet's capability and its versatility. This section describes the connection or installation of the following devices: Cards Memory media slot Secure Digital™ (SD) Card (microSD/SDHC/SDXC card) SIM card Peripheral devices USB device HDMI device wireless display Memory media slot...

### [Page 68: Media Care](#)

Memory media format New media cards are formatted according to specific standards. If you wish to reformat a media card, be sure to do so with a device that uses media cards. Formatting microSD/SDHC/SDXC memory cards microSD/SDHC/SDXC memory cards are sold already formatted in conformity to specific standards.

## [Page 69: Sim Card Slot](#)

Push the memory media gently until you hear a click. Figure 7-1 Inserting a memory media 1. Memory media slot 2. Memory media Make sure that memory media is oriented properly before you insert it. If you insert the media in wrong direction, you might not be able to remove it.

## [Page 70: Usb Device](#)

Please upgrade the software to the latest version after your purchase of the tablet. To connect a USB device, you must purchase a Micro A plug - A receptacle cable. This item is available from your reseller or TOSHIBA dealer. User's Manual...

## [Page 71: Hdmi Device](#)

Make sure the connector is properly aligned with the socket. Do not try to force the connection, doing so can damage the connecting pins. This tablet does not support a printer. As the port operation of all USB devices has not been confirmed, some USB devices may not function properly.

[Page 72](#) Wireless display function is a new innovative function, and TOSHIBA has not confirmed compatibility of your tablet with any and all display devices. Contact Toshiba technical support provided in Chapter 8 for more information.

## [Page 73: Optional Toshiba Accessories](#)

Tap on the Disconnect button icon ( ) in notification panel. Optional TOSHIBA Accessories To make your computer even more powerful and convenient to use, you can add a number of options and accessories. For reference, the following list details some of the items that are available from your reseller or...

## [Page 74: Troubleshooting](#)

In reality many problems can be solved simply, but a few may require help from TOSHIBA Support - if you find you need to consult others, be prepared to describe the problem in as much detail as possible.

## [Page 75: Hardware And System Checklist](#)

Always try to make detailed notes of your observations and keep them in a permanent error log - this will help you to describe your problems to TOSHIBA Support. In addition, if a problem recurs, the log you have made will help to identify the problem faster.

## [Page 76: Sound System](#)

If you are still unable to resolve the problem, contact TOSHIBA Support. USB device In addition to the information in this section, please also refer to the documentation supplied with your USB device.

## [Page 77: Toshiba Support](#)

-> Bluetooth. TOSHIBA Support If you require any additional help using your tablet or if you are having problems operating the tablet, you may need to contact TOSHIBA for additional technical assistance. Before you call Some problems you experience may be related to software or the operating system so it is important that you investigate other sources of assistance first.

## [Page 78: Specifications](#)

Chapter 9 Specifications This chapter summarizes the tablet's technical specifications. Physical Dimensions Size Approximately 259.4 (w) x 171.4 (d) x 10 (h) millimeters (not including parts that extend beyond the main body). Environmental Requirements Conditions Ambient temperature Relative humidity Operating 5°C (41°F) to 35°C 20% to 90% (95°F)

## [Page 79: Information For Wireless Devices Wireless Technology Interoperability](#)

) certification as defined by the Wi-Fi ® Alliance TOSHIBA does not guarantee compatibility of this device with all equipment using Bluetooth wireless technology. This device is designed to be interoperable with any product with Bluetooth wireless technology that is based on Frequency Hopping Spread Spectrum...

## [Page 80: Wireless Devices And Your Health](#)

Because wireless products operate within the guidelines found in radio frequency safety standards and recommendations, TOSHIBA believes Wireless products is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

[Page 81](#) Italy: For private use, a general authorization is required if WAS/ RLAN's are used outside own premises. For public use, a general authorization is required. Luxembourg: Implemented General authorization required for network and service supply. Norway: Implemented This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Alesund.

[Page 82](#) Luxembourg: Implemented General authorization required for network and service supply Russian Limited e.i.r.p 100mW. Permitted to use Federation: only for indoor applications, closed industrial and warehouse areas, and on board aircraft. Permitted to use for local networks of aircraft crew service communications on board aircraft in area of the airport and at all stages of...

[Page 83](#) pourraient causer du brouillage et/ou des dommages aux dispositifs LAN- The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met. USA-Federal Communications Commission (FCC) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules.

## [Page 84: Important Notice](#)

If this equipment causes RF interference to other radio stations, promptly change the frequency being used, change the location of use, or turn off the source of emissions. Contact an authorized TOSHIBA service provider if you have problems with interference caused by this product to Other Radio Stations.

## [Page 85: Device Authorization](#)

: This equipment uses a frequency bandwidth from 2,400MHz to 2,483.5MHz. It is possible to avoid the band of mobile object identification systems. 3. Indication for Bluetooth The indication shown below appears on this equipment. 2.4 : This equipment uses a frequency of 2.4 GHz. FH : This equipment uses FH-SS modulation.

[Page 86](#) If you use this equipment in the countries/regions which are not listed in the table blow, contact TOSHIBA Support. As of October 2014 Austria Belgium Bulgaria Canada Cyprus Czech Rep Denmark Estonia Finland France Germany Greece Hong Kong Hungary Iceland...