



# Toshiba A5517T Basic Manual



1  
2  
3  
4  
5  
6  
7  
8  
9

Table Of Contents

10  
11  
12  
13  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62

---

•

[Table of Contents](#)

- 

Troubleshooting


•

## Bookmarks

## Quick Links

[1 Charging the Battery Pack .....12](#)

[Download this manual](#)

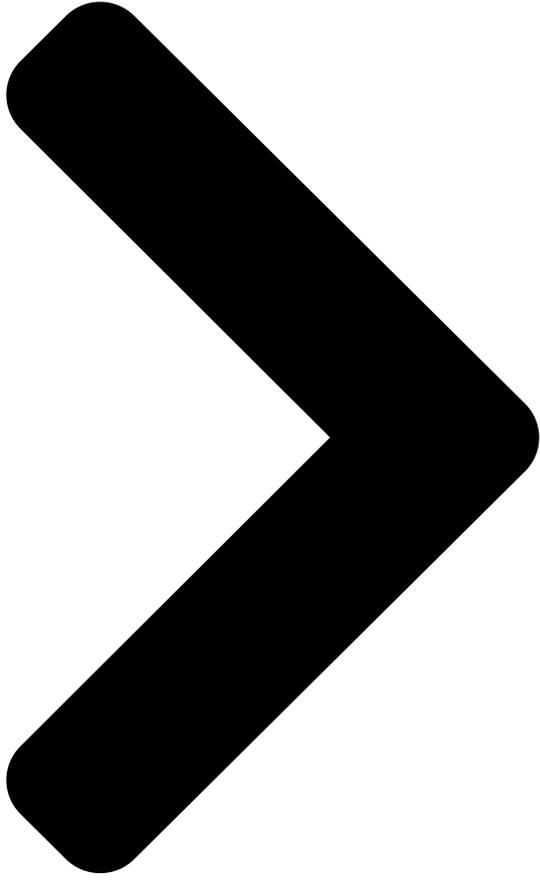

Basic

# Manual

## A5517T

**Contents/**

**Getting Ready**

**Making and**

**Answering Calls**

**Character Input**

**Phone Book**

**Pair Function**

**Mail**

**Camera**

**EZweb**

**Others/Index**



[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba A5517T

[Cell Phone Toshiba A5516T Basic Manual](#)

(106 pages)

[Cell Phone Toshiba A5509T Basic Manual](#)

(102 pages)

[Cell Phone Toshiba A5523T Basic Manual](#)

Au by kddi (118 pages)

[Cell Phone Toshiba PORTEGE G910 User Manual](#)

(13 pages)

[Cell Phone Toshiba W45T Basic Manual](#)

(126 pages)

[Cell Phone TOSHIBA TS10 User Manual](#)

Toshiba mobile phone (83 pages)

[Cell Phone Toshiba Regza ISO4 Basic Manual](#)

Toshiba regza is series mobile phone basic manual (79 pages)

[Cell Phone Toshiba VM4050 User Manual](#)

Pcs vision phone (249 pages)

[Cell Phone Toshiba SG4-E01 User Manual](#)

(33 pages)

[Cell Phone Toshiba Portege G710 User Manual](#)

Toshiba cell phone user guide (140 pages)

[Cell Phone Toshiba 2032SP Online User's Manual](#)

Dual-band pcs phone (106 pages)

[Cell Phone Toshiba G500 User Manual](#)

Toshiba cell phone user manual (123 pages)

[Cell Phone Toshiba T-01B User Manual](#)

(176 pages)

[Cell Phone Toshiba W53T Manual Manual](#)

Cdma 1x win (93 pages)

[Cell Phone Toshiba TX80 User Manual](#)

Toshiba cell phone user manual (145 pages)

[Cell Phone Toshiba RG4-E01 User Manual](#)

(120 pages)

## Summary of Contents for Toshiba A5517T

[Page 1](#) Basic Contents/ Getting Ready Manual Making and Answering Calls Character Input Phone Book Pair Function Mail Camera EZweb A5517T Others/Index...

[Page 2](#) Introduction Thank you for purchasing the A5517T. Before using your A5517T, be sure to read the A5517T Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

## [Page 3: Cell Phone Etiquette](#)

Cell Phone Etiquette Etiquette for Cell Phone Use ■The cell phone always emits weak radio waves when power is on. ■Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you. ●Be considerate of where ●The use of cell phones is you use the cell phone and not allowed in some places...

## [Page 4: Cell Phone Basics](#)

Cell Phone Basics Cell Phone Features On the A5517T, Smart Mode is set at the time of purchase. With this Smart Mode, you can use the cell phone in the simplified operations on the screen displaying the commonly used functions such as the phone, e-mail and camera.

## [Page 5: Manner Mode And Voice Memo .....3](#)

Manner Mode and Voice Memo Manner Mode Voice Memo You can use manner mode to turn When you cannot answer calls, off the incoming call ring tone and the cell phone can play an other tones so as not to answering message (Japanese) inconvenience other people.

## [Page 6: Do Not Use The Cell Phone While Driving! .....4](#)

Do not use the cell phone while driving! Holding a cell phone, talking on a cell phone or looking at a cell phone display to send mail or perform some other operations while driving is against the law in Japan. (Revised Traffic Control Law, effective November 1, 2004) ×Looking at mail on a ×Holding a cell phone in...

## [Page 7: Spam And One-Ring Calls.....5](#)

Spam and One-ring Calls If you receive spam: You can set the mail filters to reject only specific mail or mail indicated by □□□□\* (Unsolicited Advertisement), which often tends to be spam. The following mail filters are available for rejecting spam: Danger! □□□□□□□□□□...

## [Page 8: Disaster Message Board Service .....6](#)

Disaster Message Board Service About Disaster Message Board When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet. ●When a big scale disaster occurs, you can use au phone to register your safety information Registering such as your condition or comments to...

[Page 9](#) Top display of the Disaster Safety information Message Board registration display □ □ □ □ □ □ □ □ □ □ for registration □ □ □ □ □ □ ~ □ □ ~ □...

## [Page 10: Table Of Contents](#)

Contents ● Introduction ● Cell Phone Etiquette Etiquette for Cell Phone Use .....1 ● Cell Phone Basics Cell Phone Features .....2 Manner Mode and Voice Memo .....3 Checking the Power, Signal Strength, and Battery Level .....3 Do not use the cell phone while driving! .....4 Spam and One-ring Calls.....5 Disaster Message Board Service .....6 ●...

[Page 11](#) ● Character Input Character Entry Modes .....29 Entering Single-byte Alphanumeric Characters .....29 Entering E-mail Addresses .....31 ● Phone Book Saving a Phone Book Entry .....33 Dialing from the Phone Book.....36 ● Pair Function Registering a Pair Person .....37 Making a Call to a Pair Person (One-touch Calling) .....38 Sending an E-mail Message to a Pair Person .....38 ●...

## [Page 12: Getting Ready](#)

Checking the Contents of the Box The box contains the cell phone and accessories. □ Cell phone □ Battery pack (attached to the cell phone) □ Desktop holder □ Toshiba AC adapter 02 □ Basic Manual (Japanese) □ Instruction Manual (Japanese) □□ □□□□ □□□□□□□□□□...

## [Page 13: Names Of Parts .....11](#)

Note Note □The antenna of the A5517T is built into its case. Touching or covering the area around the built-in antenna may weaken a signal. In particular, do not affix any stickers or other

decorations in the area around the...

**Page 14: Charging The Battery Pack .....12**

Confirm that the charge indicator lights red. Charging: The charge indicator lights red. Charging finished: The charge indicator goes out. If you turn on the power of A5517T and charge the battery pack, A5517T beeps when it starts or finishes charging. Note Note Hold the desktop holder while removing the A5517T from it.

**Page 15: Turning On Power .....13**

Turning On Power S for at Hold down least one second. Standby screen Check the signal strength. Strong Medium Weak Very weak Out of range You cannot receive or make calls if displayed. Check the battery level. Very low Full (requires...

**Page 16: Learning The Basics .....14**

Learning the Basics Key Assignments D Incoming C Outgoing History History J Camera K Phone Book L E-mail M EZweb Q Make and R Voice memo answer calls; setting/canceling; use the Pair character delete; function operation canceling 0~9\*# S Power on/off; Phone number end call and character...

**Page 17: Soft Keys**

Warp Function Key Use the up, down, left, and right parts of the key to select items and to move the cursor. Press the center of the key to confirm a selected item. Selects items, and moves the cursor up, ...

**Page 18: Personal Identification Numbers And Passwords .....16**

Personal Identification Numbers and Passwords You can use the personal identification numbers and passwords described below to restrict use of your A5517T. Take care not to forget the numbers and passwords, because they are required for performing various operations and using subscription services.

**Page 19: Switching The Display Language To English .....17**

Switching the Display Language to English You can switch the display language for function names and other items to English. Before Setting the Display Language: Switching to the Normal Mode Set the display language in the Normal Mode. Exit Smart Mode by following operations to switch to the Normal Mode first.

**Page 20** Switching the Display Language to English (continued) Press 5 Set Language. The Set Language menu appears. Use G to select English, and then press @ (Select). Use G to select Alphabet, and then press @ (Select).

**Page 21: Indicators .....19**

Indicators Display indicators keep you informed when a new e-mail message arrives, about the status of function settings, etc. Indicator Description Indicates signal strength. Indicates battery level. Indicates that EZweb is in use.

**Page 22: Using Smart Menu .....20**

If the alert window is displayed on the standby screen Use G to select the item, and then press @ to display the contents. Alert window Description Indicates the number of unanswered calls. INFORMATION Indicates the number of received ...

**Page 23** Smart menu When the standby screen is displayed, press @. Use G to select an item. Press @ (Select).

**Page 24: Initializing E-Mail And Ezweb .....22**

Initializing E-mail and EZweb To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial



[Page 37](#) Press J (Add). The data is saved to the phone book. Note Note To save a phone number from the incoming or outgoing history to the phone book: Press J ( under "Redialing (Outgoing Add) in the screen of Step History/Incoming History)"...

### [Page 38: Dialing From The Phone Book](#)

Dialing from the Phone Book When the standby screen is displayed, press @. Use G to select Call, and then press @ (Select).  
...

### [Page 39: Pair Function](#)

Pair Function You can register a maximum of three pair persons you contact often to easily call or send mail. Registering a Pair Person When the standby screen is displayed, press Q. ...

### [Page 40: Making A Call To A Pair Person \(One-Touch Calling\) .....38](#)

Making a Call to a Pair Person (One-touch Calling) Example: Making a call to pair person No.1 When the standby screen is displayed, hold down 1 for at least one second. When you make a call to pair person No.2, hold down 2 for at least one second.

### [Page 41: Mail](#)

Mail EZweb Subscription Required Using E-mail To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

[Page 42](#) Creating and Sending E-mail Messages (continued) Use G to select Create Mail, and then press @ (Select). Use G to select See Phone Book, and then ...

[Page 43](#) Enter the text of the message, and then press @ (OK). Press J (Send). The e-mail message is sent. ...

### [Page 44: Reading Received E-Mail Messages .....42](#)

Reading Received E-mail Messages When the standby screen is displayed, press @. Use G to select Mail, and then press @ (Select). Use G to select E-mail, and then press ...

### [Page 45: Viewing A Received Message](#)

Use G to select a message you want to read, and then press @ (Select). Viewing a Received Message Message subject Time and date ...

### [Page 46: Using C-Mail.....44](#)

Using C-mail C-mail is a service that makes it possible to exchange messages between two au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters. Subscribers in the Kanto and Chubu areas do not need a separate subscription to use c-mail.

### [Page 47: Creating And Sending C-Mail Messages.....45](#)

Creating and Sending C-mail Messages When the standby screen is displayed, press @. Use G to select Mail, and then press @ (Select). Use G to select C-mail, and then press ...

[Page 48](#) Creating and Sending C-mail Messages (continued) Use G to select See Phone Book, and then press @ (Select). Use E to select an addressee, and then press @ (Select). ...

## [Page 49: Camera](#)

Photo Shooting Tips When shooting photos, frame the subject within the display and hold the A5517T steady with both hands to avoid shaking. Photo Mail- or Wallpaper-size Shooting Mode Digi Camera-size Shooting Mode Orient the A5517T...

## [Page 50: Taking A Photo .....48](#)

Image Sizes ● ① ● ② ● ③ ① Photo Mail □144 (W) x 176 (H) dots ② Wallpaper □240 (W) x 320 (H) dots ③ Digi Camera (SXGA) □1,280 (W) x 960 (H) dots Taking a Photo When the standby screen is displayed, press Use G to select...

[Page 51](#) Point the lens at the Preview screen subject, and then press @ (Shot) or T (side key 2). The photo you have just recorded appears (preview □-□□□□ □□□□ screen). Saving a Photo Press @ (Save). Viewing the Photos You Have Recorded When the standby screen is displayed, press @.

## [Page 52: Attaching Photos To E-Mail Messages .....50](#)

Attaching Photos to E-mail Messages While the preview □□□□ □□□□ □□□□ □□□□ □□□□ screen is displayed □□□□ □□□□ □□□□ □□□□ □□□□ after shooting a photo, □□□□ press J (E-mail). The photo is saved and the list of input methods for e-mail addressee appears.

## [Page 53: Ezweb](#)

EZweb EZweb Subscription Required What is EZweb? EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku- ®, news, and other data from information web pages. To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

[Page 54](#) EZ Top menu au style Introduces information and sites that au ① □□□□□□□□□□ recommends. □□ □□□□□ ① □□□□□□ □△△□□□△△ ② Presents gifts and push information to □□□□□□ ② the EZweb subscriber for free. ...

## [Page 55: Accessing Sites](#)

Accessing Sites Use G to select the site you want to access, and then press @ (Select). Press D or R to return to the previous screen. Hold down either key for at least one second to return to the EZ Top menu. Select the Select the EZ Top menu...

## [Page 56: Downloading Chaku-Uta](#)

® Downloading Chaku-Uta Display the EZ Top menu. □□□□□□□□□□ □□ □□□□ (See page 51) □△△□□□△△ □□□□□□ □□□□ □□□□□□□□ □□ □△△□□□△△ □□□□□□ □□ Use G to select □□□...

[Page 57](#) Follow the instructions □□□□□□□□□□□□ □□□□□□□□ □□□□□□□□ that appear on the display. □□□□ Press J (Play). □□□□□□□□ Downloaded data is saved automatically to the Data Folder. Setting the Downloaded Chaku-Uta ® as an Incoming Call Ring Tone, press @ (Add). During playback of the Chaku-Uta ®...

## [Page 58: Other Functions](#)

Other Functions In addition to the functions covered in this Basic Manual, the A5517T also has the following features in the Smart Mode. Setting Standby Screen Image You can change the wallpaper or clock on the standby screen as you like.

## [Page 59: Troubleshooting](#)

Is manner mode turned on? but the ring tone one second to turn off manner mode. does not play. Cannot charge the Is the Toshiba AC adapter 02 Insert the adapter in the power outlet battery pack. plugged into a power outlet? properly.

[Page 60](#) Index .....54 Downloading Chaku-Uta ® Accessories .....10 Adjusting the earpiece volume ...27 E-mail.....39 Antenna .....11 Attaching photos .....50 Creating and sending .....39 Initial settings.....22 Battery level .....13 Reading .....42 Battery pack .....10,11,12

Received mail .....42 Replying .....43 E-mail address .....23  
Camera .....47 Changing .....24 Image size .....48...

[Page 61](#) Making .....27 Redialing .....28 Key assignments  
.....14 Phone book .....33 Dialing.....36 Saving  
.....33 Language .....17 Saving a phone number from Launcher  
menu .....20 incoming or outgoing history ..35 Learning the basics .....14 Phone  
number .....23 Loud Volume .....27 Photos Attaching to e-mail .....50  
Taking .....48 Viewing .....49 Mail...

[Page 62](#) OKINAWA CELLULAR TELEPHONE COMPANY Cellphone and PHS operators collect and  
recycle unused telephones, batteries and Manufactured by: battery chargers at stores bearing  
the logo regardless of brand and TOSHIBA CORPORATION manufacturer to protect the  
environment and reuse valuable resources. November 2005 Edition...