

Construction Views - Toshiba RAS-B10SKVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119

Table Of Contents

 120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



4-1. Indoor Unit

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

Front panel

55

Knockout system

Installation plate hanging section

Center line of main unit

More user manuals on

4. CONSTRUCTION VIEWS

Plasma pure filter

Indoor heat exchanger


54.5

60

Installation plate hanging section

Connecting pipe (Outside length: 0.4m)

Flare $\varnothing 9.52$ (B16SKVP-E: $\varnothing 12.7$)

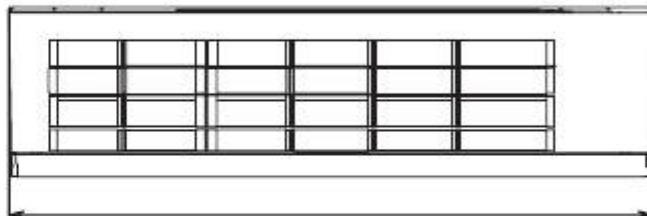

Hanging section

91

10

10

(

Minimum distance

)

to wall

140 or more

Lower part

hanging section

91

304

ManualsBase.com

790

Air filter

790

60

290

Drain hose

(Outside length: 0.54m)

Connecting pipe

(Outside length: 0.45m)

Flare $\varnothing 6.35$

674

450

288

10

10

(

)

Minimum distance

to ceiling

(

74 or more

Outline of

installation plate

304

91

790

- 17 -

208

65

Knockout system

Remote controller holder

64

54.5

Wireless remote controller

58

Part of Remote controller

WH-H04JE

25

Stud bolt hole for $\varnothing 6$

Stud bolt hole for $\varnothing 8$ to $\varnothing 10$

)






Minimum distance

to wall

Center line of installation plate

5

19

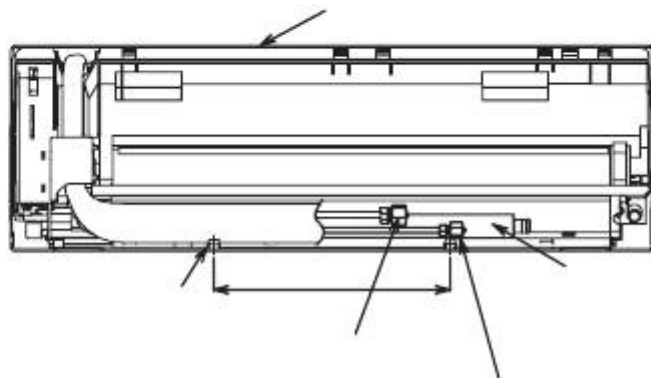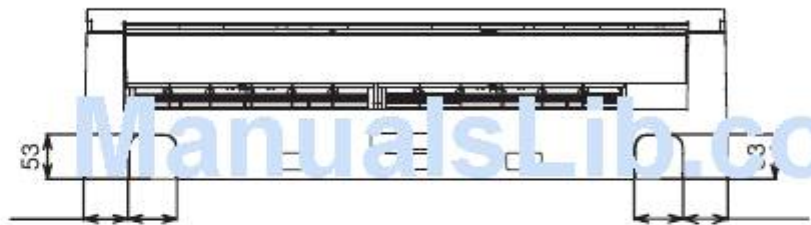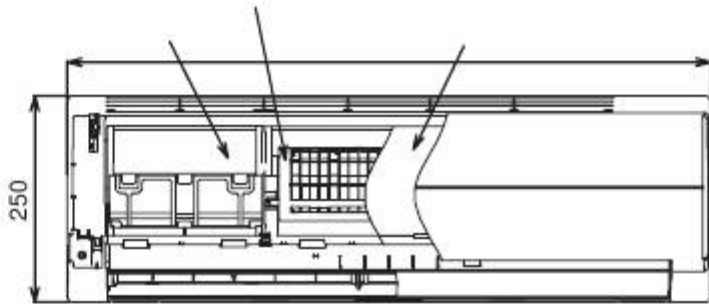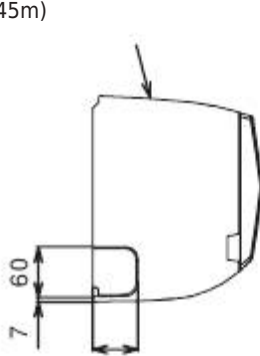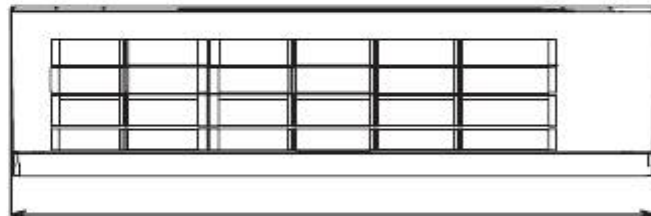

[Previous Page](#)
[Next Page](#)

1
...
14
15
16
17
18
19
20
21

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

[Clean Operation](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVP-G-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-2M10G3AVG-E Construction Views](#)

Toshiba RAS-2M10G3AVG-E

[RAS-5M34G3AVG-E Construction Views](#)

Toshiba RAS-5M34G3AVG-E

[MMU-UP0031YHP-ETR Construction Views \(External Views\)](#)

Toshiba MMU-UP0031YHP-ETR

[RAV-GV1101AT8P-TR Construction Views \(External Views\)](#)

Toshiba RAV-GV1101AT8P-TR

[Carrier MMU-UP0151YHP-UL Construction Views \(External Views\)](#)

Toshiba Carrier MMU-UP0151YHP-UL

[MCY-MHP0806HT8-C Series Construction Views](#)

Toshiba MCY-MHP0806HT8-C Series

[Carrier TCB-IFDMR01UP-UL Construction Views \(External Views\)](#)

Toshiba Carrier TCB-IFDMR01UP-UL

[RAV-GM562ATP-TR Construction Views \(External Views\)](#)

Toshiba RAV-GM562ATP-TR

This manual is also suitable for:

[Ras-b13skvp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-nd](#) ... [Show all](#)