

 
Louver Control - Toshiba RAS-B10SKVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
Table Of Contents
120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



blowing

3) Swing

More user manuals on

Operation flow and applicable data, etc.

This function controls the air direction of the indoor unit.

- The position is automatically controlled according to the operation mode (COOL/HEAT).
- The set louver position is stored in memory by the microcomputer, and the louver returns to the stored position when the next operation is performed. (Cooling/heating memory position)

The angle of the louver is indicated as the horizontal angle is 0°.

When the louver closes fully, it directs approx. 28° upward.

1) Louver position in cooling operation

"Cooling storage position"

Louver : Directs downward (23°)

2) Louver position in heating operation

Powerful

"Heating storage position"

Louver :

Directs downward (81°)

3) Louver position in dry operation

Only when the operation frequency is COOL Min-Hz under condition of Room temp. (Ta) < Set temp. (Tsc) +1.0

Louver : Directs downward (8°)

Air direction

Inclined

Blowing

blowing

downward

- Swing operation is performed in width 35° with the stop position as the center.

- If the stop position exceeds either upper or lower limit position, swing operation is performed in width 35° from the limit which the stop position exceeded.

ManualsBase.com

Powerful

SLEEP MODE operation

In case that the following temp. is obtained during 12 minutes or 12 to 25 minutes from start of heating operation:

Room temp. (Ta) < Set temp. (Tsc) -3.0

"Heating storage position"

Louver : Directs downward (81°)

Inclined

Horizontal

blowing

blowing

- 37 -

Description

Louver angle

SLEEP MODE operation

Louver : Directs downward (8°)

In case that the following temp. is obtained during 12 to 25 minutes from start of heating operation:

 


Room temp. (Ta) > Set temp. (Tsc) -3.0

-

or when 25 minutes or more passed from start of heating operation

"Cooling storage position"

Louver : Directs downward (23°)

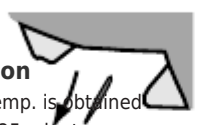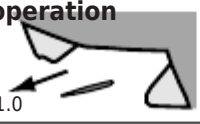

• The louver position can be arbitrarily set up by pushing [FIX] button.

• Swing

When pushing [SWING] button during operation, the louver starts swinging.

Horizontal
(0°)

Table of Contents

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

[Clean Operation](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVP-G-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-10S3AV-E Louver Control](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Louver Control](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Louver Control](#)

Toshiba RAS-18S3KV-E

[RAS-M07N4KVRG-E Louver Control](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Louver Control](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Louver Control](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Louver Control](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E Louver Control](#)

Toshiba RAS-B05BKVG-E

This manual is also suitable for:

[Ras-b13skvp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-nd](#) ... [Show all](#)