

Cord Heater Control (-Nd Model Only) - Toshiba RAS-B10SKVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119

Table Of Contents

 120



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Item

21. Cord heater control
(-ND model only)

More user manuals on

~~Operation flow and applicable data, etc.~~

<Base plate cord heater control>

TO temp.

9°C

When TO sensor is defective, turn off normal heater output. When COOL thermostat is ON, turn off the heater output.

ManualsBase.com


Heater output

OFF

4°C

ON

(Equivalent to 75W)

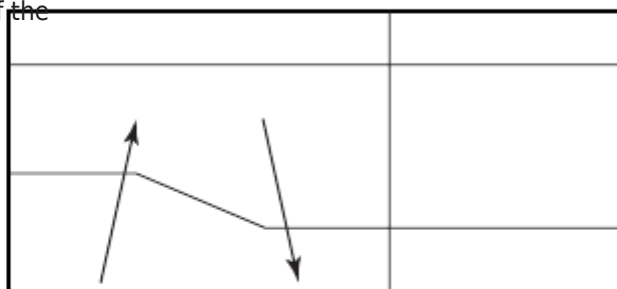

Description

1. Purpose

Base plate freeze prevention of the outdoor unit

2. Operation

As shown in the left figure, the base plate freeze preventive heater is controlled by temperature of the outside temp. sensor (TO).

[Table of Contents](#)

1
...
46
47
48
49
50
51
52
53

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

[Clean Operation](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVP-G-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-10PKVPG-NZ Cord Heater Control](#)

Toshiba RAS-10PKVPG-NZ

[RAS-25J2KVSG-ND Cord Heater Control](#)

Toshiba RAS-25J2KVSG-ND

[RAS-25PKVSG-ND Cord Heater Control](#)

Toshiba RAS-25PKVSG-ND

[RAS-25N4KVRG-ND Cord Heater Control](#)

Toshiba RAS-25N4KVRG-ND

[RAS-25PAVPG-ND Cord Heater Control](#)

Toshiba RAS-25PAVPG-ND

[RAS-09EKV-UL Cord Heater Control](#)

Toshiba RAS-09EKV-UL

[RAS-15EKV-UL Cord Heater Control](#)

Toshiba RAS-15EKV-UL

[RAS-15EKV-UL Cord Heater Control](#)

Toshiba RAS-15EKV-UL

This manual is also suitable for:

[Ras-b13skvp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-nd](#) ... [Show all](#)