



Toshiba A5516T Basic Manual


1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106



•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

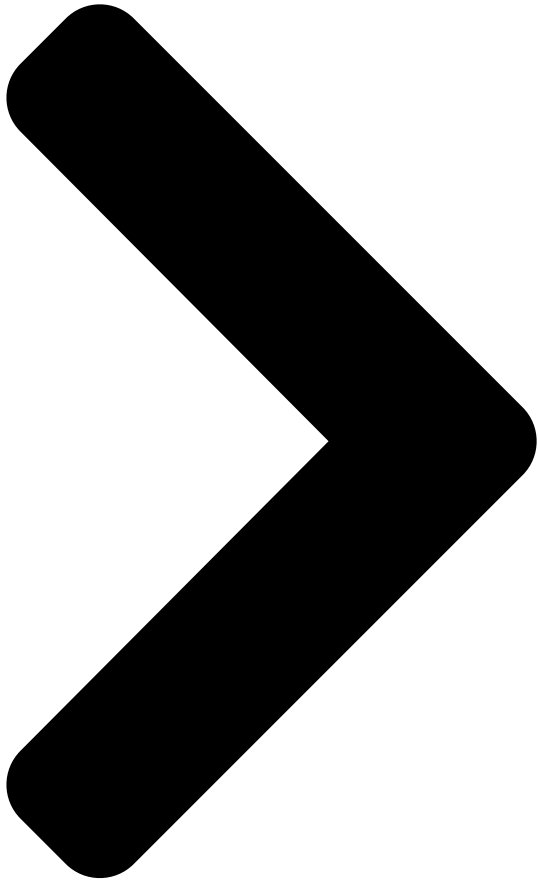

Basic

Manual

A5516T

- Contents/
- Getting Ready
- Making and Answering Calls
- Character Input
- Phone Book
- Pair Function
- Mail
- Camera
- EZweb
- EZ Navi
- Limit Mode
- Smart Mode
- Others/Index



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba A5516T

[Cell Phone Toshiba A5517T Basic Manual](#)

(62 pages)

[Cell Phone Toshiba A5509T Basic Manual](#)

(102 pages)

[Cell Phone Toshiba A5523T Basic Manual](#)

Au by kddi (118 pages)

[Cell Phone Toshiba PORTEGE G910 User Manual](#)

(13 pages)

[Cell Phone Toshiba W45T Basic Manual](#)

(126 pages)

[Cell Phone TOSHIBA TS10 User Manual](#)

Toshiba mobile phone (83 pages)

[Cell Phone Toshiba Regza ISO4 Basic Manual](#)

Toshiba regza is series mobile phone basic manual (79 pages)

[Cell Phone Toshiba VM4050 User Manual](#)

Pcs vision phone (249 pages)

[Cell Phone Toshiba SG4-E01 User Manual](#)

(33 pages)

[Cell Phone Toshiba Portege G710 User Manual](#)

Toshiba cell phone user guide (140 pages)

[Cell Phone Toshiba 2032SP Online User's Manual](#)

Dual-band pcs phone (106 pages)

[Cell Phone Toshiba G500 User Manual](#)

Toshiba cell phone user manual (123 pages)

[Cell Phone Toshiba T-01B User Manual](#)

(176 pages)

[Cell Phone Toshiba W53T Manual Manual](#)

Cdma 1x win (93 pages)

[Cell Phone Toshiba TX80 User Manual](#)

Toshiba cell phone user manual (145 pages)

[Cell Phone Toshiba RG4-E01 User Manual](#)

(120 pages)

Summary of Contents for Toshiba A5516T

[Page 1](#) Basic Contents/ Getting Ready Manual Making and Answering Calls Character Input Phone Book Pair Function Mail Camera EZweb EZ Navi Limit Mode Smart Mode A5516T Others/Index...

[Page 2](#) Introduction Thank you for purchasing the A5516T. Before using your A5516T, be sure to read the A5516T Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

[Page 12: Getting Ready](#)

Checking the Contents of the Box The box contains the cell phone and accessories. □ Cell phone □ Battery pack (attached to the cell phone) □ Desktop holder □ Toshiba AC adapter 02 □ Basic Manual (Japanese) □ Instruction Manual (Japanese) □□ □□□□...

[Page 13: Names Of Parts](#)

.....11

Names of Parts Incoming indicator (green) Charge indicator (red) Sub display Earpiece Mobile light Camera (lens) Built-in antenna Display Speaker Battery pack cover (for built-in battery pack) Application key Warp function key Side key 1 Camera key/ Side key 2 Soft key 1 Phone book key/Soft key 2 Mail key...

[Page 14: Charging The Battery Pack](#)

.....12

Confirm that the charge indicator lights red. □Charging: The charge indicator lights red. □Charging finished: The charge indicator goes out. If you turn on power to A5516T and charge the battery pack, A5516T beeps when it starts or finishes charging. Note Note □Hold the desktop holder while removing the A5516T.

[Page 15: Built-In Antenna](#)

.....13

Built-in Antenna The antenna of the A5516T is built into its case. Built-in Note Note antenna □Touching or covering the area around the built-in antenna may weaken a signal. In particular, do not affix any stickers or other decorations in the area around the built-in antenna.

[Page 16: Learning The Basics](#)

Learning the Basics Key Assignments D □Incoming History C □Outgoing History □Camera □Phone Book □E-mail □EZweb Q □Make and answer R □Voice memo calls; use the Pair setting/cancel; function character delete; operation cancel 0~9□*□# S □Power on/off; end □Phone number and call character input P □EZapps startup...

[Page 17: Soft Keys](#)

Warp Function Key Use the up, down, left, and right parts of the key to select items and to move the cursor. Press the center of the key to confirm a selected item. Selects items, and moves the cursor up, down, □...

[Page 18: Personal Identification Numbers And Passwords](#)

.....16

Personal Identification Numbers and Passwords You can use the personal identification numbers and passwords described below to restrict use of your A5516T. Take care not to forget the numbers and passwords, because they are required for performing various operations and using subscription services.

[Page 19: Configuring Initial Settings](#)

.....17

Configuring Initial Settings Initial menu When the standby screen is □□□□ displayed, press @. □□□□□□ □□□□□□ □□□□ □ □□□□□ □□□□□□□□□□ □□□□□□□□□□ Press 3 □□□□□ (Do Not Launcher menu Setup). Note Note □Even if you do not configure the initial settings, you can still make and answer calls. □The initial settings include changing the lock number, setting the character size, setting the Notify Call ID, and setting the call ring tone.

[Page 20: Switching The Display Language To English](#)

.....18

Switching the Display Language to English You can switch the display language for function names and other items to English. When the standby screen is displayed, press @. aThe Launcher menu appears. Use E to select □□□□□□ □ □ □□ □□...

[Page 21: Using Menus](#)

Use G to select Alphabet and then press @ (Select). The display language is set to English. Using Menus Launcher Menu The Launcher menu provides you with access to various A5516T functions. The Launcher menu contains the following items. Voice Recorder Data Folder Limit Mode...

[Page 22: Option Menus](#)

Using Menus (continued) Use E to select an item. Press @ (Select). The item selected in the Launcher menu appears. Note Note Alert window If the alert window is displayed on the standby screen, select ...

[Page 23: Indicators](#)

.....21

Indicators Display indicators keep you informed when new e-mail arrives, about the status of function settings, etc. ① ② ③ ④ ⑤ Indicator Description ① Indicates signal strength. ② Indicates battery level. ③ Indicates that EZweb is in use. ④ ...

[Page 24: Initializing E-Mail And](#)

[Ezweb](#).....22

Initializing E-mail and EZweb To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

[Page 25: Changing Your E-Mail Address](#)

.....23

Changing Your E-mail Address You can change the account name part of the E-mail address e-mail address as indicated to the right. $\Delta\Delta\Delta$ @ezweb.ne.jp Part you can change Domain name When the standby screen is displayed, press L and then ...

[Page 26](#) Changing Your E-mail Address (continued) Use G to select the entry box, press @ (Edit), and enter an e-mail address using single-byte alphanumeric characters. For details on entering e-mail addresses, see page 39. Press @ (OK), use G to ...

[Page 27: Using Extra Large Characters](#)

.....25

Using Extra Large Characters Turning on extra large characters will display the names of callers and addressees on the Call Screen, the phone book list, etc. When the standby screen is displayed, press @. The Launcher menu appears. Use E to select Function and ...

[Page 28: Making And Answering Calls](#)

Making and Answering Calls Making a Call When the standby screen is 0 to 9 to displayed, use enter the phone number you want to call. When calling to a regular phone, you also need to enter the area code even in the same area.

[Page 29: Answering A Call](#)

.....27

Answering a Call To answer a call, press Q. When you have finished the call, press S. Display When a Call is Received The phone number of the caller appears. If the caller's phone number and name are in your phone ...

[Page 30: Redialing \(Outgoing History/Incoming History\)](#)

.....28

Redialing (Outgoing History/Incoming History) Example: Returning a call to a phone number in

the incoming history When the standby screen is displayed, press C. Pressing C while the standby screen is displayed displays the Outgoing Call History.

[Page 31: One-Ring Calls](#).....29

One-ring Calls What is a One-ring Call? A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get the receiver to return the call, which will connect you to a dating service or some other service that charges caller at high rates.

[Page 32: Turning On Manner Mode](#).....30

Turning On Manner Mode The cell phone informs you of a call by vibrating. When the standby screen is displayed, hold down T (side key 2) for at least one second. ...

[Page 33: Turning On Voice Memo](#).....31

Turning On Voice Memo When the standby screen is displayed, hold down R for at least one second. The answering message (Japanese) is played, then voice memo is turned on, which is indicated by on the standby screen.

[Page 34: Playing A Voice Memo](#).....32

Playing a Voice Memo If a voice memo is recorded, the number of memos appear on the standby screen. INFORMATION and the number of memos appear on the standby screen. ...

[Page 35: Changing The Incoming Ring Tone](#).....33

Changing the Incoming Ring Tone When the standby screen is displayed, press @. The Launcher menu appears. Use E to select Function and then press @ (Select). The Fixed Pattern menu appears. ...

[Page 36](#) Changing the Incoming Ring Tone (continued) Use G to select Fixed Pattern and then press @ (Select). The Fixed Pattern menu appears. ...

[Page 37: Adjusting The Incoming Ring Tone Volume](#).....35

Adjusting the Incoming Ring Tone Volume When the standby screen is displayed, press @. The Launcher menu appears. Use E to select Function and then press @ (Select). ...

[Page 38: Adjusting The Earpiece Volume During A Call](#).....36

Adjusting the Incoming Ring Tone Volume (continued) Use G to adjust the volume and then press @ (OK). Each press of G changes the volume one step. After a vibration alert, the ring tone sounds while gradually increasing in volume. STEP DOWN The ring tone sounds while gradually decreasing in volume.

[Page 39: Character Input](#)

Character Input Character Entry Modes When a character entry screen is displayed, you can select the character entry mode if you press J. Menu Items

■ Kanji conversion mode Double-byte alphanumeric mode

Page 40: Deleting Characters

Entering Two or More Characters Assigned to the Same Key After you enter the first character, press C to move the cursor (■) to the right and then enter the next character. Example: Entering "ab" Press 2 once. Press C once.

Page 41: Entering E-Mail Addresses.....39

- Two or more periods (.) cannot be used in succession. - Zero (0) cannot be used as the first character. How to Enter E-mail Addresses Use 1 to 0 to enter characters and numbers. Example: Entering "taro.23@toshiba.co.jp" for the recipient's e-mail address Enter "taro.23".

Page 42 Entering E-mail Addresses (continued) Press J (abAB) and then press # Phrase. The category list appears. Use G to select Internet and then press @ (Select).

Page 43: Entering Pictograms.....41

Entering Pictograms When a character entry screen is displayed, press J (abAB). The character entry mode menu appears. You can also enter symbols, emoticons, ...

Page 44: Phone Book

Phone Book Saving a Phone Book Entry New screen Hold down K for at least one second.

Page 45 Use G to select a phone class and then press @ (Select). The New screen reappears. Follow the next two steps to enter an e-mail address. If you do not want to enter an e-mail address, proceed to Step 8.

Page 46: Dialing From The Phone Book.....44

Dialing from the Phone Book When the standby screen is displayed, press K to display the phone book name list. Use E to select the entry

Page 47: Editing Phone Book Entries.....45

Editing Phone Book Entries Select the entry you want to edit and press @ (Select).

Page 48: Saving A Phone Number From The Incoming Or Outgoing History

Saving a Phone Number from the Incoming or Outgoing History Example: Saving a phone number from the incoming history to the phone book When the standby screen is displayed, press D and use G to select the phone

Page 49: Pair Function

Pair Function You can register a maximum of five pair persons you contact often to easily call or send mail. Registering a Pair Person When the standby screen is displayed, press

Q. The pair person screen appears. -...

[Page 50: Making A Call To A Pair Person](#)
.....48

Making a Call to a Pair Person When the standby screen is displayed, press Q. aThe pair person screen appears. - -
 Use F to select the person you want to call. ...

[Page 51: Sending A Mail To A Pair Person](#)
.....49

Sending a Mail to a Pair Person When the standby screen is displayed, press Q. aThe pair person screen appears. - -
 Use F to select the person you want to send a mail.
...

[Page 52: Mail](#)

Mail EZweb Subscription Required Using E-mail To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

[Page 53: Creating And Sending E-Mail Messages](#)
.....51

Creating and Sending E-mail Messages When the standby screen is and then displayed, press press 1 Create New.
aThe Create Mail screen appears. Use G to select To and then ...

[Page 54](#) Creating and Sending E-mail Messages (continued) Use G to select Subject and then press @ (Select). aThe Subject entry screen appears.
 Enter a subject and then press @ (OK).
...

[Page 55](#) Press J (Send). aThe Way of Send menu appears. Use G to select Send and - then press @ (Select). aThe animation for sending e-mail is displayed and the e-mail message is ...

[Page 56: Reading Received E-Mail Messages](#)
.....54

Reading Received E-mail Messages When you receive an e-mail message
 Email appears on the standby screen along with the number of messages received. ...

[Page 57: Viewing A Received Message](#)

Viewing a Received Message Message subject Time and date the message
 was received Message text
 Sender of the message The e-mail address of _~
Name of attached file, if any the sender may appear ...

[Page 58: Reading An E-Mail Message With An Attached Photo Or Movie](#)
.....56

Reading an E-mail Message with an Attached Photo or Movie Example: Viewing an attached photo Display the e-mail message (page 54).
 _~
Use G to select the file name ...

[Page 59: Rejecting Spam](#)
.....57

Rejecting Spam The setting of mail filters to reject spam is recommended. Setting Mail Filters Mail filters setting screen When the standby screen is displayed, press L.
 aPress 6 E-mail Setup. aPress 3 Other

[Page 69: Recording A Movie](#)
.....67

Recording a Movie When the standby screen is Monitor screen displayed, hold down J for at least one second. aThe monitor screen appears. To turn on the mobile light, press U ...

Page 70 Note Note If you press Q () while the monitor screen is displayed, the key-operation guidance screen will appear for approximately 15 seconds. Movies are saved to the Movie Folder in the Data Folder. If you do not want to save the movie, press R in the preview screen, use G to select Yes, and then press @ (OK).

[Page 71: Viewing Photos Or Movies](#)
.....69

Viewing Photos or Movies Example: Viewing a photo When the standby screen is displayed, press @. aThe Launcher menu appears. Use E to select Data Folder and then press @ (Select).

[Page 72: Attaching Photos Or Movies To E-Mail Messages](#)
.....70

Attaching Photos or Movies to E-mail Messages While the preview screen is displayed after shooting a photo or movie, press J (E-mail). aThe photo or movie is attached to an e-mail message and the Create Mail screen appears. The (Attachment) indicator changes automatically to , indicating that an image has been attached.

[Page 73: Ezweb](#)

EZweb EZweb Subscription Required What is EZweb? EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku-Uta, news, and other data from information web pages. To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

[Page 74: Accessing Sites](#)
.....72

Accessing Sites Displaying the Top Menu Press to select Top Menu. 1 Top Menu.

[Page 75: Viewing The Ez Top Menu](#)
.....73

Viewing the EZ Top Menu You can access EZweb from the Top menu. A variety of useful and fun sites are available on EZweb. au style Introduces information and sites that au recommends. Presents gifts and push information to the EZweb subscriber for free.

[Page 76: Downloading Chaku-Uta](#)

Downloading Chaku-Uta When the Top menu is displayed (page 73), use G to select to select (Category Search) and then press @ (Select). aThe (Category Search) screen appears. Use G to select ...

Page 77 Press J (Play). aThe downloaded Chaku-Uta plays. Downloaded data is saved automatically to the Data Folder. During playback, press @ (Add). aThe Register to where? menu appears. Use G to select the tone you ...

[Page 78: Bookmarking Frequently Accessed Pages](#)

.....76

Bookmarking Frequently Accessed Pages You can save the titles and URLs you often visit, which makes it easy to return to them when you want. When the page you want to visit is displayed, press ☆☆☆☆ to bookmark it. The bookmark is displayed, press ☆☆☆☆... to view the bookmarked pages.

Page 79: Viewing Bookmarked Pages

.....77

Viewing Bookmarked Pages When the standby screen is displayed, press M. The EZ Menu appears. Press 2 Bookmark. The Bookmark list appears. Use G to select the bookmark for the page you want to view and then press @ (Access).

Page 80: Ez Navi

Area Message to inform of your arrival in a specific area When your A5516T enters (or goes out of) a specific area during a predefined time period, Area Message emits an alarm tone and automatically sends a message to another au phone you have specified.

Page 81: Ez Navi Walk For When You Go Out

EZ Navi Walk for when you go out Going-Out Menu EZnaviwalk menu Displays menus that are useful when you are out. My Spot Go Home Select...

Page 82: What You Can Do With Position Search

.....80

What You Can Do with Position Search Position Search enables you to check the location of your child at anytime by simple operations on your A5516T. Two types of services are available in Position Search: Position Search Mail and Auto Position Search.

Page 83: What You Can Do With Area Message

.....81

What You Can Do with Area Message When your child enters (or goes out of) a specific area during a predefined time period, the cell phone he/she carries emits an alarm tone and automatically sends a message to your cell phone. Area Message Features...

Page 84: Using Ez Navi Walk

.....82

Using EZ Navi Walk ①Registering Your Home Location ② Looking Up the Way Home Perform the required procedure in front of your home. out. Note Before use, be sure to configure initial settings. If you have not yet configured initial settings, see page 22.

Page 85: Looking Up The Way Home

.....83

Use G to select Current Point, press @ (Select) to obtain the GPS information, and then press @ (OK). Your current location is registered as your home. Looking Up the Way Home Using this feature makes it easy to navigate from your current location to the location indicated by GPS information you registered as your home using My Spot.

Page 86: Limit Mode

Limit Mode Limit Mode allows parents or superiors to impose limits on how much each function can be used. This helps to prevent overuse of the cell phone by their offspring or subordinates. Restrictions can be placed on incoming and outgoing calls, incoming and outgoing e-mail and c-mail, EZweb use, and EZapps* use.

Page 87

No and then press @ (OK). If you do not want to enter a hint, select Note Note For the hint, enter something that will help to remind you of the password. Example: Password

:20051224 Hint :Day I bought A5516T...

Page 88: Setting The Use Limit.....86

Setting the Use Limit You can configure the cell phone to prohibit outgoing calls and mail send if a monthly use limit amount is exceeded. On the Limit Mode screen (page 84), press 4 Limit ...

Page 89 Use G to select Use Limit and then press @ (Select). Use G to select Call and then press @ (Select).

Page 90: Turning Limit Mode On And Off.....88

Turning Limit Mode On and Off On the Limit Mode screen (page 84), press 5 Limit · Cancel. Back Hint Enter the current Limit Mode password and then press ...

Page 91: Checking The Limit Mode Status Of Use.....89

Checking the Limit Mode Status of Use On the Limit Mode screen (page 84), press 2 This · Last Mth Use. Use G to select Call and ...

Page 92: Smart Mode

Smart Mode Setting Smart Mode enables limited and simplified operations of the phone function, phone book, camera, mail, EZweb and other often-used functions. Entering Smart Mode When the standby screen is displayed, press @. aThe launcher menu appears. Use E to select Smart Mode ...

Page 93: Exiting Smart Mode.....91

Exiting Smart Mode When the standby screen is displayed, press @. aThe Smart menu appears. Use G to select Function and then press @ (Select). aThe Set Function menu appears.

Page 94: Viewing The Smart Menu.....92

Viewing the Smart Menu The Smart menu contains the following items. Call Mail Camera Data Folder Alarm Function My Number Indicator Function Name Description See Phone Book Phone book number recall for dialing See incom hist Calling History recall for dialing See outgo hist Call Add Phone Book...

Page 95 Indicator Function Name Description Volume Call ring tone setting Melody Standby Screen Standby screen setting Character Size Display character size setting Function Manner Mode Normal manner mode setting Voice memo setting Memo Voice recorder recording Exit SmartMode Smart Mode exit (P.91) My Number Display of own phone number and e-mail address...

Page 96: Saving A Phone Book Entry Using Smart Mode.....94

Saving a Phone Book Entry Using Smart Mode When the standby screen is displayed, press K. Use G to select Yes and then press @ (OK). ...

Page 97 Use G to select Input and then press @ (Select). aThe e-mail address input screen appears. If you do not want to enter an e-mail address, press @ (OK) and proceed to Step 8. You can also

use G to select See Sent Hist or See recv hist and enter an e-mail address from there.

[Page 98: Creating And Sending E-Mail/C-Mail Messages In Smart Mode](#)96

Creating and Sending E-mail/C-mail Messages in Smart Mode Example : Creating and sending an e-mail message When the standby screen is [icon] [icon] [icon] displayed, press L. [icon] aThe Select Mail menu appears. Use G to select E-mail and [icon]...

[Page 99](#) Enter a subject and then [icon] [icon] [icon] [icon] press @ (OK). aThe Text entry screen appears. [icon] [icon] [icon] [icon] Enter the text of the message [icon] [icon] [icon] [icon] and then press @ (OK). [icon] [icon] [icon] [icon] ...

[Page 100: Using The Camera In Smart Mode](#)98

Using the Camera in Smart Mode Taking a Photo When the standby screen is [icon] [icon] [icon] [icon] displayed, press J. [icon] [icon] [icon] aThe Camera menu appears. Use G to select Take A Picture and then press @ (Select). ...

[Page 101: Viewing A Photo](#)

Viewing a Photo When the standby screen is displayed, press @. aThe Smart menu appears. Use G to select Data Folder [icon] [icon] [icon] [icon] and then press @ (Select). [icon] [icon] [icon] aThe Data Folder menu appears. ...

[Page 102: Other Functions](#)100

Other Functions In addition to the functions covered in this Basic Manual, the A5516T also has the following features. Only Mail You can send a message with a movie or photo attachment to a specific recipient without opening the A5516T.

[Page 103: Troubleshooting](#)

(silent indicator) displayed on Increase the volume of the not play. incoming call ring tone. the standby screen? Cannot charge the ●Is the Toshiba AC adapter 02 Insert the adapter in the power outlet properly. battery pack. plugged into a power outlet?

[Page 104](#) Index E-mail address22 Accessories10 Changing23 Adjusting the earpiece volume ...36 Entering39 Antenna78,81 Entering characters37 Area Message41 Extra large characters25 Battery level13 EZ Navi Walk79,82 Battery pack10,11,12 Current Mail79...

[Page 105](#) Playback Voice memo32 Mail C-mail60 Position Search78,80 E-mail50 Power supply Manner mode30 Turning off power13 Turning on power13 Movies Attaching to e-mail70 Photo Mail Service.....70 Recording67 Ring tones Viewing69 Changing the type.....33 Changing the volume35 Names of parts11 Signal13...

[Page 106](#) OKINAWA CELLULAR TELEPHONE COMPANY Cellphone and PHS operators collect and recycle unused telephones, batteries and Manufactured by: battery chargers at stores bearing the logo regardless of brand and TOSHIBA CORPORATION manufacturer to protect the environment October 2005 Edition and reuse valuable resources.