

Using The Remote Control Unit - Sanyo KS2432 Instruction Manual

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24



•

-

Troubleshooting

•

Bookmarks



How to Install Batteries

How to Use the Remote

Control Unit

Remote Control Unit

Installation Position

01-201-11EG

Downloaded from

www.Manualslib.com


Using the Remote Control Unit

ACL button

The batteries last about six months, depending on how much you use.

NOTE

the remote control unit. Replace the batteries when the remote control

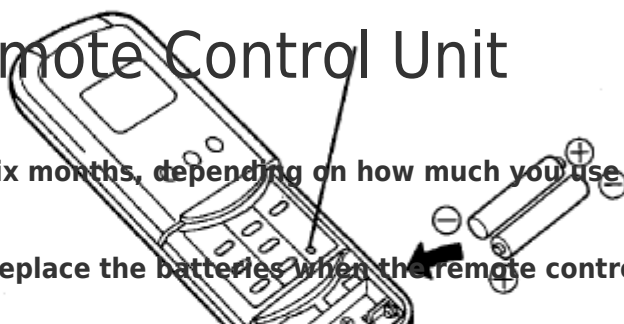

unit's display fails to light, or when the remote control cannot be used to change the air conditioner's settings.

Use two fresh leak-proof type-AAA alkaline batteries.

In replacing batteries, follow the instructions as mentioned in the sub-section "How to Install Batteries".

If you do not use the remote control unit more than 1 month, take out the batteries.

When using the remote control unit, always point the unit's transmitter head directly at the air conditioner's receiver.

**Air conditioner
(Indoor unit)
Remote control
unit**

The remote control unit may be operated either from a non-fixed position or from a wall-mounted position. To ensure that the air conditioner operates correctly, DO NOT install the remote control unit in the following places:

DO NOT

- In direct sunlight
- Behind a curtain or other places where it is covered
- More than 26 ft. away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic noise
- Where there is an obstacle between the remote control unit and air conditioner (since a check signal is sent from the remote control unit every 3 minutes)

manuals search engine

1. Slide the cover in the direction indicated by the arrow and remove it.

2. Install two AAA alkaline batteries.



Make sure the batteries point in the direction marked in the battery compartment.

3. Use a thin object such as the tip of a pen to press the ACL button.

Receiver

(Transmitter head)

11

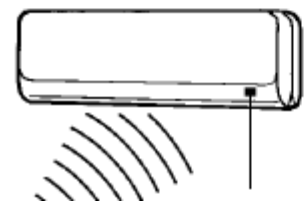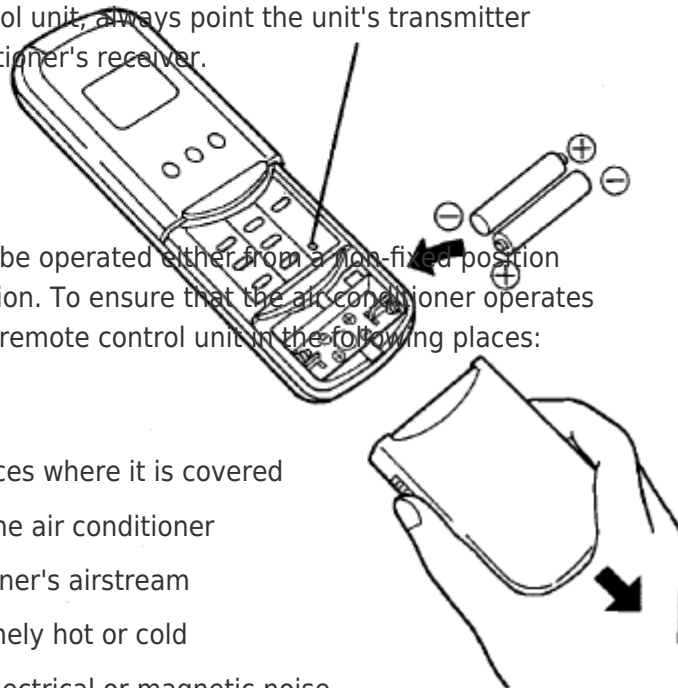

[Previous Page](#)
[Next Page](#)

1
...
8
9
10
11
12
13
14
15

Quick Links:

[Features](#)

[Product Information](#)

[Names of Parts](#)

[Remote Control Unit](#)

[Care and Cleaning](#)

[Troubleshooting](#)

Related Manuals for Sanyo KS2432

[Air Conditioner Sanyo C2432A Installation Instructions Manual](#)

(50 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner cool/fan model (24 pages)

[Air Conditioner Sanyo XS4232 Technical Data And Service Manual](#)

(66 pages)

[Air Conditioner Sanyo C4232 Technical Data & Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

Split system air conditioner (56 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

(54 pages)

[Air Conditioner Sanyo C3032 Service Manual](#)

Split system air conditioner (54 pages)

[Air Conditioner Sanyo TS2432 Service Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo XS2432 Service Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C1852 Service Manual](#)

Split system air conditioner (45 pages)

[Air Conditioner Sanyo XS1822 / CL1822 Service Manual](#)

Split system air conditioner (39 pages)

[Air Conditioner Sanyo PNR-XS2432 Installation Instructions Manual](#)

Split system air conditioner (27 pages)

[Air Conditioner Sanyo 18XLS52 Specifications](#)

Ductless split system air conditioners & heat pumps (3 pages)

[Air Conditioner Sanyo 24XS32A Submittal Sheet](#)

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

[Air Conditioner Sanyo 30KS32A Specifications](#)

Wall mounted air conditioner (3 pages)

[Air Conditioner Sanyo 36TS32A Datasheet](#)

Ceiling suspended air conditioner (3 pages)

Related Content for Sanyo KS2432

[MINI ECO-i XHX1252 Using The Wireless Remote Control Unit](#)

Sanyo MINI ECO-i XHX1252

[SAP-C302AH-S Remote Control Unit Installation Position](#)

Sanyo SAP-C302AH-S

[C2432A How To Install The Remote Control Unit](#)

Sanyo C2432A

[SAP-KM97GHS5A Remote Control Unit Installation Position](#)

Sanyo SAP-KM97GHS5A

[SAP-K91AA Changing Address Of Remote Control Unit In Indoor Unit](#)

Sanyo SAP-K91AA

[SAP-K92A Changing Address Of Remote Control Unit In Indoor Unit](#)

Sanyo SAP-K92A

[SAP-K91AA-S Changing Address Of Remote Control Unit In Indoor Unit](#)

Sanyo SAP-K91AA-S

[SAP-FDRV96EH Using The Remote Control Unit](#)

Sanyo SAP-FDRV96EH

This manual is also suitable for:

[Ts2432Xs1852Xs1822Ts4232Ts3632Ks3632](#) ... [Show all](#)