

Adjusting The Airflow Direction; Operation Without The Remote Control Unit - Sanyo KS2432 Instruction Manual

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24



•

-

Troubleshooting

•

Bookmarks



**Indoor unit
(Wall mounted type)**

 
 
**30°
Zone**

**"A"
for
COOLING
INDOOR UNIT**

**Operation
selector
(Wall mounted type)**

20

Downloaded from
www.Manualslib.com

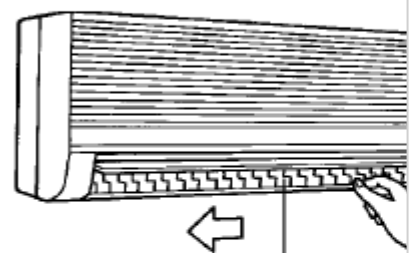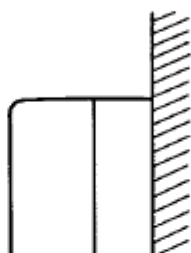

Adjusting the Airflow Direction

A. Horizontal (Wall mounted type only)

 
 
The horizontal airflow can be adjusted by moving the vertical vane to the left or right.

B. Vertical

Confirm that the remote control unit has been turned on. Press the FLAP button to start the flap moving up and down (flap movement and to direct the air in the desired direction, press the FLAP button again. In the COOL mode, don't direct the flap down more than 30° (KS, TS Types), or leave it in the vertical position (XS Type), otherwise condensation may drip onto the floor. Zone "A" (KS, TS Type) and any position other than vertical (XS Type) are the recommended flap positions for cooling.

ON I /OFF
NIGHT
OFF
ON
SETBACK
MODE
CLOCK
FLAP
HH

FAN SPEED
MM
A/C
ACL
TIME SET
SELECT
SENSOR
BATTERIES

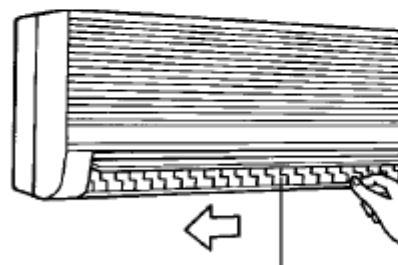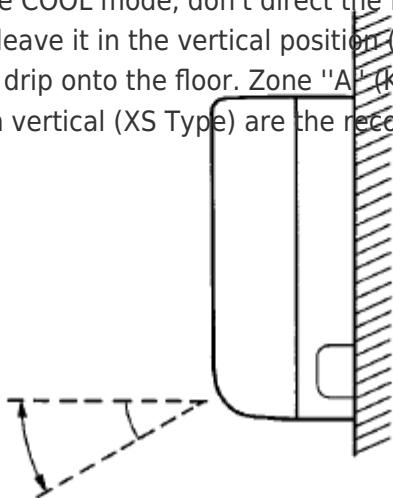

Operation without the Remote Control Unit

ManualsLib.com

If you have lost the remote control unit or it has trouble, follow the steps below.



1. When the air conditioner is stopped.

If you want to turn on the air conditioner, switch the operation selector to the OFF position, and then to the ON position.

 
 
Flap

NOTE

2. When the air conditioner is running.

If you want to turn off the air conditioner, switch the operation selector to the OFF position.

manuals search engine

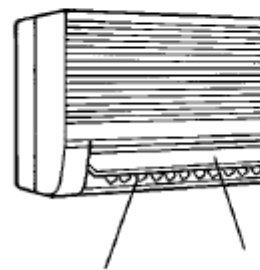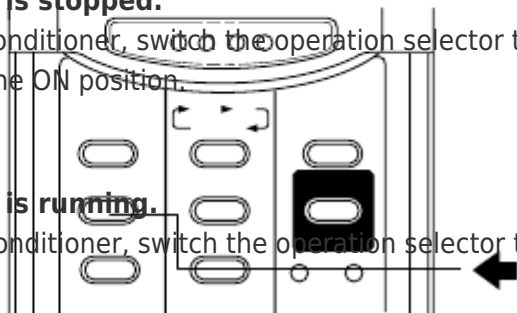

Left

Do not move the flap with your hands.

 
CAUTION

Air outlet grille

The set temperature and fan speed are automatically set at the last selection before stopping.

Right

Vertical



vane

). If you want to stop the

Up

Flap

Down

OI-201-20EG

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
17
18
19
20
21
22
23
24

Quick Links:

[Features](#)

[Product Information](#)

[Names of Parts](#)

[Remote Control Unit](#)

[Care and Cleaning](#)

[Troubleshooting](#)

Related Manuals for Sanyo KS2432

[Air Conditioner Sanyo C2432A Installation Instructions Manual](#)

(50 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner cool/fan model (24 pages)

[Air Conditioner Sanyo XS4232 Technical Data And Service Manual](#)

(66 pages)

[Air Conditioner Sanyo C4232 Technical Data & Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

Split system air conditioner (56 pages)

[Air Conditioner Sanyo KS3032 Service Manual](#)

(54 pages)

[Air Conditioner Sanyo C3032 Service Manual](#)

Split system air conditioner (54 pages)

[Air Conditioner Sanyo TS2432 Service Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo XS2432 Service Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C1852 Service Manual](#)

Split system air conditioner (45 pages)

[Air Conditioner Sanyo XS1822 / CL1822 Service Manual](#)

Split system air conditioner (39 pages)

[Air Conditioner Sanyo PNR-XS2432 Installation Instructions Manual](#)

Split system air conditioner (27 pages)

[Air Conditioner Sanyo 18XLS52 Specifications](#)

Ductless split system air conditioners & heat pumps (3 pages)

[Air Conditioner Sanyo 24XS32A Submittal Sheet](#)

Indoor/outdoor ceiling recessed (4-way) air conditioner (3 pages)

[Air Conditioner Sanyo 30KS32A Specifications](#)

Wall mounted air conditioner (3 pages)

[Air Conditioner Sanyo 36TS32A Datasheet](#)

Ceiling suspended air conditioner (3 pages)

Related Content for Sanyo KS2432

[SAP-FDRV96EH Adjusting The Airflow Direction](#)

Sanyo SAP-FDRV96EH

[SAP-K77GHAX Adjusting The Airflow Direction](#)

Sanyo SAP-K77GHAX

[SAP-K71GJA Adjusting The Airflow Direction](#)

Sanyo SAP-K71GJA

[SAP-K161GJA Adjusting The Airflow Direction](#)

Sanyo SAP-K161GJA

[SAP-KMV91G-S Adjusting The Airflow Direction](#)

Sanyo SAP-KMV91G-S

[SAP-K91A Adjusting The Airflow Direction](#)

Sanyo SAP-K91A

[SAP-URV246EH Adjusting The Airflow Direction](#)

Sanyo SAP-URV246EH

[SAP-K301AH Adjusting The Airflow Direction](#)

Sanyo SAP-K301AH

This manual is also suitable for:

[Ts2432Xs1852Xs1822Ts4232Ts3632Ks3632](#) ... [Show all](#)