


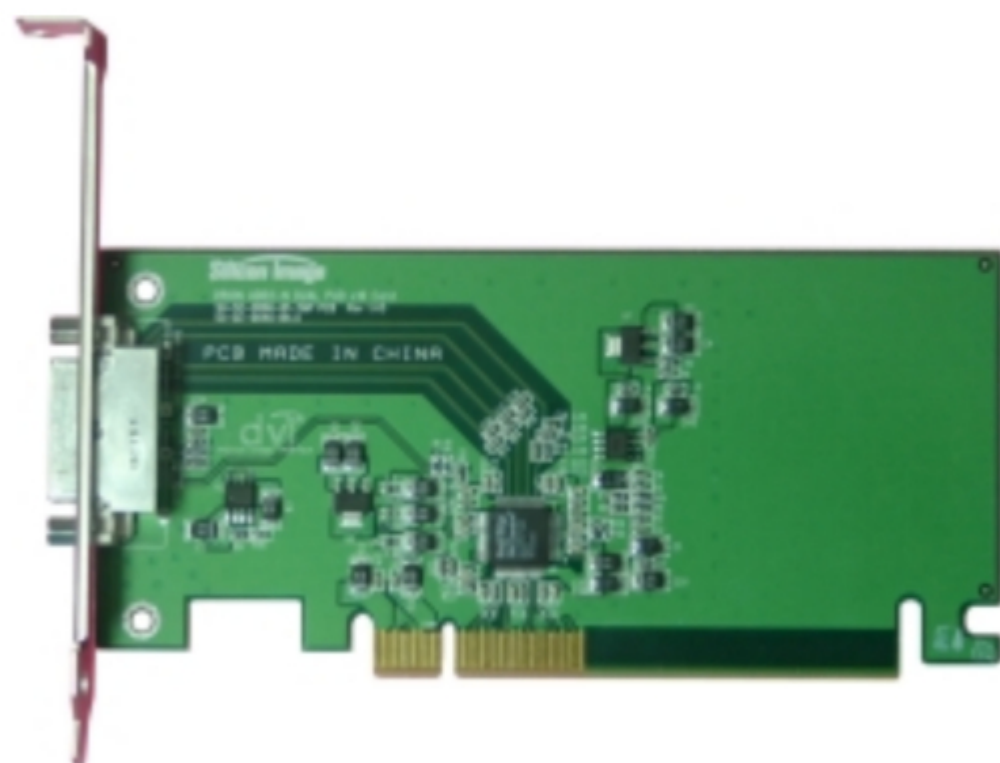

Asus DVI-ADD2 Installation Manual

Pci express digital display card

1
2
3
4
5
6
7
8

Table Of Contents

9

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



E1795

®

DVI-ADD2

PCI Express Digital Display Card

Installation Guide



First Edition
October 2004

ManualsLib.com

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus DVI-ADD2

[PCI Card Asus S370-DL Installation Manual](#)

(8 pages)

[PCI Card Asus Hyper M.2 x16 Gen 4 Quick Start Manual](#)

(10 pages)

[PCI Card Asus XONAR DX Quick Start Manual](#)

Xonar dx quick start guide for english (10 pages)

[PCI Card Asus Xonar DG SI User Manual](#)

Pci 7.1 & headphone amp audio card (52 pages)

[PCI Card Asus PCE-AC56 Quick Start Manual](#)

Dual-band wireless pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus WL-130g User Manual](#)

Wifi-g 54mbps pci ap/wlan adapter (46 pages)

[PCI Card Asus Xonar D1 Quick Start Manual](#)

Pci audio card (10 pages)

[PCI Card Asus PCE-AC55BT Quick Start Manual](#)

802.11ac wireless dual-band with bluetooth 4.0 pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus ROG Xonar Phoebe Quick Start Manual](#)

7.1 channel pci express audio card (73 pages)

[PCI Card Asus PCE-N53 User Manual](#)

Wireless dual-band pci-e card (for 802.11 a/b/g/n wireless networks) (35 pages)

[PCI Card ASUS PCI-SC896 User Manual](#)

2ch. ultra2 pci scsi card (34 pages)

[PCI Card Asus Xonar D-Kara User Manual](#)

Pci 5.1 karaoke audio card (44 pages)

[PCI Card Asus PCI-L101 User Manual](#)

10/100 fast ethernet pci card (28 pages)

[PCI Card Asus NX1001 Quick Installation Manual](#)

Pci fast ethernet adapter (4 pages)

Summary of Contents for Asus DVI-ADD2

[Page 1: Installation Guide](#)

E1795 ® DVI-ADD2 PCI Express Digital Display Card Installation Guide First Edition October 2004...

[Page 2](#) The specifications and information contained in this documentation are furnished for informational use only, and are subject to change at any time without notice, and should not be construed as a commitment by ASUS. ASUS assumes no responsibility or liability for any errors or inaccuracies that may appear in this documentation, including the products and the software described in it.

[Page 3: Package Contents](#)

Welcome! ® Thank you for choosing the ASUS DVI-ADD2! The card is especially designed for

Intel ® Pentium™ 4 systems with Intel 915G chipset and PCI Express x16 slot to support digital visual interface (DVI) output for LCD monitors, flat panel displays, and projectors with DVI capability.

[Page 4](#) 2. Features ® The DVI-ADD2 card features the Silicon Image Sil1362 TMDs™ Panellink display controller that complies with current DVI specifications. The card comes with a 24-pin DVI-D output port that you can connect to LCD monitors and projectors. The DVI-ADD2 card supports: ®...

[Page 5: Card Layout](#)

NOTE. You can adjust the output standard and other graphics configuration using the motherboard BIOS menu. The BIOS options for these configurations may be found in the Advanced Menu > Chipset (for P5GD1-VM and P5GDC-V Deluxe motherboards). Refer to the motherboard user guide for more information. ASUS DVI-ADD2...

[Page 6: Card Installation](#)

• PCI Express x16 slot ® • Windows 98 SE/ME/2000/XP operating system NOTE. The drivers for the DVI-ADD2 card are included in the support CD that came with your Intel ® 915G motherboard. Install the card drivers from the support CD after installing the card to the system.

[Page 7: Installing The Card](#)

4.2 Installing the card Follow these steps to install the DVI-ADD2 card. CAUTION! Before handling the card, touch a bare metal portion of your computer to discharge static electricity from your body. Wear a wrist strap grounded to the computer chassis when handling the card.

[Page 8: Asus Contact Information](#)

+1-510-608-4555 General +1-502-995-0883 E-mail tmd1@asus.com Notebook
+1-510-739-3777 Web site usa.asus.com Support fax +1-502-933-8713 Support e-mail
tsd@asus.com ASUS COMPUTER GmbH (Germany and Austria) Address Harkort Str. 25, D-
Ratingen, Technical Support Germany Telephone +49-2102-95990 Telephone +49-2102-95990
+49-2102-959911 +49-2102-959911 Online Support www.asuscom.de/support Online contact
www.asuscom.de/sales Web site www.asuscom.de/news...