



Toshiba DP5032FS-D Quick Manual

Display handset

1
2

--

•

Bookmarks

[Download this manual](#)

Quick Links



Enlarged version

Handset Key Description

Voicemail Notification Key

Mute Key

Redial Key

Hands free / Loudspeaker Key

Volume Up / Volume Down

Transfer Key

Hold Key

Speed Dial Key

Personal Speed Dials - My Directory

To Program:

Dial # 9876, press the

key, enter speed dial

location 100 - 119, enter 9 + telephone number, press the

key. Enter the name of the speed dial using

the numeric keypad. If you want to erase a character or

create a space, use the LEFT and RIGHT keys in the

display. Press the

key to store the entry then lift

and replace receiver

To Use:

Use:- Press

key and then location 100 - 119 or

use the MY directory as detailed in the "dial by name" section

Additional Guides available at

<http://www.swcomms.co.uk/resource-centre/user-guides-and-manuals>

Service Desk 01392 330033

email:

servicedesk@swcomms.co.uk

Customer Service 01392 315315

email:

customer.service@swcomms.co.uk

Issue 10 24.2.16

Toshiba

Display Handset

(DP5022/32FS-D)

Quick Guide



ManualsLib.com

[Next Page](#)

1

2

Related Manuals for Toshiba DP5032FS-D

[Toshiba DP5032FS-D, DP5022F-SD - Display Handset Quick Guide](#)

(article)

[Telephone Toshiba DP5022F-SD User Manual](#)

Digital business telephone with 4-line lcd display. hearing aid compatible (12 pages)

[Handsets Toshiba Strata AirLink Integrated Wireless Handset User Manual](#)

Toshiba integrated wireless handset user guide (131 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (131 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (132 pages)

[Handsets Toshiba DP5018F-S Quick Manual](#)

Non display handset (2 pages)

[Handsets Toshiba IP4100 SIP DECT User Manual](#)

Ip edge strata cix, sip dect handset (23 pages)

[Handsets Toshiba DP5000 Quick Manual](#)

Supervisor handset (2 pages)

[Handsets Toshiba IP5131F-SDL Quick Manual](#)

Ip edge large display handset (2 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

External wireless handset (48 pages)

Summary of Contents for Toshiba DP5032FS-D

[Page 1](#) LEFT and RIGHT keys in the display. Press the key to store the entry then lift Redial Key and replace receiver Toshiba To Use: Display Handset Hands free / Loudspeaker Key Use:- Press key and then location 100 - 119 or use the MY directory as detailed in the "dial by name"...

[Page 2](#) Basic Call Handling Retrieve a call Retrieve a parked call If you are announcing the call and there is no Dial #32 followed by the extn number where call response from the extn, press the green flashing was parked to retrieve the call Answer a call Lift receiver or press key to answer call...

This manual is also suitable for:

[Dp5022fs-d](#)