

TOSHIBA

Toshiba A3030D series Manual

1
2

--

•

Bookmarks

--

[Download this manual](#)

Quick Links



VX1A00047500

Simple at-a-glance reference of your remote control

To mute the sound

To return to the previous programme

To display the digital on-screen

Programme Guide

On-screen Menus

To change programme positions and

Selectable picture preferences

Widescreen viewing

When using a TOSHIBA VCR or DVD:

m

r



press
to PAUSE/STEP

press
to PLAY

q
press
to REWIND

S
press
to FAST FORWARD

W
press
to EJECT

p
press
to STOP

q
press I
to SKIP-REWIND

S
press
I to SKIP-FORWARD

Number buttons

text pages

To select mode

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:

AAA, IEC R03 1.5V.

For On/Standby mode

To select input from external sources,

analogue or digital TV

To switch between TV, Radio and Favourite programmes when in digital mode

To exit Menus

When using menus the arrows move the cursor on the screen up, down, left or right. OK to confirm your selection

To alter the volume


To display digital on-screen information

To call up text services in analogue mode and interactive services in digital mode

When in TV mode:

U

Still picture

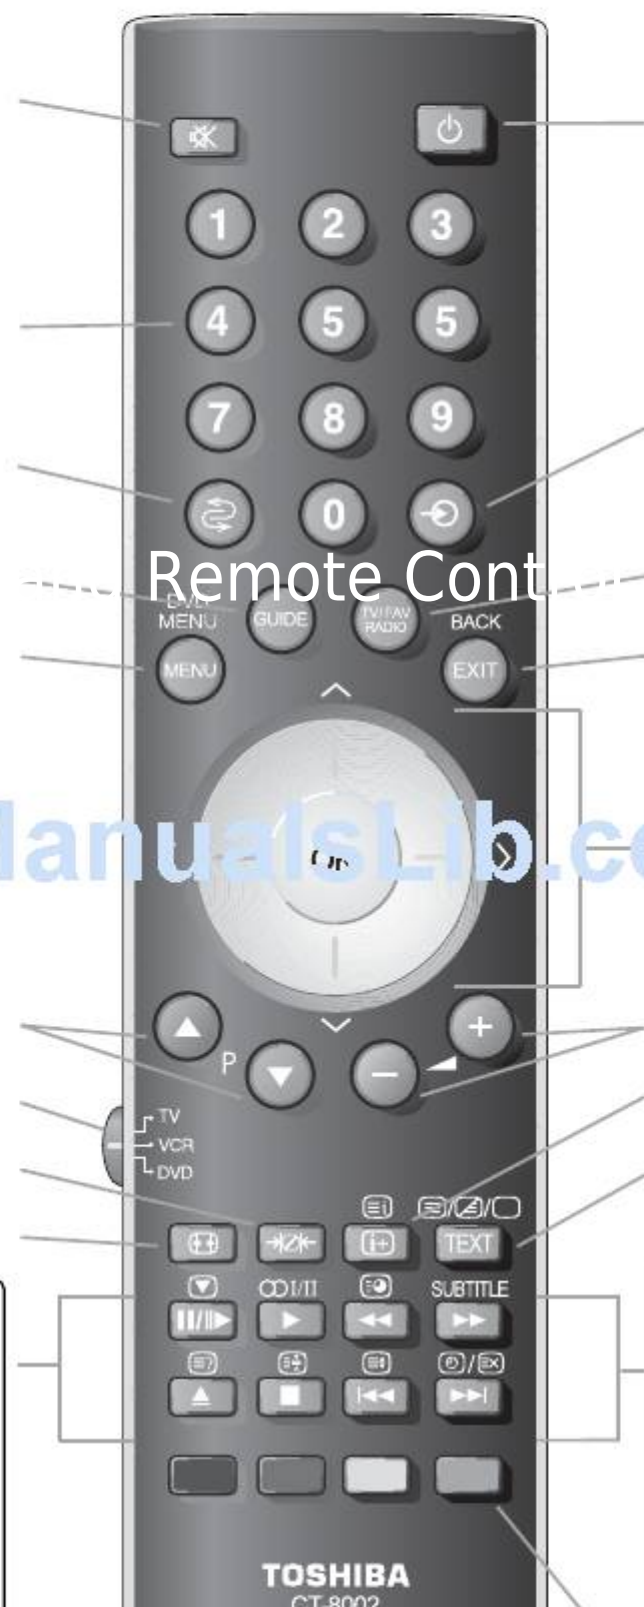

Stereo/bilingual transmissions

/II

O

Digital Subtitles

SUBTITLE

Time display

8

/

9

When using the Programme Guide:

q

- 24 hours

I

S

+ 24 hours

I

q

- 1 page

S

+ 1 page

Text and interactive service control
buttons

Printed on recycled paper.
100% Chlorine free.



[Next Page](#)

1
2

Related Manuals for Toshiba A3030D series

[Remote Control Toshiba RBC-AMT32E Operation Manual](#)

Wired remote controller (5 pages)

[Remote Control Toshiba RBC-AS41E Owner's Manual](#)

Air conditioner remote controller (2 pages)

[Remote Control Toshiba TCB-SC642TLE Owner's Manual](#)

Central remote controller for split system air conditione (65 pages)

[Remote Control Toshiba CT-8002 At-A-Glance Reference Manual](#)

(2 pages)

[Remote Control Toshiba RBC-AMS51E-EN Owner's Manual](#)

Lite-vision plus remote controller (42 pages)

[Remote Control TOSHIBA VCR remote Programming Manual](#)

(5 pages)

[Remote Control Toshiba RBC-AMS51E-ES Installation Manual](#)

Lite-vision plus remote controller (30 pages)

[Remote Control Toshiba RBC-AMS54E Installation Manual](#)

Wired remote controller (32 pages)

[Remote Control Toshiba RBC-AMS41E Owner's Manual](#)

With weekly timer (164 pages)

[Remote Control Toshiba CT-8003 At-A-Glance Manual](#)

(2 pages)

[Remote Control Toshiba RBC-AMT32E Pocket Quick Reference Manual](#)

(8 pages)

[Remote Control Toshiba RBC-AMT32-E Owner's Manual](#)

Standard hard wired remote controller (17 pages)

[Remote Control Toshiba RBC-ASC11E Owner's Manual](#)

Compact wired remote controller (172 pages)

[Remote Control Toshiba TCB-SC642TLE2 Installation Manual](#)

Central remote controller for split system air conditioner (22 pages)

[Remote Control Toshiba RBC-AMT31E Owner's Manual](#)

Wired standard remote controller (15 pages)

Summary of Contents for Toshiba A3030D series

[Page 1](#) To select mode To call up text services in analogue mode Selectable picture preferences and interactive services in digital mode Widescreen viewing When in TV mode: When using a TOSHIBA VCR or DVD: Still picture press to PAUSE/STEP Stereo/bilingual transmissions I/II...

[Page 2](#) TOSHIBA Auto Tune – A3030D Series Plug the aerial directly into the AERIAL INPUT on the television set. Ensure all other products are in standby before continuing. Connect the television to the mains, the red LED will light up. The LOCAL OPTIONS screen will appear and the LED will turn green, this may take a few moments.