



# Asus RP-AC55 Quick Start Manual

Wireless ac1200 repeater



1  
2

--

•

Bookmarks

--

[Download this manual](#)

### Quick Links



# Quick Start Guide

RP-AC55

Wireless AC1200 Repeater

 
 
E12399 / First Edition / March 2017

## BEFORE SETUP

### 01

#### Placing your RP-AC55

Place your RP-AC55 near your router/AP.

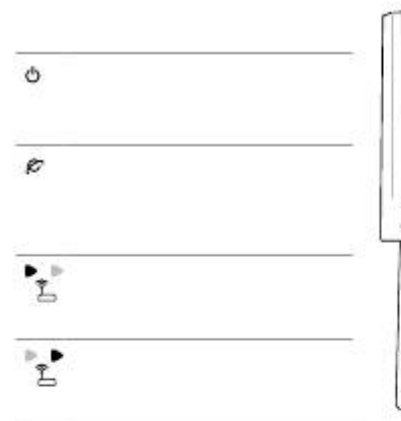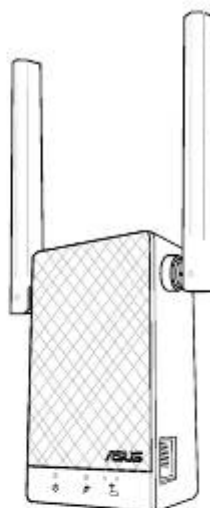



# SETUP METHODS



1

## METHOD

01

Download the app

2

## METHOD

01

Connect via WPS

Press the WPS button on your router/AP.

Check the LEDs and see the LED explanations.

around 2 meters

Press the WPS button on your RP-AC55 for more than two (2) seconds until the power LED starts to blink.

NOTE: Wait until the existing network LED blinks for about two (2) minutes, then turns solid blue, indicating the WPS process is completed.

### LED explanations

#### POWER

On: RP-AC55 is power on.

Off: RP-AC55 is power off.

#### EXISTING NETWORK

On: Connected to the router/AP.

Off: Not connected to the router/AP.

#### MOVE CLOSER

Need to move RP-AC55 closer to the router/AP.

#### MOVE AWAY SLIGHTLY

Need to move RP-AC55 slightly away from the router/AP.

 
 
02

Power On

Plug your RP-AC55 to a power outlet.

Turn on the power switch.

02

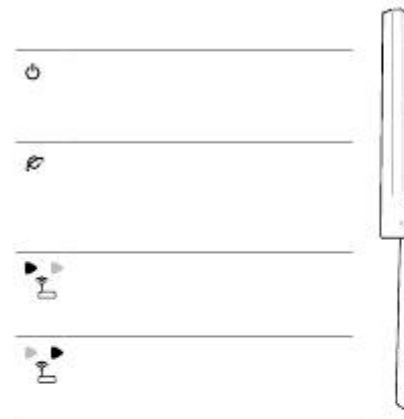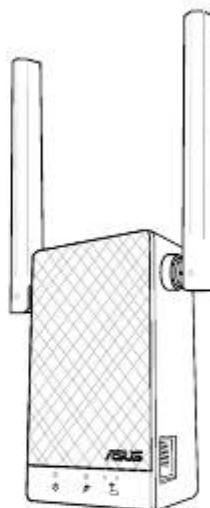

ManualsLib.com





Tap Screen

Open your phone Wi-Fi, and connect to your RP-AC55's SSID.

02

## Enjoy Wi-Fi

Your RP-AC55's wireless network name (SSID) changes to your existing Wi-Fi network name ending with \_RPT or \_RPT5G and shares your router/AP's Wireless Password.

### Button explanations

#### POWER SWITCH

Switch this button on/off to turn RP-AC55 on/off.

#### WPS BUTTON

Press this button to quickly connect to the router/AP via the WPS method.

#### RESET

#### BUTTON

Use a pin to push this button to reset RP-AC55 to its factory default settings.

 
 
Wait until the power LED turns blue, indicating that your RP-AC55 is ready to connect to your existing router/AP.

Follow the Quick Extender Setup instructions.

Assign a unique network name (SSID) for your extended network.

Wait until the setup is completed.

[Reset](#)

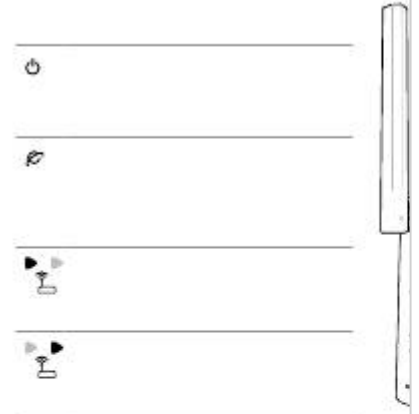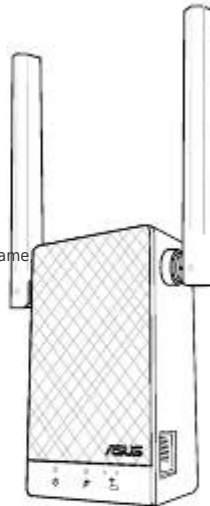

[Next Page](#)

1  
2

## Related Manuals for Asus RP-AC55

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (212 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (52 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (7 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless-ac1200 dual-band repeater for easy setup (3 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (68 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (147 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (2 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (21 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band (180 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (156 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual - band wireless repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AX56 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

## Summary of Contents for Asus RP-AC55

[Page 1](#) NOTE: Wait until the existing network LED blinks Your RP-AC55's wireless network name (SSID) changes to your existing Wi-Fi network name, for about two (2) minutes, then turns solid blue, ending with \_RPT or \_RPT5G and shares your router/AP's Wireless Password.

[Page 2](#) AC55, enter the correct password, and try to set up your RP-AC55 again. Press the RESET button on the side of RP-AC55 for about two (2) seconds. Wait for about five (5) seconds until the existing network LED blinks slowly.