



Asus RP-AC53 Quick Start Manual

Dual-band wireless repeater

1
2

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Quick Start Manual](#)



RP-AC53

Dual-band Wireless Repeater

Quick Start Guide

E11934

Second Edition

August 2016

Method One


RP-AC53

Dual-band Wireless Repeater

Power On

Place your RP-AC53 near your router/AP and plug it to a power outlet.

Press the power switch to ON. Wait until the power LED turns solid green and Wi-Fi LEDs stop blinking, indicating that RP-AC53 is ready to connect to the parent AP.

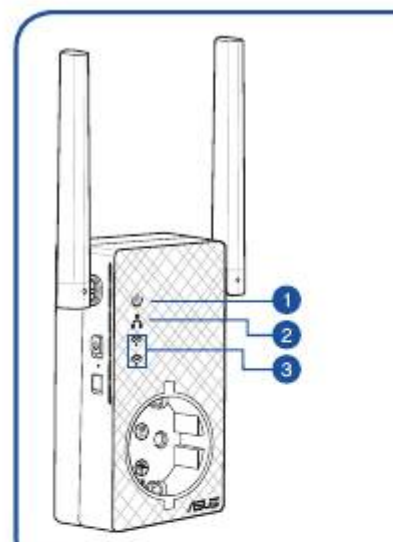

Place in an ideal location

After placing your RP-AC53 in an ideal location, RP-AC53 connects to your router/AP in about one (1) minute.

NOTES:

- Place your RP-AC53 between your router/AP and wireless device to get the best extender performance.

- Place your RP-AC53 in a location where you can get green or orange Wi-Fi LED.

IMPORTANT!

We recommend that you place your RP-AC53 in open or spacious location.

Q1: What should I do if my router does not support WPS?

A1: You can use Method Two to set up RP-AC53.


Q2: What should I do when only one band Wi-Fi LED is on?

A2: When you are connecting to a dual-band router but only 2.4 GHz or 5 GHz Wi-Fi LED is on, press the WPS button on both the router and the RP-AC53 again and check that both 2.4 GHz and 5 GHz Wi-Fi LEDs are on.

E11934_RP-AC53_QSG_Special_V2.indd 1



RP-AC53 Dual-Band Wireless Repeater

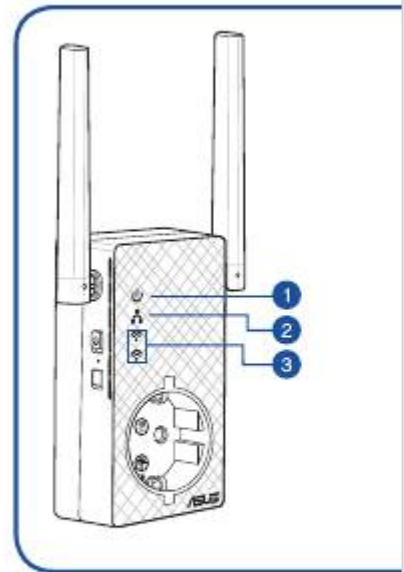

Connect via WPS (Wi-Fi Protected Setup)

1. Press the WPS button on your Router/AP.

NOTE: Ensure that your router/AP supports WPS. Otherwise, use Method TWO.

Frequently Asked Questions (FAQ)

Q2: How do I reset RP-AC53?

A2: Press the RESET button on the side of RP-AC53 for about five (5) seconds until the LEDs blink slowly.

Q4: What should I do if RP-AC53 web interface is not accessible?

A4: You can do any of the following:

- Connect your computer and RP-AC53 using an Ethernet cable, and
- Set up your computer to obtain an IP address automatically.

- On a web browser, ensure that you correctly enter the web address

2. Press the WPS button on your RP-AC53 for

more than five (5) seconds until the LEDs

start to blink.

Your RP-AC53's wireless network name (SSID) changes to your existing Wi-Fi network name, ending with _RPT or _RPT5G and shares your router/AP's Wireless Password.

connect to RP-AC53's SSID or network name.

<http://repeater.asus.com>

1. Power LED

On: RP-AC53 is plugged to a power outlet and powered on.

Off: RP-AC53 is unplugged from a power outlet or powered off.

2. Ethernet LED

On: Ethernet is connected.

Off: Ethernet cable is disconnected.

3. 2.4 GHz / 5 GHz Wi-Fi LED

Green : Best 2.4 GHz / 5 GHz Wi-Fi Repeater

connection with parent AP.

Orange: Good 2.4 GHz / 5 GHz Wi-Fi repeater

connection with parent AP.

Red: Poor 2.4 GHz / 5 GHz Wi-Fi Repeater

connection with parent AP.

Off: Disconnected from parent AP.

The LEDs flash about two

(2) minutes and turn solid

green. The color of the

LED indicates the Wi-Fi

signal strength.

Enjoy!

2016-08-19 16:20:19

2

ManualsLib.com



[Next Page](#)

1
2

Related Manuals for Asus RP-AC53

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band (180 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (156 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (176 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (68 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (147 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (2 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (52 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless-ac1200 dual-band repeater for easy setup (3 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (7 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (212 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual - band wireless repeater (2 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual-band wireless repeater (173 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AC1900 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

Summary of Contents for Asus RP-AC53

[Page 1](#) AP. NOTE: Ensure that your router/AP supports WPS. Otherwise, use Method TWO. Place in an ideal location Enjoy! After placing your RP-AC53 in an ideal location, RP-AC53 connects to your router/AP in about one (1) minute. NOTES: • Place your RP-AC53 between your router/AP and wireless device to get the best extender performance.

[Page 2](#) Wireless Password. 4. Connect your wireless devices to the new Extender network. Place in an ideal location After placing your RP-AC53 in an ideal location, RP-AC53 connects to your router/AP in about one (1) minute. NOTES: • Place your RP-AC53 between your router/AP and wireless device to get the best extender performance.