



# Refrigerant Cycle Diagram - Toshiba RAS-18PKVSG-E Service Manual

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137



•

[Table of Contents](#)



•

## Bookmarks





## 7-1. Refrigerant Cycle Diagram

RAS-18PKVSG-E / RAS-18PAVSG-E

RAS-22PKVSG-E / RAS-22PAVSG-E

Pressure measurement

P

Gauge attaching port

Vacuum pump connecting port

Deoxidized copper pipe


Outer dia. : 12.70mm

Thickness : 0.8mm

4-way valve

TS

Temp. measurement

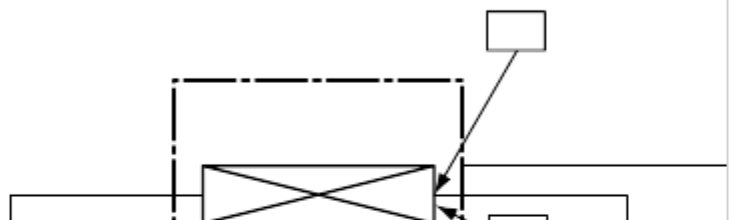

# 7. REFRIGERANT CYCLE DIAGRAM

## INDOOR UNIT

- Indoor heat exchanger
- Cross flow fan
- Deoxidized copper pipe
- Outer dia. : 6.35mm
- Thickness : 0.8mm
- Sectional shape of heat insulator
- Muffler

- TD
- Compressor
- KTN130D30UFZ

- Outdoor heat exchanger
- T2
- Propeller fan

## OUTDOOR UNIT

- Temp. measurement
- T1
- TC
- TA
- TO
- Split capillary
- TE

18k and ZK Refrigerant amount : 1.10kg

NOTE :

- 23 -

FILE NO. SVM-17001

Max.

Min.

Chargeless : 15m

Strainer

Pulse Modulating valve at liquid side

Strainer

Gas leak check position

Refrigerant flow (Cooling)

Refrigerant flow (Heating)

: 20m

: 2m

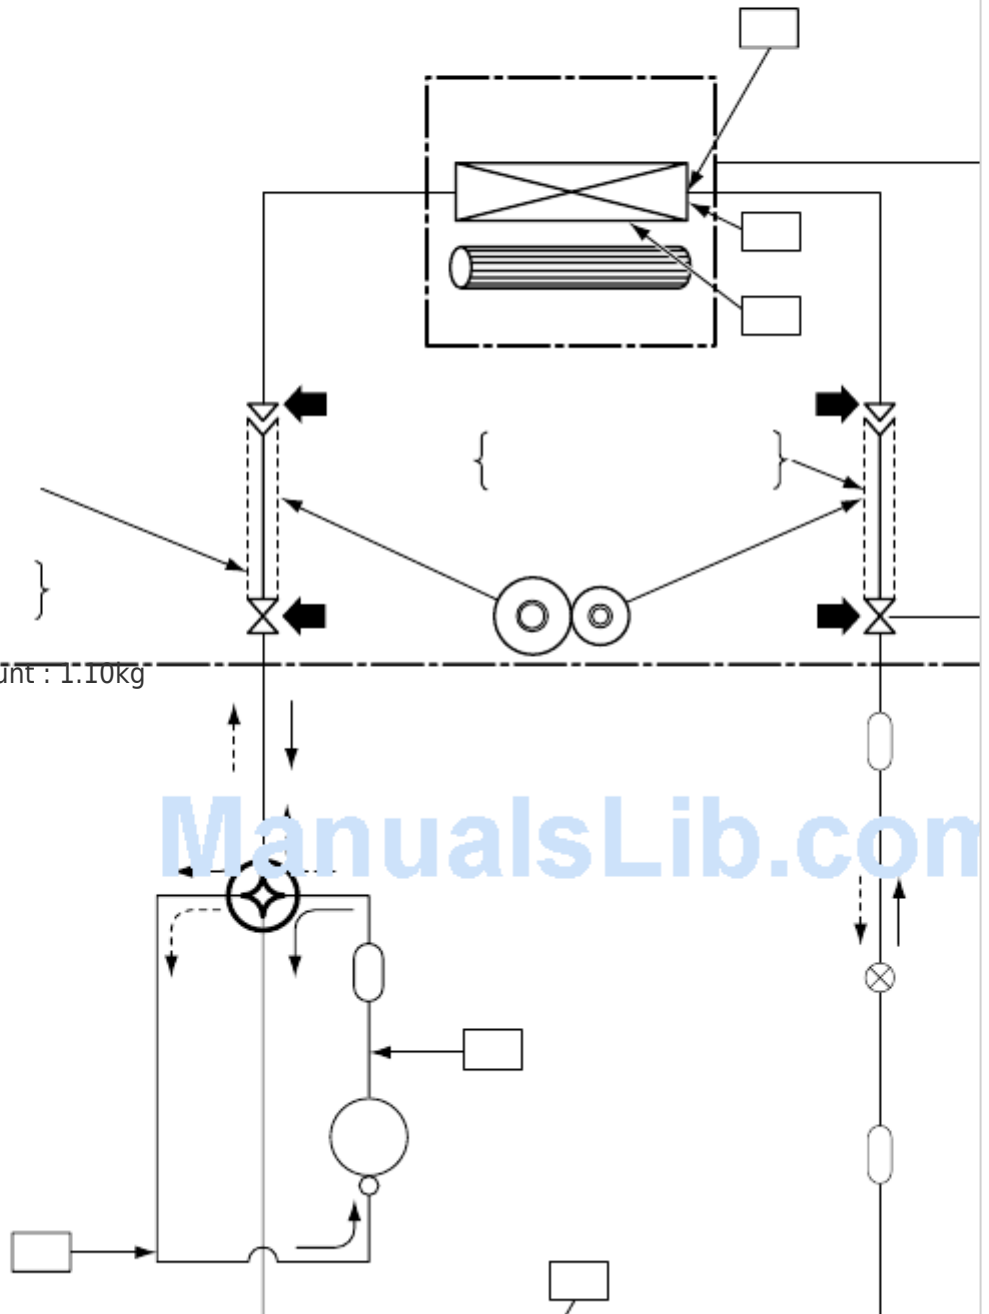


Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
20  
21  
22  
23  
24  
25  
26  
27

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

## Chapters

[Service Manual 2](#)

[9-2. Operation Description 30](#)

### Related Manuals for Toshiba RAS-18PKVSG-E

[Air Conditioner Toshiba RAS-18PAVSG-E Owner's Manual](#)

(168 pages)



[Air Conditioner Toshiba RAS-B22PKVSG-E Installation Manual](#)

(22 pages)

[Air Conditioner Toshiba RAS-24PAVSG-E Installation Manual](#)

(18 pages)

[Air Conditioner Toshiba RAS-24PKVSG-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-B22PKVSG-TR Service Manual](#)

(134 pages)

[Air Conditioner Toshiba RAS-22 Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-07PKVP-E Owner's Manual](#)

Split type for general public use (32 pages)

[Air Conditioner Toshiba RAS-07PKVP-E Service Manual](#)

Split type (114 pages)

[Air Conditioner Toshiba RAS-07PKVP-E Installation Manual](#)

Split type (26 pages)

[Air Conditioner Toshiba RAS-18PKSG-T Installation Manual](#)

(28 pages)

[Air Conditioner Toshiba RAS-18PKSG-T Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-18PACVG -T Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba AS-24UKHP-ES3 Service Manual](#)

(82 pages)

[Air Conditioner Toshiba RAS-18BKS Series Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-13BKV-E Service Manual](#)

Split type (106 pages)

## Related Content for Toshiba RAS-18PKVSG-E

[Carrier TCB-IFDMR01UP-UL Refrigerant Cycle Diagram](#)

Toshiba Carrier TCB-IFDMR01UP-UL

[MMD-UP0721HFP-UL Refrigerant Cycle Diagram](#)

Toshiba MMD-UP0721HFP-UL

[RAS-24J2KVG-UA Refrigerant Cycle Diagram](#)

Toshiba RAS-24J2KVG-UA

[MMD-UP0481HFP-UL Refrigerant Cycle Diagram](#)

Toshiba MMD-UP0481HFP-UL

[MMD-UP0721HFP Series Refrigerant Cycle Diagram](#)

Toshiba MMD-UP0721HFP Series

[RAS-B07G3KVSG-E Refrigerant Cycle Diagram](#)

Toshiba RAS-B07G3KVSG-E

[RAS-25S4KVDG-ND Refrigerant Cycle Diagram](#)

Toshiba RAS-25S4KVDG-ND

[MMW-UP0271LQ-E Refrigerant Cycle Diagram](#)

Toshiba MMW-UP0271LQ-E

This manual is also suitable for:

[Ras-22pkvsg-eRas-24pavsg-eRas-24pkvsg-eRas-18pavsg-eRas-22pavsg-e](#)