



Toshiba BMS-SM1280HTLE Network Configuration Manual

Smart manager

1
2
3
4
5
6
7
8

--

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Service Manual](#), [Owner's Manual](#)



SMART MANAGER

Network Configuration Guide

Model name **Leading Innovation >>>**

BMS-SM1280HTLE



[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba BMS-SM1280HTLE

[Control Systems Toshiba BMS-SM1280HTLE Service Manual](#)

Smart manager (53 pages)

[Control Systems Toshiba BMS-SM1280HTLE Owner's Manual](#)

Smart manager (web type) (44 pages)

[Control Unit Toshiba BMS-SM1280HTLE Installation Manual](#)

(24 pages)

[Control Unit Toshiba BMS-SM1280HTLE Owner's Manual](#)

Smart manager (12 pages)

[Control Systems Toshiba BMS-TP5121PWE Owner's Manual](#)

Air conditioning control system (76 pages)

[Control Systems Toshiba BMS-CT1280E Installation Manual](#)

Air conditioning control system (16 pages)

[Control Systems Toshiba Carrier BMS-SM1280HTLUL Service Manual](#)

Smart manager / central remote control (53 pages)

[Control Systems Toshiba Carrier BMS-SM1280HTLUL Owner's Manual](#)

Smart manager (web type) (44 pages)

[Control Systems Toshiba Combi Control User Manual](#)

(160 pages)

[Control Systems Toshiba TOSVERT VF-PS1 Instruction Manual](#)

Pid control (31 pages)

[Control Systems Toshiba TOSDIC-CIE DS Instruction Manual](#)

(158 pages)

[Control Systems Toshiba TOSDIC-CIE DS Programming Manual](#)

(34 pages)

[Control Systems Toshiba TOSDIC-CIE DS Manual](#)

(74 pages)

[Control Systems Toshiba TOSDIC-CIE DS Function Manual](#)

(60 pages)

[Control Systems Toshiba TOSDIC-CIE DS Instruction Manual](#)

(55 pages)

[Control Systems Toshiba TOSDIC-CIE DS Instruction Manual](#)

Cie integrated control system (32 pages)

Summary of Contents for Toshiba BMS-SM1280HTLE

[Page 1](#) SMART MANAGER Network Configuration Guide Model name: BMS-SM1280HTLE...

[Page 2: Connecting Lan Cable](#)

Network Configuration Guide Smart Manager 3) Click [Network and Sharing Center]. (Fig.2) Never connect the Smart Manager to Fig.2 the Internet. We assume no responsibility for any problems resulting from connection to the Internet. Prohibited Only local area connection is allowed for the Smart Manager.

[Page 3](#) Network Configuration Guide Smart Manager 3-2. Setting Browser 7) Select the "Use the following IP address:" radio button, and set as follows: <Internet Explorer> IP address:

192.168.2.** (**: Excluding 30) 1) Start Internet Explorer. Subnet mask: 255.255.255.0. 2) Click [Tools] on the toolbar. (Fig.1) Then click [OK].

[Page 4](#) Network Configuration Guide Smart Manager 6) Clear the "Use a proxy server for your LAN" <Firefox> checkbox (Fig.5) or select the "Bypass proxy server for local addresses" checkbox (Fig.6), 2) Click [Tools] and choose "Options" from the and then click [Advanced].

[Page 5](#) Network Configuration Guide Smart Manager Select the "No proxy" checkbox (Fig.5) or the "Manual proxy configuration:" checkbox, and then add "192.168.2.30" to the "No Proxy for:" field in the Connection Settings window. (Fig.6) Fig.5 Fig.6 6) Select a URL by language and type it into the address bar to connect to the Smart Manager (Web type air conditioning control system).

[Page 6: Changing Ip Address](#)

Network Configuration Guide Smart Manager 4. Displaying and Changing IP 4-2. Changing IP address of the Smart Manager The following procedure describes how to change an IP address using an example of changing IP IP address, subnet mask, default gateway, and address to 192.168.2.38.

[Page 7](#) Network Configuration Guide Smart Manager Air Conditioning Control System Network Configuration Guide (For Smart Manager) Jan, 2011 ©Copyright Toshiba Carrier Corporation 2004-2011...

[Page 8](#) DE93919301(EN)