



# Toshiba TY-GC1000 Operation Manual

Speaker with chromecast built-in and bluetooth



1  
2

--

•

## Bookmarks

[Download this manual](#)

## Quick Links







# TY-GC1000

Speakers with Chromecast built-in and Bluetooth®

## Operation Manual

Thank you for purchasing this product.

To use this product safely, read and understand this operation manual thoroughly before using it. After reading this manual, you can be used when necessary.

## Safety precautions

The information you need to prevent danger to the user and other people as well as property damage is described below. "Description of signs" shows different categories of the degree of danger or damage that may occur due to wrong handling. "Description of symbols" shows the meaning of the symbols.

### Important notes

- This book is only a guide for user's operation, not a criterion for configuration.
- Only use attachments/accessories specified by the manufacturer.
- The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.
- The exclamation mark is intended to alert the user to the presence of important operating instructions.

To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.

### Description of signs

Indicates that there is a risk of death or serious injury.

Indicates that there is a risk of property damage.

### Description of symbols

Indicates "Prohibition" or "You must

Indicates "Mandatory Action" or "Do as

not do" with pictures and text.

Indicated" with pictures and text.

### What to do in the case of an abnormality

- Stop using the device immediately in case of an abnormality or failure.
- Remove the power plug from the receptacle immediately when water or any foreign object enters the interior of the device. It may cause a fire or electric shock. Remove the power plug immediately, and contact your dealer for a repair.

### Usage

To reduce the risk of fire, electric shock or product damage,

- Do not disassemble, repair, or modify the device. Refer servicing to qualified service personnel.
- Do not touch the device when the power supply or device, or expose them to a strong shock.

Do not throw the device into fire.

Do not install this device in a location where the power supply or device, or expose them to a strong shock.

Similar device, always in the same conditions. The ventilation should not

be impeded by covering the ventilation openings with items such as newspaper,

table cloths, curtains etc.

Do not expose this device to rain, moisture, dripping or splashing.

Do not place objects filled with liquids, such as vases, on this device.

Place the device on a flat surface. Do not cover the device with objects or excessive

heat.

The device is not for use in the vicinity of children. Keep it out of reach of children.

TY-GC1000\_En.indd 3

### AC adapter

To reduce the risk of fire, electric shock or product damage,

Insert the AC adapter plug fully into an AC power outlet.

If there is dirt or dust on the pin or installation surface of the AC adapter, disconnect the AC adapter and remove the dirt or dust.

Do not insert or remove the power plug with a wet hand.

Observe the following when using the AC adapter.

Do not damage it.

Do not modify it (e.g. extension).

Do not pull it.

Do not place a heavy object on it.

Do not bend it forcefully. Do not twist it.

When disconnecting the AC adapter from the power outlet, hold the AC adapter

plug while pulling.

If the device will not be used for a long time, remove the power cord of the AC

adapter from the AC power outlet.

Do not use any AC adapter other than the one that comes with the device.

Do not use the AC adapter that comes with the device for any other product.

### Important Safety Instructions

5017800

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's

instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other

apparatus (including amplifiers) that produce heat.

9. Do not defeat the purpose of the polarized or grounding-type plug. A polarized

plug has two blades with one wider than the other. A grounding-type plug has two

blades and a third grounding prong. The wide blade or the third prong are provided for

your safety. If the provided plug does not fit into your outlet, consult an electrician for

replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs,

convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution

when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long

periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus

has been damaged in any way, such as power-supply cord or plug is damaged, liquid has

been spilled or objects have fallen into the apparatus, the apparatus has been exposed to

rain or moisture, does not operate normally, or has been dropped.

Google, Android, Google Play, and Chromecast built-in are trademarks of Google Inc.

### FCC Statement :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

two conditions:

1) This device may not cause harmful interference, and 2) This device must accept any

interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This

equipment generates, uses, and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio

communication. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on,

the user is encouraged to take one of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

### RF exposure statements

1. This transmitter must not be co-located or operating in conjunction with any other

antenna or transmitter.

2. This equipment complies with FCC RF radiation exposure limits set forth for an

uncontrolled environment. This equipment should be installed and operated with a

minimum distance of 20 centimeters between the radiator and your body or nearby

persons.

### California Prop 65 Warning :

This product contains chemicals, including lead, known to the

State of California to cause cancer and birth defects or other

reproductive harm. Wash hands after handling.

### Disclaimer

Toshiba shall not be responsible for any damage caused by an earthquake,

thunderstorm, flood damage, fire, or other natural disasters. Toshiba is not responsible for a third

party, other accidents, or damages caused by the user's willful acts or negligence,

misuse, or use in abnormal conditions.

Toshiba shall not be responsible for any damage caused by failure to observe the

information described in the operation manual.

### Disposal

When disposing of this device, observe the laws, or ordinances and rules of the local

government.

This unit is designed for use with Bluetooth® wireless devices compatible with the A2DP and

Do not heat it.

AVRCP streaming audio profiles. Refer to your Bluetooth® device's user manual or technical

support to determine if your Bluetooth® device supports these profiles.

Do not pinch it.

Frequency band used

This unit uses the 2.4 GHz frequency band. However other wireless devices may use 2.4 GHz

frequency band as well and may cause interference with each other. To avoid interference,

please refrain from the use of this unit at the same time with other wireless devices.

Certification



WARNING



CAUTION



ManualsLib.com



WARNING



CAUTION



ManualsLib.com

This unit conforms to frequency restrictions and has received certification based on frequency. No wireless permit is necessary. However, the following action is punishable by law in some countries:

• Take measures to modify the unit.

#### Usage restrictions

• Wireless transmission and/or use with all Bluetooth® equipped devices is not guaranteed.  
• A device featuring the Bluetooth® function is required to conform to the Bluetooth® standard specified by Bluetooth SIG. The Bluetooth® equipped device conforms to the above mentioned Bluetooth® standard. The Bluetooth® equipped device is connected or work correctly, depending on the features or specifications of the device.

#### Range of use

Use this device within an unobstructed 10 m range. The range of use or perimeter may be shortened depending on any obstructions, devices causing interference, other people in the room, or the construction of the building. Please note that the range mentioned above is not guaranteed.  
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and are used under license.

#### Note

• This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.

To clean this unit, wipe with a soft, dry cloth.

• Never use alcohol, paint thinner or benzine to clean this unit.  
• Before using chemical cloth, read the instructions that came with the cloth carefully.

#### Downloading the Bluetooth® app

Go to the iTunes App Store (for iOS devices) or to Google Play (for Android devices) to download the Google Home app to the device you want to connect (smartphone, tablet, etc.).

#### Connecting the AC power

##### 1

Insert the DC Plug of the AC Adaptor into the DC IN jack on the back of the unit. Plug the AC Adaptor into an AC wall outlet.

##### 2

The unit will initialize when first plugged in.

The initialization process could take up to 60 seconds to complete, so please wait for this process to finish before proceeding. The mode LED will light solid red for several seconds then changes to flashing while for several seconds while the unit is initializing. The mode LED may turn on again during the initialization process, this is normal. The mode LED will be flashing while when the initialization is completed. The unit is now in the Setup mode.

#### Notes

• The initialization process could take up to 60 seconds to complete when first connected. The process is normal and the unit will be plugged in.  
• If the unit has been setup to connect to a Wi-Fi network successfully, the mode LED will be solid green after booting in approximately 60 seconds. The unit is now ready for cast.

#### Top view

##### 1

MODE LED - Indicates

##### 2

POWER ON/STANDBY BUTTON

##### 3

PLAY/PAUSE BUTTON

##### 4

BLUETOOTH® MODE/PAIR BUTTON

##### 5

VOLUME - BUTTON

##### 6

VOLUME + BUTTON

##### 7

TOUCH LED - On when the button is touched

##### 1 2

##### 3

##### 4

##### 5

##### 6 7

##### 8

##### 9

##### 10

##### Back view

##### 8

##### 9

##### 10

##### DC IN JACK

##### 9

##### SPEAKER RESET BUTTON

##### 10

##### LINE IN JACK

#### Listening to music with Chromecast

Setting up the unit on a network:

##### 1

Make sure the device you want to connect (smartphone, tablet, etc.) is connected to a Wi-Fi network.  
The same Wi-Fi network will also be used for pairing the unit with the Google Home app.

##### 2

Make sure that Bluetooth® is also enabled on your device (smartphone, tablet, etc.).  
During the setup process the Google Home app will access your device (smartphone, tablet, etc.) using Bluetooth®.

##### 3

With the unit in the Standby mode, open the Google Home app and select the Devices icon.

##### 4

A new screen will open showing available devices and TY-GC1000 will show as "Needs Setup."

##### Caution

• It may take up to a minute for TY-GC1000 to appear as an available device in the Google Home window. Do not select "Add New Device" in the app.

##### 4

Follow the instructions in the Google Home app to complete the setup.

The setup process may take several minutes. It's normal for the mode LED on the unit to change colors or turn off for several seconds during the setup process.

##### 5

After the setup is complete, the mode LED will be solid green, indicating the unit is ready to stream. Refer to the "Using Chromecast built-in" section below for instructions on how to use Chromecast built-in.

#### Note

• If you are setting up multiple speakers in the Google Home app, make sure the other speakers are turned off when setting up a new speaker.

#### Using Chromecast built-in:

The unit comes with Chromecast built-in. It lets you stream your favorite music from your phone, tablet or laptop right to your speakers. Easily control the unit with apps you already know and love from your phone, iPad, Android phone or tablet, Mac or Windows laptop or Chromebook.

##### 1

Once you've completed setting up the unit in the Google Home app, tap the Cast icon.

In any Chromecast-enabled app and select "TY-GC1000" from the device menu.

##### 2

Audio will stream from the Chromecast-enabled app to the unit over your home Wi-Fi network.

The mode LED is lit solid green to indicate the unit is in the Cast mode. When audio is streaming, the mode LED will be solid green.

##### 3

Adjust the volume level by pressing the VOLUME +/VOLUME - button.

#### Notes

• Consult the Google Home app for a list of apps that are Chromecast-enabled.

• The unit will be automatically stopped playing with the Bluetooth® line-in when Chromecast is selected.

Chromecast is selected.




WARNING



CAUTION



ManualsLib.com

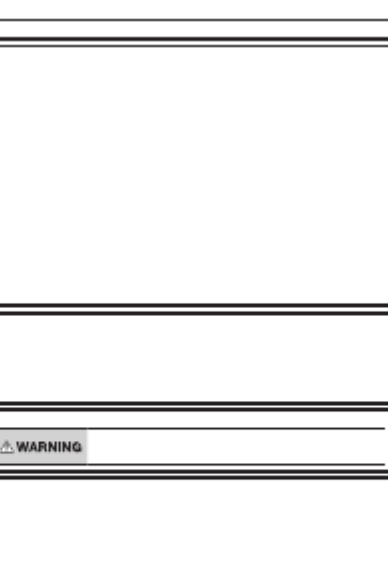

WARNING



CAUTION



ManualsLib.com

[Next Page](#)

1

2

## Related Manuals for Toshiba TY-GC1000

[Speakers Toshiba TY-SP3 Operation Manual](#)

2.1ch stereo sound system portable bluetooth wireless speaker and speaker

phone (2 pages)

[Speakers Toshiba TY-WSP21 Operation Manual](#)

(6 pages)

[Speakers Toshiba TY-WSP120 Operation Manual](#)

(2 pages)

[Toshiba TY-WSP120 - Wireless Speaker Manual](#)

(article)

[Speakers Toshiba TY-ASC65 User Manual](#)

(14 pages)

[Speakers Toshiba TY-ASC51 Operation Manual](#)

(61 pages)

[Speakers Toshiba TY-ASC66 Operation Manual](#)

(61 pages)

[Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

[Speakers Toshiba SBX1250 Specifications](#)

3d sound bar (2 pages)

[Speakers Toshiba TY-WSP200 Operation Manual](#)

Wireless bt speaker (2 pages)

[Speakers Toshiba PA5075U-1SPA User Manual](#)

Mini 3d sound bar and subwoofer (20 pages)

[Speakers Toshiba e-Studio 332s Quick Start Manual](#)

Multifunctional digital systems (123 pages)

[Speakers Toshiba TY-WSP200 User Manual](#)

Waterproof (3 pages)

[Speakers Toshiba Symbio Quick Start Manual](#)

Smart home solution speaker with camera (5 pages)

## Summary of Contents for Toshiba TY-GC1000

[Page 1](#) Indicates “Prohibition” or “You must Indicates “Mandatory Action” or “Do as • It may take up to a minute for TY-GC1000 to appear as an available device in the Google two conditions: download the Google Home app to the device you want to connect (smartphone, tablet, not do”...

[Page 2](#) AC outlet. If above steps cannot reset the unit, you may need to go through below process for factory Tap in the upper right corner of the TY-GC1000 device window in the The AC outlet has not Try the unit on another outlet.