



Toshiba BMS-SM1280HTLE Owner's Manual

Smart manager

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	

--

•

[Table of Contents](#)

•

Bookmarks

--

Quick Links

[1 Operating Instructions](#)

[Download this manual](#)

See also: [Service Manual](#) , [Owner's Manual](#)



SMART MANAGER

Owner's Manual

Model name
TOSHIBA
Leading Innovation >>>

BMS-SM1280HTLE

- Save These Instructions!

ENGLISH

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba BMS-SM1280HTLE

[Control Systems Toshiba BMS-SM1280HTLE Service Manual](#)

Smart manager (53 pages)

[Control Systems Toshiba BMS-SM1280HTLE Owner's Manual](#)

Smart manager (web type) (44 pages)

[Control Unit Toshiba BMS-SM1280HTLE Installation Manual](#)

(24 pages)

[Control Systems Toshiba BMS-SM1280HTLE Network Configuration Manual](#)

Smart manager (8 pages)

[Control Unit Toshiba B-EP700-BLTH-QM-R Installation Manual](#)

Bluetooth module (8 pages)

[Control Unit Toshiba B-FV904T-H-QM-R Installation Manual](#)

(3 pages)

[Control Unit Toshiba B-EX906-H-QM-R Manual](#)

Peel-off module with backing paper coiling-round structure (13 pages)

[Control Unit Toshiba B-EX700-WLAN2-QM-R Manual](#)

Wireless lan board (9 pages)

[Control Unit Toshiba B-EX206-QM-R Manual](#)

Disc cutter module (12 pages)

[Control Unit Toshiba B-EX906-FF-QM-R Installation Manual](#)

Fanfold paper guide module (2 pages)

[Control Unit Toshiba B-8204-QM-R Installation Manual](#)

Rotary cutter module (22 pages)

[Control Unit Toshiba RBM-A101VAE Installation Manual](#)

Vrf dx valve kit (53 pages)

[Control Unit Toshiba 3 axis TB6560 User Manual](#)

Driver board (10 pages)

[Control Unit Toshiba GN-4030-A3 Quick Start Manual](#)

Multifunctional digital color systems / multifunctional digital systems wireless lan/bluetooth (6 pages)

[Control Unit Toshiba nv Series User Manual](#)

Type1 light profibus-dp module (70 pages)

[Control Unit Toshiba GN-4020 Manual](#)

Wireless lan/bluetooth precautions for use (12 pages)

Summary of Contents for Toshiba BMS-SM1280HTLE

[Page 1](#) SMART MANAGER Owner's Manual Model name: BMS-SM1280HTLE • Save These Instructions! ENGLISH...

[Page 2: Table Of Contents](#)

Owner's Manual Smart Manager Thank you very much for purchasing TOSHIBA Smart Manager. This manual explains how to use the main unit of the Smart Manager. For the usage of the WEB

TYPE Smart Manager, refer to its specific Owner's Manual.

[Page 3: Precautions For Safety](#)

Owner's Manual Smart Manager Precautions for Safety • Important information is described in the product itself and the manuals to prevent injury to the user and other persons, and damage to property, and for safe and correct use. Make sure to thoroughly understand the following details (descriptions and graphic symbols) before reading the text, and make sure to observe the precautions.

[Page 4: Specification](#)

(zone 1 - zone 64). The Smart Manager can manage all air conditioners in a zone at once. (For setting zones, refer to the Installation Manual.) Part name Central Controller Power Unit Model name BMS-SM1280HTLE Power supply 220 - 240 VAC, 50/60 Hz Use bundled power unit. Power consumption Up to 128 units Indoor unit —...

[Page 5: System Configuration](#)

Owner's Manual Smart Manager System Configuration LINE 1 ZONE 1 ZONE 2 ZONE 3 ZONE 9 ZONE 13 Gr10 Gr16 ZONE 17 Gr17 Gr19 Gr23 Gr28 Gr30 Gr32 ZONE 32 ZONE 42 ZONE 33 Gr33 Gr35 Gr39 Gr42 Gr43 Gr48 Gr49 Gr50 Gr55...

[Page 6: Operating Instructions](#)

Owner's Manual Smart Manager Operating Instructions Button operation LINE Switches line 1 (display 1), line 2 (display 2) button ZONE GROUP Switches , and ZONE GROUP : Selects all groups on the selected line simultaneously. button : Selects all groups in the specified zone. : Selects a group.

[Page 7](#) Owner's Manual Smart Manager G: Run lamp Indicates the operating status of the selected group. : The selected group is not operating. : The selected group is operating. Flashing: When an error occurs or the protective device is activated button Starts operation.

[Page 8](#) Owner's Manual Smart Manager Indications on the LCD panel ZONE GROUP , or is displayed. B: Line number When a line is selected, the () mark of the selected line number flashes. The number lights up when any controllable unit is detected on the line.

[Page 9](#) Owner's Manual Smart Manager H: Check code When the selected air conditioner is abnormal, its unit number and the check code are displayed. I: Louver position/swing Louver position or louver swinging is displayed. (When no remote controller is used.) J: Functions (1) : Lights when the power saving mode is activated.

[Page 10: Group Operation](#)

Owner's Manual Smart Manager Group Operation STOP (Example) Operating LINE 1, GROUP 4 (Cooling at 24°C, air volume: AUTO) Power on Turn on the power of the remote controller. (Buttons on the remote controller are disabled while is displayed, but this is not a fault.) 1 Line switching Select line 1 with the...

[Page 11: Zone Operation And Simultaneous Operation](#)

Owner's Manual Smart Manager Zone Operation and Simultaneous Operation STOP (Example) Performing zone operation (LINE 1, ZONE 8, GROUP 34~42 cooling at 24°C, air volume: AUTO) and simultaneous operation (LINE 1, cooling at 24°C, air volume: AUTO) LINE ZONE LINE Zone operation (8, cooling at Simultaneous operation (...)

[Page 12](#) DE93919001...