



TOSHIBA

Toshiba EM131A5C-BS Instruction Manual

Microwave solo oven

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32

--

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Setting up Your Oven](#)

[2 Operation](#)

[3 Maintenance](#)

[Download this manual](#)



Microwave
Solo Oven

Instruction

EM131A5C-BS

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba EM131A5C-BS

[Oven Toshiba AC25CEW-BS Instruction Manual](#)

(55 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-BS Instructions Manual](#)

Solo oven (52 pages)

[Microwave Oven Toshiba EM131A5C-SS Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EM925A2EA-PS0A Instruction Manual](#)

(32 pages)

[Microwave Oven Toshiba EM128A2EC-ESHA0L Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EM9P022XC Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A5C-SS Instructions Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM245A2XC-PV Instruction Manual](#)

Microwave solo oven (28 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

Summary of Contents for Toshiba EM131A5C-BS

[Page 1](#) Microwave Solo Oven Instruction EM131A5C-BS...

[Page 3: Table Of Contents](#)

Welcome to the world of TOSHIBA BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE CONTENTS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY IMPORTANT SAFETY INSTRUCTIONS GROUNDING INSTRUCTIONS...

[Page 4: Precautions To Avoid Possible Exposure To Excessive Microwave Energy](#)

HINGES AND LATCHES (broken or loosened) c. DOOR SEALS AND SEALING SURFACE The oven should not be adjusted or repaired by anyone except properly qualified service personnel. Specifications Model: EM131A5C-BS Rated Voltage: 120V~ 60Hz Rated Input Power(Microwave): 1550 W Rated Output Power(Microwave): 1100W 1.2 cu.ft.

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS WARNING To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following: Read all instructions before using the appliance. Read and follow the specific: "...

[Page 6](#) IMPORTANT SAFETY INSTRUCTIONS WARNING Use this appliance only for its intended uses as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook or dry food. It is not designed for industrial or laboratory use.

[Page 7](#) IMPORTANT SAFETY INSTRUCTIONS WARNING 20. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

[Page 8: Grounding Instructions](#)

GROUNDING INSTRUCTIONS DANGER Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance. This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

[Page 9](#) GROUNDING INSTRUCTIONS Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

[Page 10](#) GROUNDING INSTRUCTIONS RADIO INTERFERENCE RADIO INTERFERENCE Operation of the microwave oven may cause interference to your radio, TV or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures: Clean door and sealing surface of the oven. Reorient the receiving antenna of radio or television.

[Page 11: Utensils](#)

GROUNDING INSTRUCTIONS UTENSILS CAUTION Electric Shock Hazard Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven". There may be certain non-metallic utensils that are not safe to use for microwaving.

[Page 12](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Shelding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if Aluminum foil foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.

[Page 13](#) MATERIALS TO BE AVOIDED IN MICROWAVE OVEN UTENSILS REMARKS Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with May cause arcing. Transfer food into microwave-safe dish. metal handle May cause arcing and could cause a fire in the oven. Metal twist ties May cause a fire in the oven.

[Page 14: Setting Up Your Oven](#)

SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: Glass Tray Turntable ring Instruction Manual Control panel Turntable shaft Turntable ring Glass

tray Observation window Oven Door...

[Page 15](#) SETTING UP YOUR OVEN TURNTABLE INSTALLATION Hub (underside) Glass tray Turntable shaft Turntable ring a. Never place the glass tray upside down. The glass tray should never be restricted. b. Both glass tray and turntable ring must always be used during cooking. c.

[Page 16](#) SETTING UP YOUR OVEN COUNTERTOP INSTALLATION Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

[Page 17](#) SETTING UP YOUR OVEN INSTALLATION 2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label. WARNING Do not install oven over a range cooktop or other heat-producing appliance.

[Page 18: Operation](#)

OPERATION CONTROL PANEL AND FEATURES (14) (10) (11) (12) (13) (1) Quick Touch Presets--- Sensor Menu (Sensor Reheat, Frozen Pizza, Frozen Entree, Potato, Rice, Veggie) Auto Menu (Custom Cook, Soften/Melt), Popcorn (3) Automatically defrosts one pound items (4) Custom Defrost: Defrost time calculated by entered weight and category of item (5) Number Pads (6) Power Level...

[Page 19](#) OPERATION 1. POWER LEVELS Ten power levels are available. Prior to or during cooking, press Power Level and "PL10" will display. Then press number pads to select a different power level. Level Power 100% Display PL10 PL 9 PL 8 PL 7 PL 6 PL 5 PL 4...

[Page 20](#) OPERATION 3. KITCHEN TIMER Press Kitchen Timer once, "00:00" will appear in the display. Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds. Press to confirm setting, and the timer will start to count down. When the time amount elapses, timer indicator will disappear.

[Page 21](#) OPERATION NOTE: In the process of setting, if the pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock. 5. ONE TOUCH START Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6.

[Page 22](#) OPERATION 7.1 LB DEFROST (1) Press , "1.0", "DEF." and "Lbs" will appear in the display. 1lb Defrost . (2) Press to start defrosting, "Lbs" will disappear. "DEF." will flash, and the remaining defrost time will display. 8. SENSOR MENU (Sensor Reheat, Frozen Pizza, Frozen Entree, Potato, Rice, Veggie) é...

[Page 23](#) OPERATION Example: Sensor Reheat Pad 1) After placing food into oven, press Sensor Reheat pad and "SC-1" will display. 2) Press to cook. Oven beeps 5 times when cooking is finished. Note: 1) Food to be avoided in sensor reheating. a.

[Page 24](#) OPERATION 9. POPCORN repeatedly until the number you wish appears in the display, a) Press Popcorn "1.75", "3.0", "3.5" oz will display in order. And "Auto" and "Oz" will appear in the display. b) Press to cook. "Oz" disappears. "Auto" flashes. Oven beeps 5 times when cooking is finished.

[Page 25](#) OPERATION Note: The procedure will remain programmed until the oven is unplugged or there is a power failure. If either occurs, the procedure will have to be reprogrammed into the oven. Auto Menu Chart: Display Weight/portion Menu Button Food Custom Cook-Bacon CC-1 2-6 SLICES CC-2...

[Page 26](#) OPERATION 13. MULTI-STAGE COOKING At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage. Note : Quick Touch Presets cannot be used in multi-stage cooking. Example: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes;...

[Page 27](#) OPERATION 16. COOKING END REMINDER FUNCTION The oven will beep five times to alert the user that cooking time has ended. "End" will display. The time of day will display by

opening the door or pressing pad. 17. OTHER SPECIFICATIONS (1) When setting cooking function, the function abbreviation appears in the display.

[Page 28: Maintenance](#)

MAINTENANCE TROUBLESHOOTING Check your problem by using the chart below and try the solutions for each problem. Possible Cause Possible Remedy TROUBLE Electrical cord for oven is not Plug into the outlet. plugged in. Close the door and try again. Oven will not start Door is open.

[Page 29](#) ONE YEAR LIMITED WARRANTY This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable.

[Page 32](#) Customer Assistance: 800-842-1289 Midea America Corp 5 Sylvan Way, Parsippany, NJ 07054 PN.:16170000A58899...

This manual is also suitable for:

[Em925a5a-bs](#)

[Save PDF](#)