



Toshiba VK-6M32A Installation Operation & Maintenance

Vk series: hvk series. vacuum circuit breakers 5-15kv

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Table of Contents](#)

[2 Manual Operation](#)

[3 Charging](#)


[4 Closing](#)

[5 Vacuum](#)

[6 Replacement of Parts](#)

7 Control Circuit Board

[Download this manual](#)

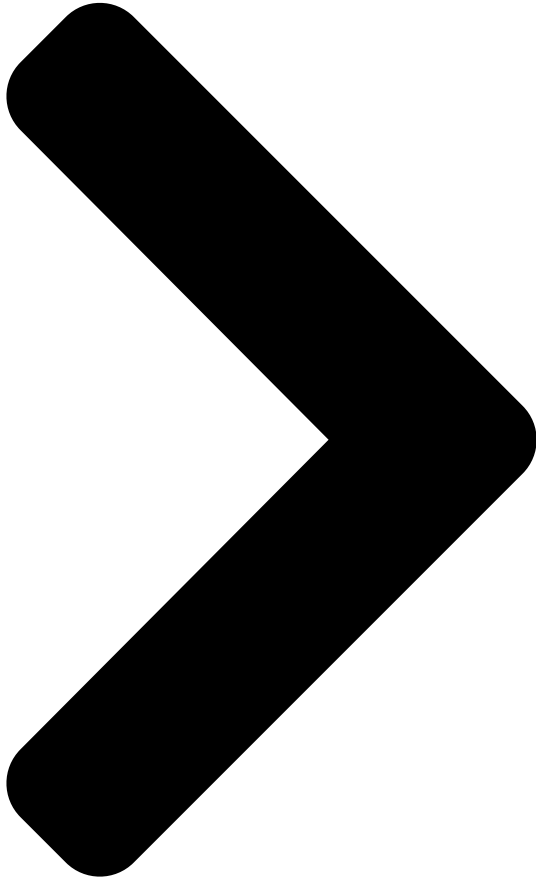

May.

31, 2012 May. 31. 2012 9:15AM

9:ISAIVI

TOSHIBA

No

1530

P,

2

TOSHIBA

Document; GF0776{I-B

INSTRUGTION\$

iiSTALLATION . OPEFATION

.

MAINTENANCE

INSTRUCTIONS

Type May. 31. 2012 9:15AM

VK & HVK Series Vacuum Circuit Breakers

5-15kV **TOSHIBA**

APPLICABLE TYPE FORMS

(1200A)

(2000A)

(3000A)

VK.6M32A

INSTRUCTIONS

VK.6P32A

I.IVK.6M32A

INSTALLATION - OPERATION - MAINTENANCE

HVK-6P32A

VK.6M40A

Type VK & HVK Series Vacuum Circuit Breaker

VK.BP40A

HVK-6M40A

HVK'6P40A

VK"8M40A VK-8P40A

APPLICABLE TYPE FORMS

VK-8040

HVK-8M40A

(1200A)

(2000A)

(3000A)

HVK-8P40A

VK-6M32A

VK-6P32A

,VK.10M25A2

HVK-6M32A

HVK-6P32A

VK-10P25A2

VK-6M40A

VK-6P40A

HVK-10M25A2

HVK-6M40A

HVK-6P40A

HVK-10P26A2

VK-8M40A

VK-8P40A

VK-8Q40

VK-10M40A VK-10P40A

HVK-8M40A

HVK-8P40A

VK-10040

VK-10M25A2

VK-10P25A2

HVK-10M40A

HVK-10M25A2

HVK-10P25A2

VK-10Q40

HVK-10P40A

VK-10M40A

VK-10P40A

vK-6M50

HVK-10M40A

HVK-10P40A

VK-6Q50

vK-6P50

VK-6M50

VK-6P50

VK-6Q50

VK-6050

VK-10M50

VK-10P50

VK-10Q50

vK-10M50

NOTES:

1)

The designation of H before VK (ie. HVK) denotes that it was assembled in the USA using domestic and foreign references to model numbers in this manual will be by the VK- and HVK-.

VK-10P50

May 31, 2012 9:15AM

VK-10()50

NOTES: t)

The designation

of

H before

VK

TOSHIBA

(i.e. HVK) denotes that the circuit breaker unit

was

assembled

in

the

USA using domestic and foreign components.

All

!

references

to

model numbers in this manual

will

be by the numbers following

the VK- and

HVK-.

21

This

manual was

written for the

Toshiba type form

circuit

breakers listed on

this page used in conjunction with Toshiba cells.

For

circuit

breakers utilized

in

the conversion of other equipment,

a supplemental

!

instruction manual

Should

be

obtained

from the conversion manufacturer.

Issued

INSTRUCTIONS

INSTALLATION - OPERATION - MAINTENANCE

Type VK & HVK Series Vacuum Circuit Breaker

APPLICABLE TYPE FORMS

	(1200A)	(2000A)	(3000A)
	VK-6M32A	VK-6P32A	
	HVK-6M32A	HVK-6P32A	
	VK-6M40A	VK-6P40A	
	HVK-6M40A	HVK-6P40A	
	VK-8M40A	VK-8P40A	VK-8Q40
	HVK-8M40A	HVK-8P40A	
	VK-10M25A2	VK-10P25A2	
	HVK-10M25A2	HVK-10P25A2	
	VK-10M40A	VK-10P40A	VK-10Q40
	HVK-10M40A	HVK-10P40A	
	VK-6M50	VK-6P50	VK-6Q50
	VK-10M50	VK-10P50	VK-10Q50

NOTES: 1)

The designation of H before VK (i.e. HVK) denotes that it was assembled in the USA using domestic and foreign components. All references to model numbers in this manual will be by the VK- and HVK-.

2/95.

Supemedee

May. 31. 2012 9:15AM

GF077401-A Deted

12194.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba VK-6M32A

[Circuit breakers Toshiba VK Series Instructions Manual](#)

Vacuum circuit breakers 5-15kv (63 pages)

[Toshiba VTD21FQR Service Manual](#)

Combination 21" flat tv and dvd video player tele text (24 pages)

Related Products for Toshiba VK-6M32A

[Toshiba VTD21FQR](#)

[Toshiba VK-6M32B](#)

[Toshiba VK-6M32B1](#)

[Toshiba VK-6M32B2](#)

[Toshiba VK-6M32B3](#)

[Toshiba VK-6P32B1](#)

[Toshiba VK Series](#)

[Toshiba VK-10P25A2](#)

[Toshiba VT130G1](#)

[Toshiba VN-350SE](#)

[Toshiba VFP7-4160KP](#)

[Toshiba TOSVERT VF-AS3](#)

[Toshiba VTD1431](#)

[Toshiba VTW2187](#)

[Toshiba TOSVERT VFAS1-2075PL](#)

[Toshiba TOSVERT VFAS1-4450PL](#)

This manual is also suitable for:

[Vk-6p32aHvk-6m32aVk-6p40aHvk-6m40aHvk-6p40aVk-8m40a](#) ... [Show all](#)