



Toshiba RS4002Z-0 Instruction Manual

Rs485 converter unit

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



TOSHIBA RS485 Converter Unit Instruction Manual

1. Make sure that this instruction manual is delivered to the end user of the RS485 converter unit.
 2. Read this manual before installing or operating the RS485 Converter unit.
- And keep it in a safe place for reference.

© TOSHIBA SCHNEIDER INVERTER CORPORATION 2001

RS4002Z-0

NOTE

All Rights Reserved.

E6580938

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RS4002Z-0

[Media Converter Toshiba RS-485 Installation Manual](#)

Usb to rs-485 converter port verification (8 pages)

[Media Converter Toshiba RS4001Z-0 Instruction Manual](#)

Rs485 converter unit (10 pages)

[Media Converter Toshiba TOSVERT VF-nC3 Instruction Manual](#)

(66 pages)

[Media Converter Toshiba TOSVERT VF-AS3 Instruction Manual](#)

(32 pages)

[Media Converter Toshiba LF620 Instruction Manual](#)

Electromagnetic flowmeter converter (160 pages)

[Toshiba VEC008Z - Digital Encoder Manual](#)

(article)

[Media Converter Toshiba TOSVERT VF-S15 Series Manual](#)

(51 pages)

[Media Converter Toshiba VEC008Z Installation Manual](#)

Digital encoder (2 pages)

[Media Converter Toshiba LF620 Manual](#)

Electromagnetic flowmeter converter (8 pages)

[Media Converter Toshiba TOSVERT VF-AS1 Instruction Manual](#)

Expansion io card option 2 (19 pages)

[Media Converter Toshiba TOSVERT VF-AS3 Instruction Manual](#)

Rs485 communication function (20 pages)

[Media Converter Toshiba USB001Z Instruction Manual](#)

Usb-to-serial conversion unit (8 pages)

[Media Converter Toshiba USB001Z Instruction Manual](#)

Toshiba usb-to-serial conversion unit instruction manual (17 pages)

[Media Converter Toshiba L5232 Instruction Manual](#)

Electromagnetic flowmeter converter (174 pages)

Summary of Contents for Toshiba RS4002Z-0

Page 1 1. Make sure that this instruction manual is delivered to the end user of the RS485 converter unit. 2. Read this manual before installing or operating the RS485 Converter unit. And keep it in a safe place for reference. © TOSHIBA SCHNEIDER INVERTER CORPORATION 2001 All Rights Reserved.

Page 2 E6580938 Safety precautions On the inverter and in its instruction manual, important information is contained for preventing injuries to users and damages to assets and for proper use of the device. Read the instruction manual attached to the inverter along with this instruction manual for completely understanding the safety precautions and adhere to the contents of these manuals.

Page 3 E6580938 ■Wiring Danger ▼ Turn off input power before wiring. Wait at least ten minutes and check to make sure that the charge lamp (on the inverter main unit) is no longer lit. Mandatory ▼ Tighten the screws on the terminal board to specified torque. If the screws are not tightened to the specified torque, it could lead to fire.

dust, chips, cutting oil, grinding agent, etc.