

Room Temperature Sensor Setting; Address Switches; Setting The Model Code - Sanyo C4272R S/C Installation Instructions Manual

Sanyo split system heat pump air conditioner installation instructions

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

•

Bookmarks




07-115 SSHP_II
5/7/07
4:00 PM

7-2. Room Temperature Sensor Setting

The room temperature sensors are built into the indoor unit and the wireless remote controller. Either of these room temperature sensors can operate.

The system is shipped from the factory set to the indoor unit sensor. To switch to the remote controller sensor, press the sensor switching button located inside the remote controller cover and check that A/C SENSOR on the LCD display panel goes out.

If the sensor switch is set to the remote controller side, but no room temperature data is sent to the main unit for 10 minutes, the sensor is automatically switched to the indoor unit side. As much as possible, install the remote controller facing the unit.

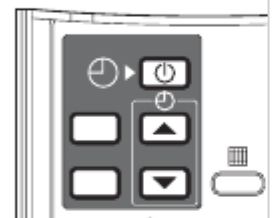


7-3. Address Switches

If you are installing more than 1 indoor unit (up to 6) in the same room, it is necessary for you to assign each unit its own address so they each can be operated by their remote controller.

Up to 6 indoor units can be controlled separately through the address switches. The operating control has the reception address switch and the remote controller has the transmission address switch. This function is utilized by matching the transmission and reception address switches.

Remote controller
address display
Address switch
positions

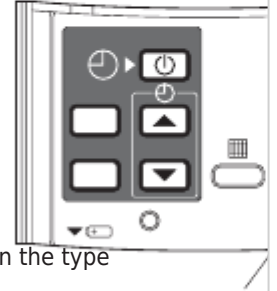

7-4. Setting the Model Code

Flap display selector switch

1
Make the slide switch settings in the battery compartment box of the remote controller depending on the type of indoor unit in which the wireless receiving unit is used.

2
Operation mode switch

In this Split System Air Conditioner set the switch to "A".
* The switch is factory set to "S" / "A".
* Always press the reset button after switching the setting.

Fig. 7-4

Page 69
ADR
ADR
* Any address
1 2 3
switch position
4 5 6
available

2
Operation
1
mode switch
1
Flap display
2
selector switch

SET
CL
ADR
1 2 3
4 5 6
S
K
N
S

X, T type
K type

A
H
C
A
Heat pump with
Heat pump without
Auto mode (CH type)
Auto mode

69
ADR
ACL
SENSOR
Sensor button

ManualsLib.com

	<input type="checkbox"/> ALL	<input type="checkbox"/> 1	<input type="checkbox"/> 2	...	<input type="checkbox"/> 8
				...	

 


Fig. 7-3

ADR
1 2 3
4 5 6
K
N
S
K
N

U type |
H C
A —
H C

Cooling only



[Table of Contents](#)

1
...
66
67
68
69
70
71
72
73

Quick Links:

[Indoor Unit](#)

[Trouble Diagnostics](#)

Related Manuals for Sanyo C4272R S/C

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo C3072R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo KH3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo CH3672R Parts List](#)

Outdoor unit (4 pages)

[Air Conditioner Sanyo THHW3672R Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Heat Pump Sanyo 26THW72R Specifications](#)

Ceiling suspended heat pump (2 pages)

[Air Conditioner Sanyo 26UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo 36KHS72R Datasheet](#)

Wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 36UW72R Specifications](#)

Concealed duct air conditioner (2 pages)

[Air Conditioner Sanyo KHS3672R Datasheet](#)

Wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo THW3672R Specifications](#)

Ceiling suspended air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 30K72R Dimensional Information](#)

Sanyo air conditioner data sheet (1 page)

Related Content for Sanyo C4272R S/C

[SAP-K71GJA-S Room Temperature Control](#)

Sanyo SAP-K71GJA-S

[SAP-K71GJHA Room Temperature Control](#)

Sanyo SAP-K71GJHA

[MINI ECO-i XHX1252 Room Temperature Control](#)

Sanyo MINI ECO-i XHX1252

[STW-2 Series Room Temperature Control](#)

Sanyo STW-2 Series

[SAP-C302AH-S Room Temperature Control](#)

Sanyo SAP-C302AH-S

[ECO-i AHX0752 Room Temperature Control](#)

Sanyo ECO-i AHX0752

[MINI ECO-i SPW-CR365GXH56B Calling The Sensor Temperature Display](#)

Sanyo MINI ECO-i SPW-CR365GXH56B

[SAP-KM97GHS5A 10-1.Room Temperature Control](#)

Sanyo SAP-KM97GHS5A

This manual is also suitable for:

[Ch4272r h/pUhw2672rUhw3672r26khs72r26ks72r26uhw72r ...](#) [Show all](#)