

Important Note When Wiring For Common Type - Sanyo ECO R410A Installation Instructions Manual

Eco-i system air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks




4-4. Important Note When Wiring for Common Type

Connect the wires referring to the diagram.

Note that the control wirings (Low voltages) shall be segregated from the power supply wires (High voltage) as follows:

1. Connect the Inter-unit control wiring to U1/U2 terminals and the remote control wire to R1/R2.(excepting K type).
2. Connect the power supply wires to "L1, L2" of the terminal block. Be sure to connect the grounding conductor of the incoming power supply to the earth (ground) screw.
3. Securely affix the power supply wires and remote

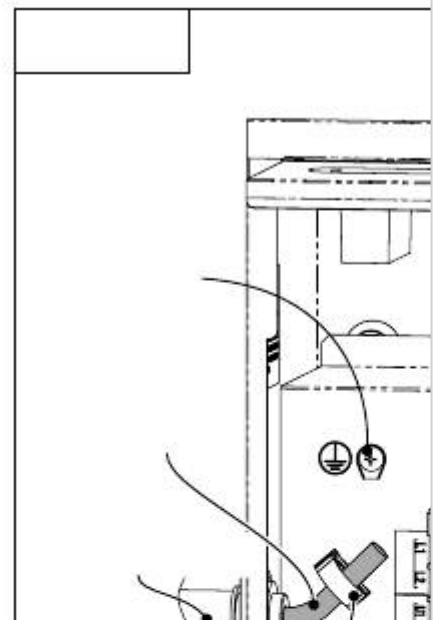

control wires by the clamping strap or clamping clip not to cross each other and not to leave the wirings loose. When loosening the clamping clip, twist the strap and it will come undone.

UM Type

Power wiring
(field supplied)

Clamping

Earth screw
clip

Clamping clip

Twist

Conduit
(field supplied)

Remote control wiring
and Inter-unit control wiring
(field supplied)

U Type

Earth screw

Power wiring
(field supplied)

Conduit
(field supplied)

Clamping
clip

Remote control wiring
and Inter-unit control wiring
(field supplied)

F, FM Type

Clamping clip

Power wiring
(field supplied)

Earth screw

Conduit



Optional remote control wire
(field supplied)

37



Connection for Solenoid
Valve Kit (for 3WAY)

Connection
for Solenoid
Valve Kit
(for 3WAY)

3-way connection wiring
with harness (supplied)

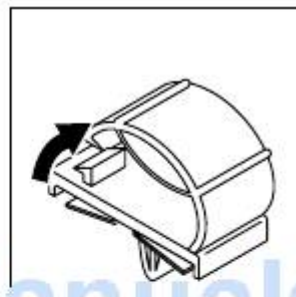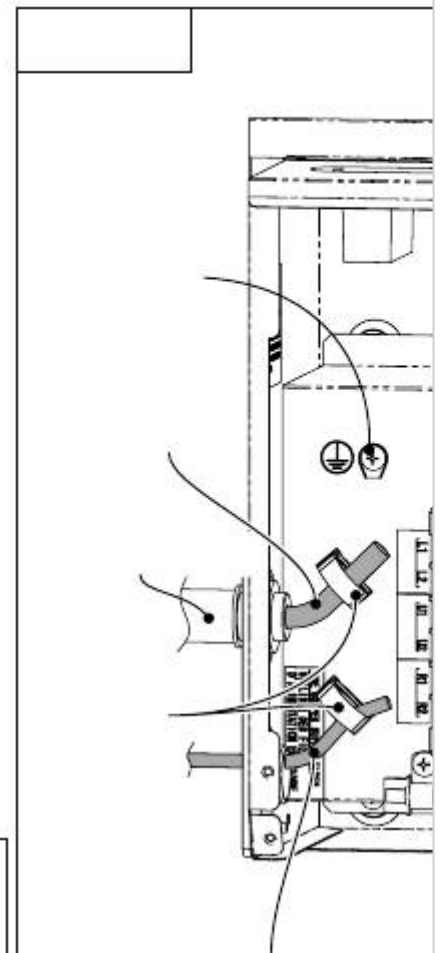

ManualsLib.com

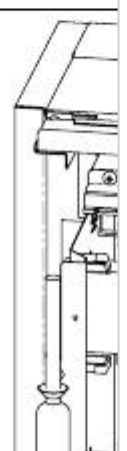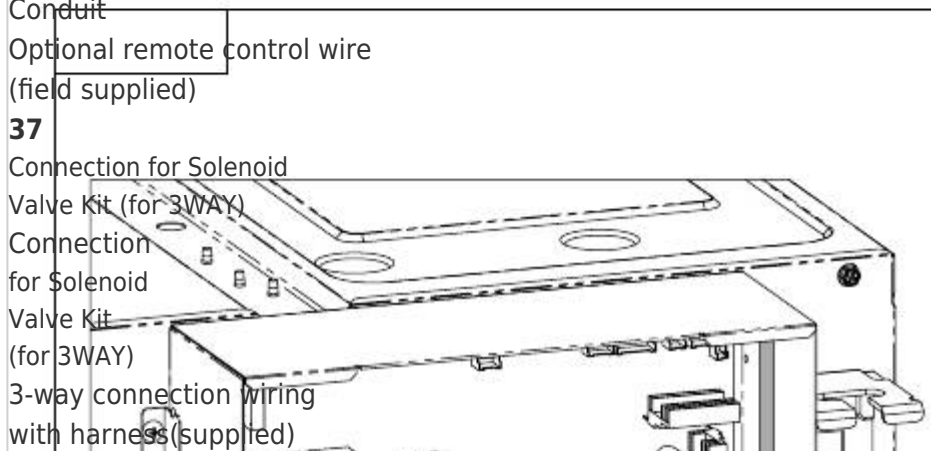

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Indoor Unit](#)

[Installing the Drain Piping](#)

[Name of Parts](#)

[Care and Cleaning](#)

[Troubleshooting](#)

Related Manuals for Sanyo ECO R410A

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo ECO R410A

[CHDZ07263 Xm Type \(For Cr-Xmhx1252, Pow-Xm075Xh\)](#)

Sanyo CHDZ07263

[SAP-K181GJH Electric Wiring Diagram](#)

Sanyo SAP-K181GJH

[SA-99G Electric Wiring Diagram](#)

Sanyo SA-99G

[XM18AAB Type Of Copper Tube And Insulation Material](#)

Sanyo XM18AAB

[SAP-K71GH Electric Wiring Diagram](#)

Sanyo SAP-K71GH

[CM2472 Refrigerant R410A: Special Precautions When Servicing Unit](#)

Sanyo CM2472

[SPW-C256VH Xm Type \(For Link Wiring\)](#)

Sanyo SPW-C256VH

[KS2432A Important Note](#)

Sanyo KS2432A

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx365Xmhx1252Xmhx1852](#) ... [Show all](#)