



# Selecting The Installation Site; Indoor Unit - Sanyo ECO R410A Installation Instructions Manual

Eco-i system air conditioner



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48

---

•

[Table of Contents](#)

- 


Troubleshooting

•

## Bookmarks





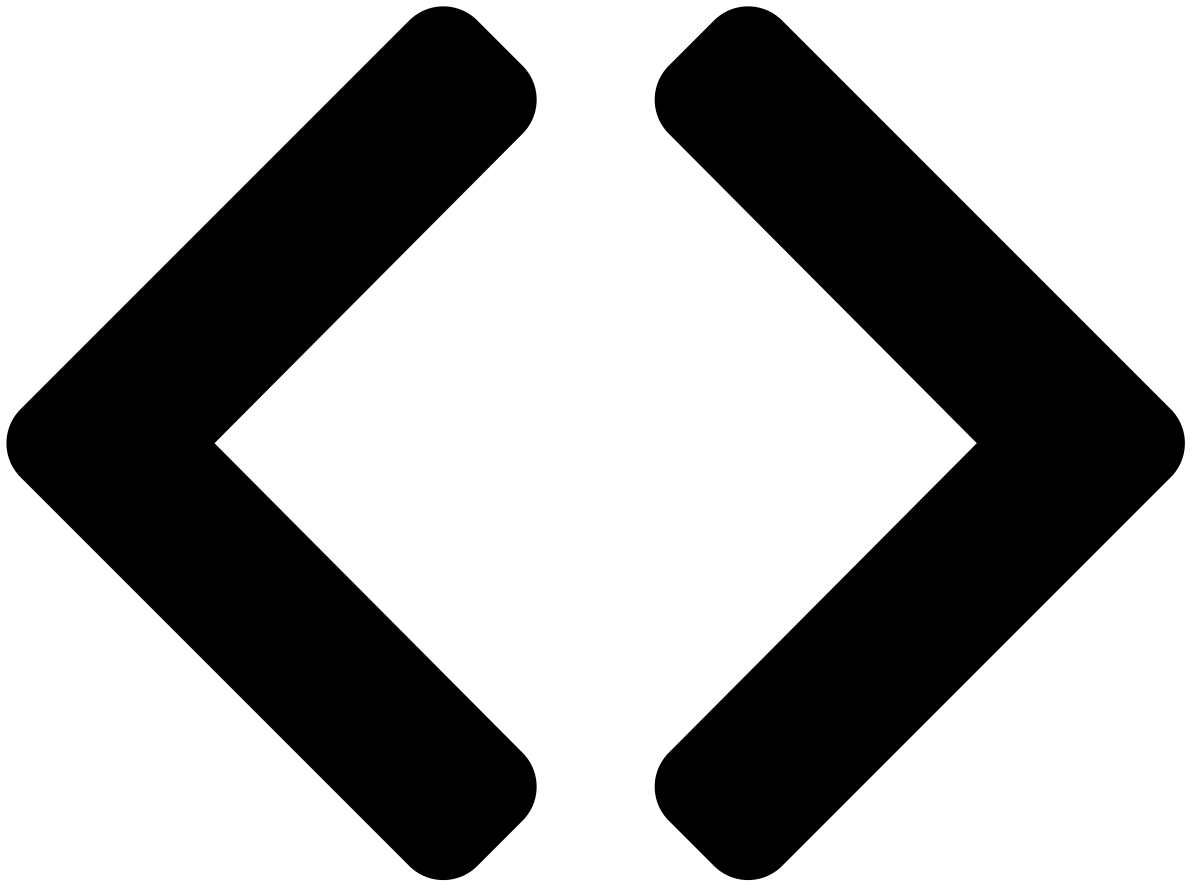


Enlarged version

## 2. SELECTING THE INSTALLATION SITE

### 2-1. Indoor Unit

#### AVOID:

- areas where leakage of flammable gas may be expected.
- places where large amounts of oil mist exist.
- direct sunlight.
- locations near heat sources which may affect the performance of the unit.
- locations where external air may enter the room directly. This may cause "sweating" on the air discharge ports, causing them to spray or drip.
- locations where the remote controller will be splashed with water or affected by dampness or humidity.

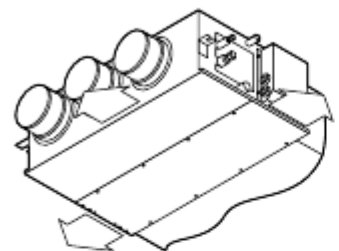

- installing the remote controller behind curtains or furniture.
- locations where high-frequency emissions are generated.

**DO:**

- select an appropriate position from which every corner of the room can be uniformly cooled.
- select a location where the ceiling is strong enough to support the weight of the unit.
- select a location where tubing and drain pipe have the shortest run to the outdoor unit.
- allow room for operation and maintenance as well as unrestricted air flow around the unit.
- install the unit within the maximum elevation difference above or below the outdoor unit and within a total tubing length (L) from the outdoor unit as detailed in the installation manual packed with the outdoor unit.
- allow room for mounting the remote controller about 3 ft. off the floor, in an area that is not in direct sunlight nor in the flow of cool air from the indoor unit.
- The elevation ((Slim) Concealed Duct) between the bottom unit and the floor surface should be at least 8 feet.
- If the elevation ((Slim) Concealed Duct) between them is less than 8 feet, install a filter (optional/field supply) or a protective device (field supply) not to touch the electrical parts or fan with hands.
- The air intake and outtake openings should be provided with the same location of a room.

Air delivery will be degraded if the distance from the floor to the ceiling is greater than 10 ft.

**(Slim) Concealed Duct Type**

10 in.  
10 in.  
10 in.

**Wall-Mounted T type**

Min.  
6 in.

**Floor-Standing, Concealed Floor-Standing Type**

min.  
3-15/16"  
min. 3.3 ft.

**Horizontal view**

**8**

3 ft.  
3 ft.  
3 ft.

**Fig. 2-1**

Min.8 ft.

**Fig. 2-2**






Min.6 in.

Min.  
6 in.

**Front View**

**Fig. 2-3**

 min.  
3-15/16"

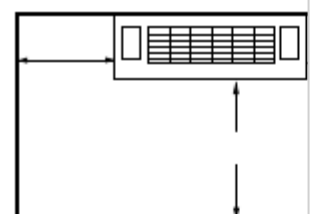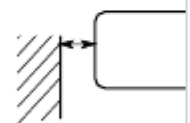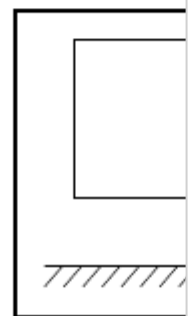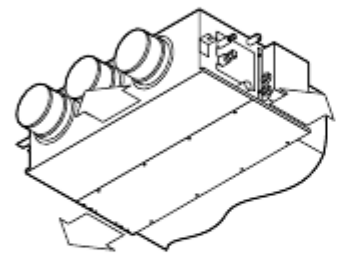

min. 3.3 ft.

**Vertical view**

**Fig. 2-4**

3 ft.

3 ft.



[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1  
...  
5  
6  
7  
8  
9  
10  
11  
12

Quick Links:

[Indoor Unit](#)

[Installing the Drain Piping](#)

[Name of Parts](#)

[Care and Cleaning](#)

[Troubleshooting](#)

## Related Manuals for Sanyo ECO R410A

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDXR09663\\* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

## Related Content for Sanyo ECO R410A

[KH2442 / CH2442 Selecting The Installation Site](#)

Sanyo KH2442 / CH2442

[CH2442 Selecting The Installation Site](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Selecting The Installation Site](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Selecting The Installation Site](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Selecting The Installation Site](#)

Sanyo PNR-XS2432

[C4272R Selecting The Installation Site](#)

Sanyo C4272R

[C4272R S/C Selecting The Installation Site](#)

Sanyo C4272R S/C



[85464359982001 Selecting The Installation Site](#)

Sanyo 85464359982001

This manual is also suitable for:

[Xhx1252Xhx1852Xhx2452Xhx365Xmhx1252Xmhx1852](#) ... [Show all](#)