

How To Install The Wired Remote Controller (Optional Part); Installation Site Selection - Sanyo CH2442 Installation Instructions Manual

Split system heat pump air conditioner

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67


68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94

•

[Table of Contents](#)

•

Bookmarks

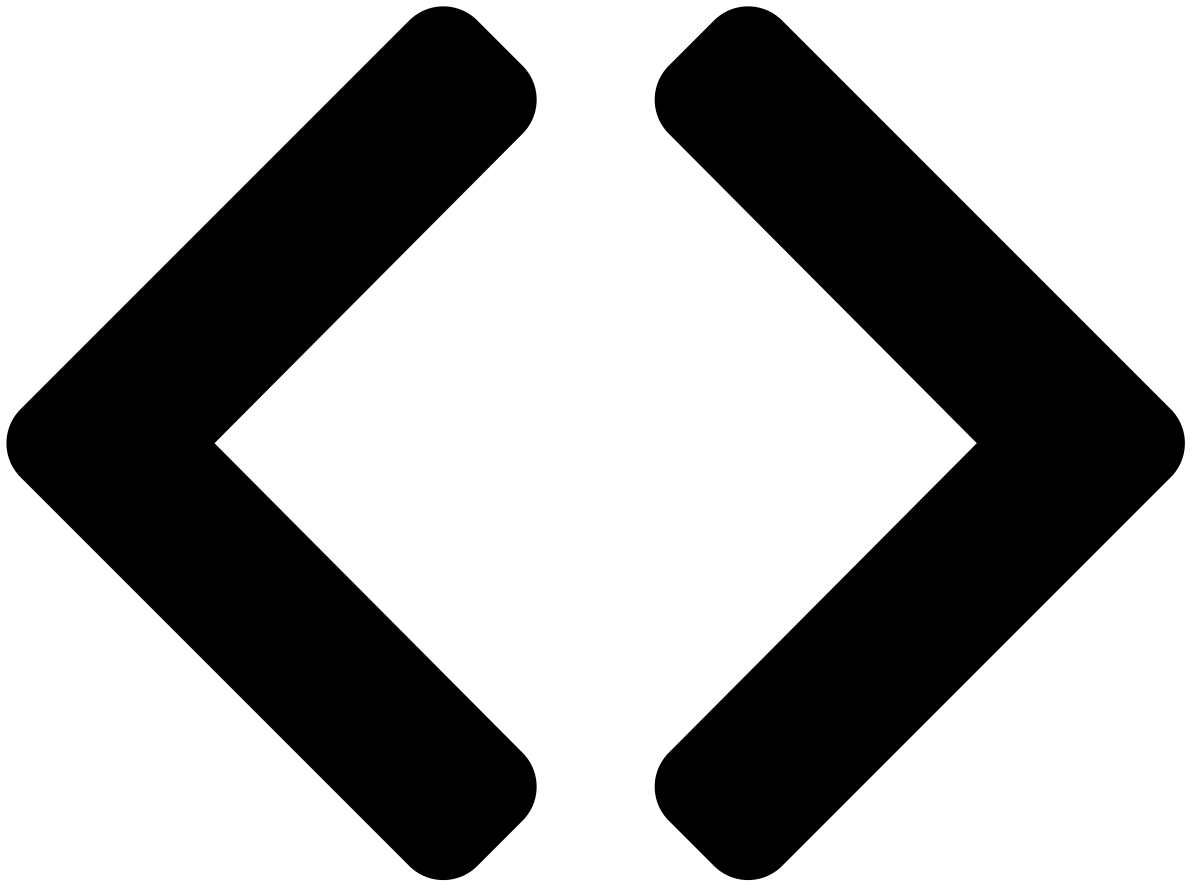

Enlarged version

6. HOW TO INSTALL THE WIRED REMOTE CONTROLLER (OPTIONAL PART)

6-1. Installation site selection


Install the remote controller at a height of between 3-5 ft. above the floor.

Do not install the remote controller in a place where it will be exposed to direct sunlight or near a window or other place where it will be exposed to the outside air.

Be sure to install the remote controller vertically, such as on a wall.

The mounting position for the remote controller should be located in an accessible place for control.

Never cover the remote controller or recess it into

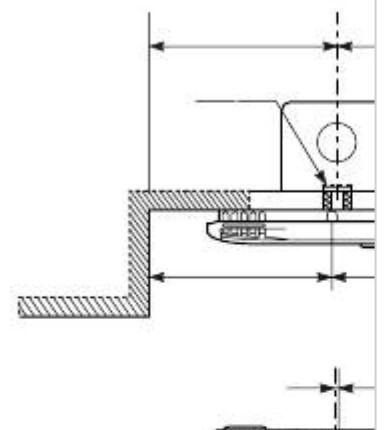

the wall.

Mounting dimensions for continuous installation

When mounting the remote controller on a wall, please see Fig. 6-1 and Fig.6-2.

3-21/32 in. or more
(from wall)

Spacer

3-17/32 in. or more

Wall

(from wall)

Hole for routing
remote control
cable ●

JIS CB8340 ●

One switchbox
(no cover)

Spacer

3-17/32 in. or more

Wall

(from wall)

Hole for routing
remote control
cable ●

JIS CB8340 ●

Two switchbox
(no cover)

45 ●

S4359146

4-29/32 in. or more
(during continuous
installation)

4-29/32 in. or more
(during continuous
installation) ●

3/32 in.




(amount offset from JIS box)
1987_C_1

Fig. 6-1

4-29/32 in. or more
(during continuous
installation)

1988_C_1

Fig. 6-2

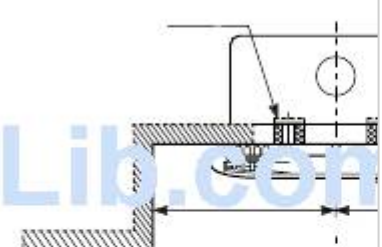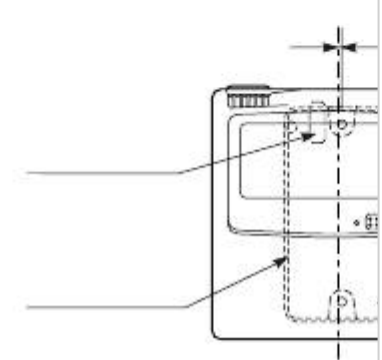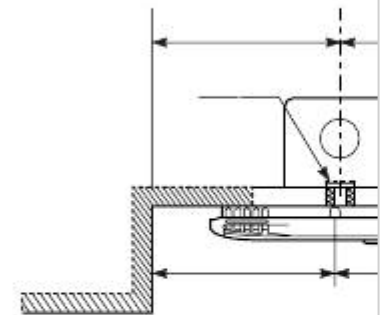

ManualsLib.com

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
43
44
45
46
47
48
49
50

Quick Links:

[Indoor Unit](#)

[How to Install the Wired Remote...](#)

Related Manuals for Sanyo CH2442

[Air Conditioner Sanyo KH2442 / CH2442 Service Manual](#)

Split system air conditioner (202 pages)

[Air Conditioner Sanyo RCS-SH80UA Instruction Manual](#)

Split system air conditioner (64 pages)

[Heat Pump Sanyo XHWX2672R Specifications](#)

Ceiling recessed heat pump (2 pages)

[Air Conditioner Sanyo 42XW72R Submittal Data](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 26XW72R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Heat Pump Sanyo 42XHW72R Specifications](#)

Ceiling recessed heat pump (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW3672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW4272R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHS3632 Service Manual](#)

Split system air conditioner (106 pages)

[Air Conditioner Sanyo 24KHS72 Submittal Data](#)

Split system indoor/outdoor wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 18KHS72 Specifications](#)

Wall mounted air conditioners & heat pumps 9,000-24,000 btu/h 16-20 seer (2 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo KHS2422 Service Manual](#)

Split system air conditioner (44 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

Related Content for Sanyo CH2442

[Big PACi 18 Series Precautions On Simultaneous Installation Of Wired Remote Controller And Wireless Remote Controller](#)

Sanyo Big PACi 18 Series

[SPW-C1155DXHN8 Optional Controller \(Remote Controller\)](#)

Sanyo SPW-C1155DXHN8

[XS1271 Wired Remote Controller](#)

Sanyo XS1271

[COOL How To Install The Remote Controller](#)

Sanyo COOL

[SPW-FTR124EH56 I How To Install The Wireless Remote Controller Receiver Rcs-Th80Ag.wl](#)

Sanyo SPW-FTR124EH56

[SPW-C256VH How To Install The Wireless Remote Controller Receiver](#)

Sanyo SPW-C256VH

[SPW-C0705DZH8 How To Install The Wireless Remote Controller Receiver](#)

Sanyo SPW-C0705DZH8

[SPW-CR365GXH56 How To Install The Wireless Remote Controller Receiver](#)

Sanyo SPW-CR365GXH56

This manual is also suitable for:

Th2442Ch3642Kh2442Th3642Kh3642Th4242 ... [Show all](#)