

Basic Wiring Diagram; Wiring System Diagram For Multiple Remote; Control; How To Switch The Indoor Temperature Sensor - Sanyo CH2442 Installation Instructions Manual

Split system heat pump air conditioner

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94




•

[Table of Contents](#)

•

Bookmarks

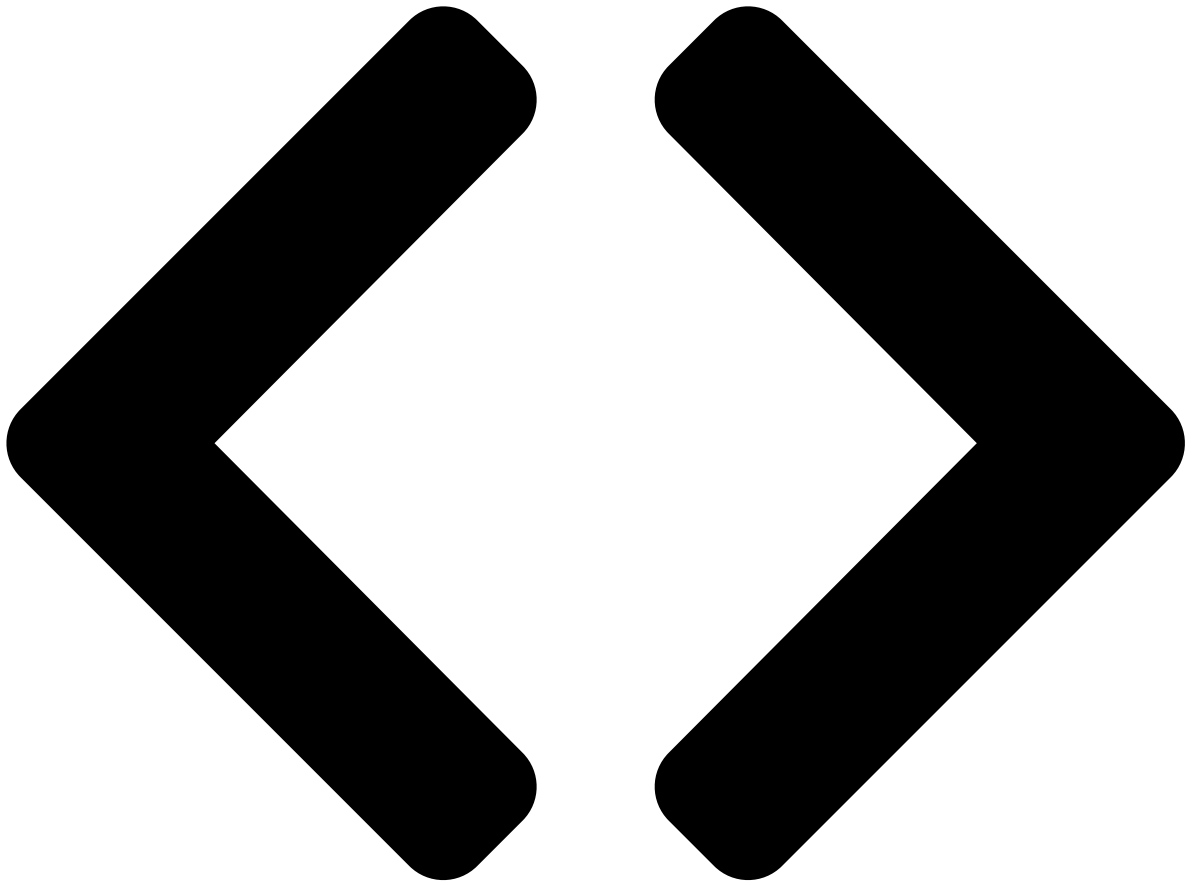

Enlarged version

6-5. Wiring System Diagram for Multiple Remote

Control

When Installing Multiple Remote Controllers


This multiple remote controller system is used for operating the unit(s) at different positions. (A maximum of 2 remote controllers can be installed.)

Setting method

To execute this control, make the setting according to the following procedure.

(1) Of the two installed remote controllers, make one the main remote controller (factory-shipped state).

(2) On the other remote controller, change the address connector on the PCB from main to sub

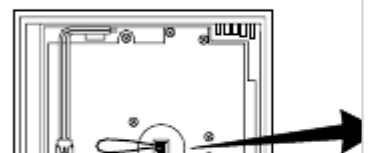

position.

In this state, it functions as a sub-remote controller.

Basic wiring diagram

Install wiring correctly

(incorrect wiring will damage

CAUTION

the equipment).

To operate 1 indoor unit with 2 remote controllers set at different places.

6-6. How to Switch the Indoor Temperature Sensor

The indoor unit and the remote controller both contain an indoor temperature sensor. The sensors on either unit can be used but normally only the sensor set on the indoor unit is used. However, use the following procedure if you must use the sensor on the remote controller.

(1) Hold down the + 4 seconds.

Note: The Unit No. first displayed is the main indoor unit address for group control.

Note: Do not press the

(2) Select CODE NO. 32 with the Temp.setting ()

/ buttons.

(3) Change the set data from 0000 to 0001 with the Timer ()

/

(4) Press the button. (Setting is OK if the blinking display changes to a lit up display.)

(5) Press the button.

This is the usual off condition. At this time, (remote controller) appears on the LCD display. CL



NOTE

1 *

If using 2 remote controllers, either one (main or sub-remote controller) can be used to make setting but only the main unit functions as the remote controller sensor. UNIT.

*

2 The remote controller sensor will not function during group control unless the group address is set in the main remote controller indoor unit.

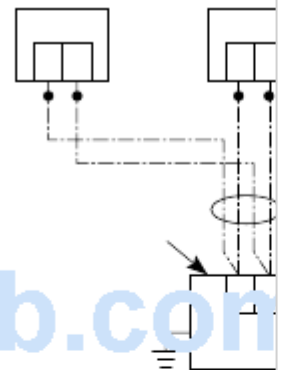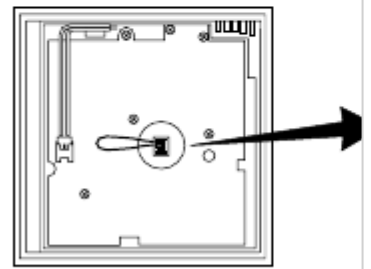

ManualsLib.com

*

3

Do not use remote controller switch for the remote control sensor if the remote sensor is being used jointly with the remote controller switch.

+

buttons for at least one button.

button.

Remote controller

(main)

(Option)

1 2

Remote control

cable terminal

board

Indoor unit

Earth

49

S4359146

Remote controller

address connector

Main

RCU check

Sub

RCU. ADR

1992_M_1

(sub)

1 2



 
Remote control cable

(wire it at local

1 2

installation site)

1993_M_1

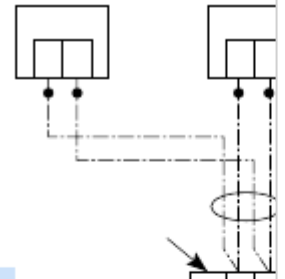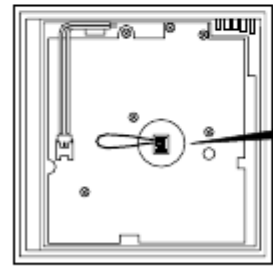

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
47
48
49
50
51
52
53
54

Quick Links:

[Indoor Unit](#)

[How to Install the Wired Remote...](#)

Related Manuals for Sanyo CH2442

[Air Conditioner Sanyo KH2442 / CH2442 Service Manual](#)

Split system air conditioner (202 pages)

[Air Conditioner Sanyo RCS-SH80UA Instruction Manual](#)

Split system air conditioner (64 pages)

[Heat Pump Sanyo XHWX2672R Specifications](#)

Ceiling recessed heat pump (2 pages)

[Air Conditioner Sanyo 42XW72R Submittal Data](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo 26XW72R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Heat Pump Sanyo 42XHW72R Specifications](#)

Ceiling recessed heat pump (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW3672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW4272R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHS3632 Service Manual](#)

Split system air conditioner (106 pages)

[Air Conditioner Sanyo 24KHS72 Submittal Data](#)

Split system indoor/outdoor wall mounted heat pump (2 pages)

[Air Conditioner Sanyo 18KHS72 Specifications](#)

Wall mounted air conditioners & heat pumps 9,000-24,000 btu/h 16-20 seer (2 pages)

[Air Conditioner Sanyo CH1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (111 pages)

[Air Conditioner Sanyo KHS2422 Service Manual](#)

Split system air conditioner (44 pages)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

Related Content for Sanyo CH2442

[XM18AAB Wiring System Diagram](#)

Sanyo XM18AAB

[SAP-K71GH Electric Wiring Diagram](#)

Sanyo SAP-K71GH

[SA-58S5 Electric Wiring Diagram](#)

Sanyo SA-58S5

[SAP-K71GJHA Electric Wiring Diagram](#)

Sanyo SAP-K71GJHA

[SAP-C302AH-S Electric Wiring Diagram](#)

Sanyo SAP-C302AH-S

[C2432A Wiring System Diagram](#)

Sanyo C2432A

[SA-79G Electric Wiring Diagram](#)

Sanyo SA-79G

[ECO-i AHX0752 Electric Wiring Diagram Chdz09053](#)

Sanyo ECO-i AHX0752

This manual is also suitable for:

Th2442Ch3642Kh2442Th3642Kh3642Th4242 ... [Show all](#)