Pump Down - Sanyo CH2442 Installation Instructions Manual

Split system heat pump air conditioner


(

Table of Contents

•

Bookmarks

•

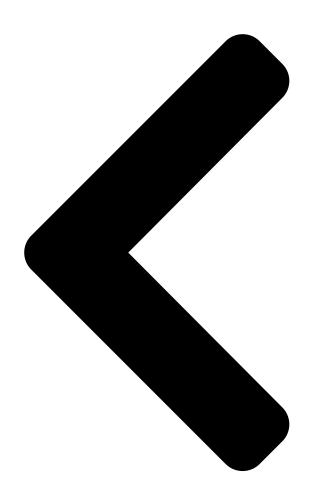

Enlarged version

13. PUMP DOWN

Pump down means collecting all refrigerant gas in the system back into the outdoor unit without losing ant of the gas. Pump down is used when the unit is to be moved or before servicing the refrigerant circuit.
Pump down procedure
Be sure to carry out pump
CAUTION
down with the unit in cooling
mode.
(1) Connect the low pressure side (wide tube valve service port) charging hose of the manifold valve to the service port (B) on the wide tube service

valve.

(2) Using a hex wrench, turn the narrow tube service valve clockwise all the way to close the service valve.

(3) Press the operation button and start cooling operation.

(4) When the low pressure gauge reading falls to 14.2 to 7.1 psi (1 to 0.5 kg/cm

wide tube valve stem with a standard screwdriver. Then quickly stop the unit.

(5) Disconnect all gauges and hoses, and replace

the bonnets and the valve caps as they were previously

(6) Purge all air remaining inside the tubing before operating the air conditioner.

), fully close the

93 54359146

Table of Contents

Previous Page

1	
91	
92	
93	
94	

Quick Links: Indoor Unit How to Install the Wired Remote...

Related Manuals for Sanyo CH2442

Air Conditioner Sanyo KH2442 / CH2442 Service Manual Split system air conditioner (202 pages) Air Conditioner Sanyo RCS-SH80UA Instruction Manual Split system air conditioner (64 pages) Heat Pump Sanyo XHWX2672R Specifications Ceiling recessed heat pump (2 pages) Air Conditioner Sanyo 42XW72R Submittal Data Ceiling recessed air conditioner (2 pages) Air Conditioner Sanyo 26XW72R Specifications Ceiling recessed air conditioner (2 pages) Heat Pump Sanyo 42XHW72R Specifications Ceiling recessed heat pump (2 pages) Air Conditioner Sanyo XHW2672R Specifications Ceiling recessed air conditioner (2 pages) Air Conditioner Sanyo XHW3672R Specifications Ceiling recessed air conditioner (2 pages) Air Conditioner Sanyo XHW4272R Specifications Ceiling recessed air conditioner (2 pages) Air Conditioner Sanyo XHS3632 Service Manual Split system air conditioner (106 pages) Air Conditioner Sanyo 24KHS72 Submittal Data Split system indoor/outdoor wall mounted heat pump (2 pages) Air Conditioner Sanyo 18KHS72 Specifications Wall mounted air conditioners & heat pumps 9,000-24,000 btu/h 16-20 seer (2 pages) Air Conditioner Sanyo CH1872 Technical & Service Manual Dc inverter split system air conditioner (111 pages) Air Conditioner Sanyo KHS2422 Service Manual Split system air conditioner (44 pages) Air Conditioner Sanyo C4272R S/C Installation Instructions Manual Sanyo split system heat pump air conditioner installation instructions (111 pages) Air Conditioner Sanyo C4272R Service Manual Sanyo split system air conditioner service manual (181 pages)

Related Content for Sanyo CH2442

SAP-KMRV74EH I Pump Down

Sanyo SAP-KMRV74EH <u>SAP-URV96EH Pump Down</u> Sanyo SAP-URV96EH <u>SAP-CMRV3656EH I Pump Down</u> Sanyo SAP-CMRV3656EH

SPW-C256VH Caution For Pump Down

Sanyo SPW-C256VH <u>KHS0951 Pump Down</u> Sanyo KHS0951 <u>Big PACi 18 Series Caution For Pump Down</u> Sanyo Big PACi 18 Series

SAP-KRV9AEH Pump Down

Sanyo SAP-KRV9AEH SAP-KRV9AEH Pump Down

Sanyo SAP-KRV9AEH

This manual is also suitable for:

Th2442Ch3642Kh2442Th3642Kh3642Th4242 ... Show all