

Air Throw Distance Chart - Sanyo KH2442 / CH2442 Service Manual

Split system air conditioner

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



1-12 Air throw distance chart

Ceiling Mounted Type

Model: 24 Type

Model: 36 Type

Model: 42 Type


FAN SPEED

ROOM AIR TEMP.

LOUVER ANGLE

HORIZONTAL DISTANCE ●

0
3
7
10
13
17
0
3

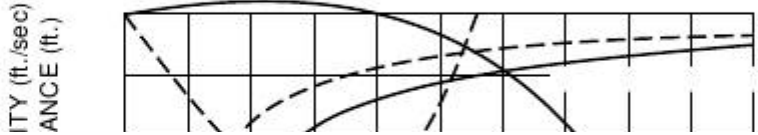

7
10
13
17
HORIZONTAL DISTANCE (ft.)

0
3
7
10
13
17
0
3
7
10
13
17

0
3
7
10
13
17
HORIZONTAL DISTANCE (ft.)

0
3
7
10
13
17
0
3
7
10
13
17

0
3
7
10
13
17
COOLING

HIGH
80° F
- 7°
20
23
26
29
33

AXIS AIR VELOCITY
2115_T_1
20
23
26
29
33

AXIS AIR VELOCITY
2116_T_1
20
23
26
29
33

AXIS AIR VELOCITY
HEATING
HIGH
68° F
54°


: COOLING
: HEATING
2117_T_1
I - 97

1. Specifications


SM830082




AXIS AIR VELOCITY (ft./sec)
VERTICAL DISTANCE (ft.)

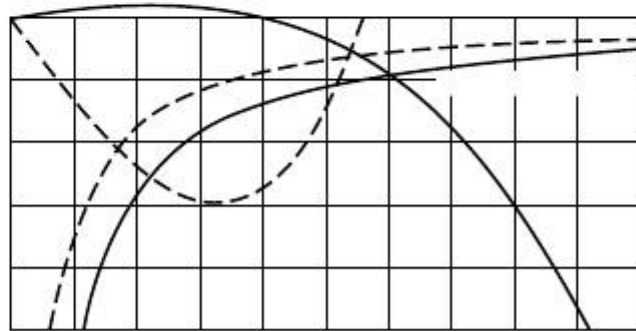

AXIS AIR VELOCITY (ft./sec)
VERTICAL DISTANCE (ft.)

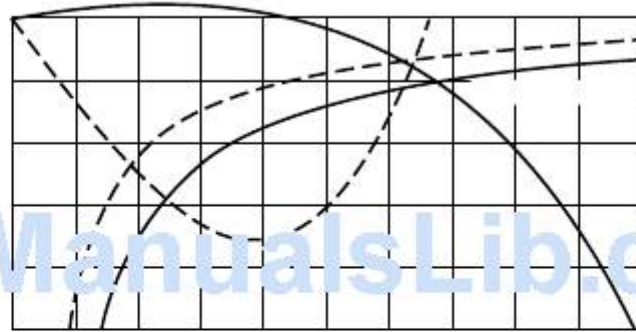

AXIS AIR VELOCITY (ft./sec)
VERTICAL DISTANCE (ft.)

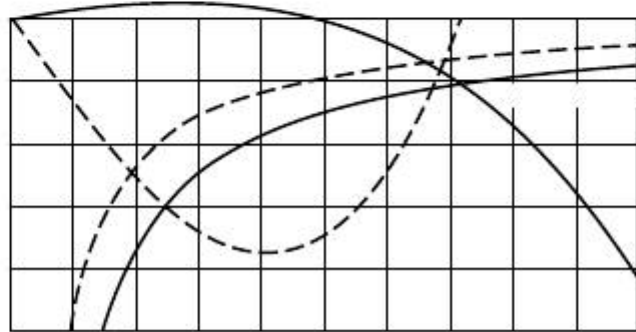

ManualsLib.com



[Table of Contents](#)

1

...

100

101

102

103

Quick Links:

[Technical Data](#)

[Service Manual](#)

[Unit Specifications](#)

[Troubleshooting](#)

Chapters

[Who Should Use This Manual](#) 3

[2. Processes and Functions](#) 121

[4. Service Procedures](#) 157

Troubleshooting

[Troubleshooting](#) 158

[Check before and after Troubleshooting](#) 159

[General Troubleshooting Flow Chart: Diagnosis and Remedy](#) 160

Related Manuals for Sanyo KH2442 / CH2442

[Air Conditioner Sanyo CH2442 Installation Instructions Manual](#)

Split system heat pump air conditioner (94 pages)

[Air Conditioner Sanyo RCS-SH80UA Instruction Manual](#)

Split system air conditioner (64 pages)

[Air Conditioner Sanyo 26K72R Dimensional Data](#)

Wall mounted type outdoor/indoor unit (1 page)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo CH0951 Technical & Service Manual](#)

Split system air conditioner (98 pages)

[Air Conditioner Sanyo KHS1822 Service Manual](#)

Split system air conditioner (38 pages)

[Air Conditioner Sanyo KHS3632 / CH3632 Service Manual](#)

Split system air conditioner (94 pages)

[Air Conditioner Sanyo 18KHS72 Installation Instructions Manual](#)

Indoor/outdoor unit inverter split system air conditioner (25 pages)

[Air Conditioner Sanyo 09KHS71 Instruction Manual](#)

Inverter-controlled split system air conditioner (50 pages)

[Air Conditioner Sanyo COOL/HEAT Installation Instructions Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo KHS1232 Technical Data Manual](#)

(24 pages)

Related Content for Sanyo KH2442 / CH2442

[SAP-KM97GHS5A Air Throw Distance Chart](#)

Sanyo SAP-KM97GHS5A

[SAP-K91AA Air Throw Distance Chart](#)

Sanyo SAP-K91AA

[SAP-K92A Air Throw Distance Chart](#)

Sanyo SAP-K92A

[SAP-K91AA-S Air Throw Distance Chart](#)

Sanyo SAP-K91AA-S

[SPW-XR253GH56 Air Throw Distance Chart](#)

Sanyo SPW-XR253GH56

[SAP-K302A Air Throw Distance Chart](#)

Sanyo SAP-K302A

[SPW-CR363GVH8 Air Throw Distance Chart](#)

Sanyo SPW-CR363GVH8

[SAP-K71GJA Air Throw Distance Chart](#)

Sanyo SAP-K71GJA

This manual is also suitable for:

[Th4242Uh2442Kh3642Uh3642Xh2442Xh3642](#) ... [Show all](#)