



# Electrical Wiring - Sanyo KH2442 / CH2442 Service Manual

Split system air conditioner



 
1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202





•

[Table of Contents](#)

•

Troubleshooting

•

## Bookmarks





## ELECTRICAL WIRING

### General Precautions on Wiring

- (1) Before wiring, confirm the rated voltage of the unit as shown on its nameplate, then carry out the wiring closely following the wiring diagram.
- (2) Provide a power outlet to be used exclusively for each unit, and a power supply disconnect and circuit breaker for overcurrent protection should be provided in the exclusive line.
- (3) To prevent possible hazards from insulation failure, the unit must be grounded.
- (4) Each wiring connection must be done in accordance with the wiring system diagram. Wrong wiring may cause the unit to misoperate or

become damaged.

(5) Do not allow wiring to touch the refrigerant tubing, compressor, or any moving parts of the fan.

(6) Unauthorized changes in the internal wiring can be very dangerous. The manufacturer will accept no responsibility for any damage or misoperation that occurs as a result of such unauthorized changes.

### Recommended Wire Length and Wire Diameter for Power Supply System

Must follow LOCAL ELECTRICAL CODES for wiring.

Outdoor Unit

(A) Power Supply

Model Name

CH2442

Max. length 69 ft.

CH3642

Max. length 69 ft.

CH4242

Max. length 67 ft.

Outdoor Unit

(A) Power Supply

4

Max. length 330 ft.

Control Wiring

(C) Inter-Unit Control Wiring

AWG #18 (0.5 mm)

Use high voltage wire (300 V)

Max. 3,300 ft.

NOTE

\*

1

With ring type wire terminal.

2

\*

Wire joint connection.

Trade size

of Conduit

AWG #12

3/4 in.






I - 104

## 1. Specifications

\* AWG = American Wire Gauge

AWG #6

AWG #6

AWG #6

AWG #10

(E) Control Wiring For Group Control

2

AWG #18\*

(0.75 mm

Max. 1,650 ft. (Total)

Trade size

of Conduit

1-1/4 in.

1-1/4 in.

1-1/4 in.

Trade size

of Conduit

3/4 in.

2

)

SM830082

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

107

108

109

110

Quick Links:

[Technical Data](#)

[Service Manual](#)

[Unit Specifications](#)

[Troubleshooting](#)

## Chapters

[Who Should Use This Manual](#) 3

[2. Processes and Functions](#) 121

[4. Service Procedures](#) 157

## Troubleshooting

[Troubleshooting](#) 158

[Check before and after Troubleshooting](#) 159

[General Troubleshooting Flow Chart: Diagnosis and Remedy](#) 160

## Related Manuals for Sanyo KH2442 / CH2442

[Air Conditioner Sanyo CH2442 Installation Instructions Manual](#)

Split system heat pump air conditioner (94 pages)

[Air Conditioner Sanyo RCS-SH80UA Instruction Manual](#)

Split system air conditioner (64 pages)

[Air Conditioner Sanyo 26K72R Dimensional Data](#)

Wall mounted type outdoor/indoor unit (1 page)

[Air Conditioner Sanyo C4272R S/C Installation Instructions Manual](#)

Sanyo split system heat pump air conditioner installation instructions (111 pages)

[Air Conditioner Sanyo C4272R Service Manual](#)

Sanyo split system air conditioner service manual (181 pages)

[Air Conditioner Sanyo RCS-BH80UA.WL Instruction Manual](#)

Split system air conditioner (48 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo CH0951 Technical & Service Manual](#)

Split system air conditioner (98 pages)

[Air Conditioner Sanyo KHS1822 Service Manual](#)

Split system air conditioner (38 pages)

[Air Conditioner Sanyo KHS3632 / CH3632 Service Manual](#)

Split system air conditioner (94 pages)

[Air Conditioner Sanyo 18KHS72 Installation Instructions Manual](#)

Indoor/outdoor unit inverter split system air conditioner (25 pages)

[Air Conditioner Sanyo 09KHS71 Instruction Manual](#)

Inverter-controlled split system air conditioner (50 pages)

[Air Conditioner Sanyo COOL/HEAT Installation Instructions Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo KHS1232 Technical Data Manual](#)

(24 pages)

## Related Content for Sanyo KH2442 / CH2442

[SA-128S5-A Electrical Wiring Diagrams](#)

Sanyo SA-128S5-A

[SPW-C256VH Electrical Wiring](#)

Sanyo SPW-C256VH

[Big PACi 18 Series Electrical Wiring](#)

Sanyo Big PACi 18 Series

[SPW-C0705DZH8 Electrical Wiring](#)

Sanyo SPW-C0705DZH8

[SGP-EW120M2G2W Electrical Wiring System Diagram](#)

Sanyo SGP-EW120M2G2W

[SPW-X483GH56 Electrical Wiring](#)

Sanyo SPW-X483GH56

[26 series Electrical Wiring](#)

Sanyo 26 series

[SPW-C1155DXHN8 Electrical Wiring](#)

Sanyo SPW-C1155DXHN8

This manual is also suitable for:

[Th4242Uh2442Kh3642Uh3642Xh2442Xh3642](#) ... [Show all](#)