



Sanyo 21VF1K Instruction Manual

Sanyo colour television instruction manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20



•

Table of Contents

•

Bookmarks


Quick Links

[1 Plug & Play](#)

[2 Connecting to a DVD Player with Av1\(DVD\) Video Component Output Terminal](#)

[3 Specifications](#)

[Download this manual](#)

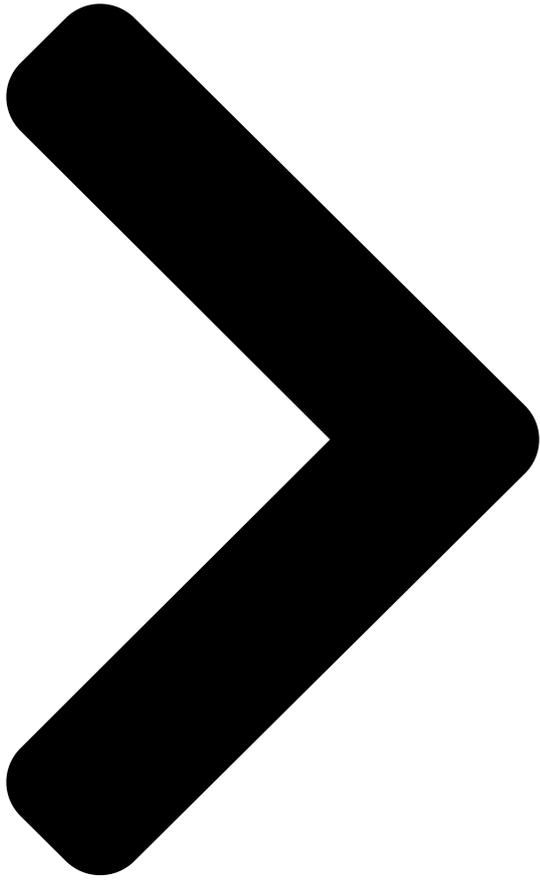

INSTRUCTION MANUAL

Colour Television

Multi System

CATV Hyper Band

256 Programmes with Automatic Tuning

CA14SE1M

CP14SE1M

CA14SE1K

S

CP14SE1K
CA14SE1(V)
CP14SE1(V)
CA21CF1(V)
CP21CF1(V)
CA21CF1M
CP21CF1M
CA21SE1M
CP21SE1M
CA21SE1K
CP21SE1K
CA21SE1(V)
CP21SE1(V)
CA21VF1
CP21VF1
CA21VF1K
CP21VF1K

ManualsLib.com

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo 21VF1K

[TV Sanyo CP14SE1 Service Manual](#)

(37 pages)

[TV Sanyo CP21SE1K Service Manual](#)

(37 pages)

[TV Sanyo CP21SE1\(V\) Service Manual](#)

(37 pages)

[TV Sanyo CP14SE1K Service Manual](#)

(37 pages)

[TV Sanyo CP21VF1 Service Manual](#)

(37 pages)

[TV Sanyo CP14SE1-00 Service Manual](#)

(33 pages)

[Colour television Sanyo CP21SE1 Service Manual](#)

(33 pages)

[TV Sanyo CP14SE1K Service Manual](#)

(33 pages)

[TV Sanyo CA14SE1\(V\) Instruction Manual](#)

Multi system catv hyper band 256 programmes with automatic tuning (20 pages)

[TV Sanyo CP14SE1 Instruction Manual](#)

(13 pages)

[TV Sanyo 29-F5BA Service Manual](#)

Colour television (27 pages)

[TV Sanyo DP26649 Service Manual](#)

Remote control digital color television (46 pages)

[TV Sanyo 14MT2 Instruction Manual](#)

(28 pages)

[TV Sanyo C21ES35 Service Manual](#)

(24 pages)

[TV Sanyo 21DN2F Service Manual](#)

(28 pages)

[TV Sanyo 28DN1 Service Manual](#)

(40 pages)

Summary of Contents for Sanyo 21VF1K

[Page 1](#) INSTRUCTION MANUAL Colour Television Multi System CATV Hyper Band 256 Programmes with Automatic Tuning CA14SE1M CP14SE1M CA14SE1K CP14SE1K CA14SE1(V) CP14SE1(V) CA21CF1(V) CP21CF1(V) CA21CF1M CP21CF1M CA21SE1M CP21SE1M CA21SE1K CP21SE1K CA21SE1(V) CP21SE1(V) CA21VF1 CP21VF1 CA21VF1K CP21VF1K...

[Page 2: Warnings And Cautions](#)

arnings and Cautions nings and Cautions Warning High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel. Do not drop or push objects into the television cabinet slots or openings.

Never spill any kind of liquid on the television receiver.

[Page 3: Table Of Contents](#)

Contents Contents Warnings and Cautions2 Contents3 Plug &...

[Page 4: Front Control](#)

ont Contr ont Contr Model CA14SE1(V), CP14SE1(V), CA21SE1(V), CP21SE1(V), CA21VF1, CP21VF1, CA21VF1K, CP21VF1K VI DE O Video Input Jack (AV2) Audio Input Jack-Left (AV2) Audio Input Jack-Right (AV2) TV/AV Selector Model CA21CF1(V), CP21CF1(V) Video Input Jack (AV2) Audio Input Jack-Left (AV2) Audio Input Jack-Right (AV2) TV/AV Selector Each button listed in this section has the same function as it's corre...

[Page 5: Front Contol](#)

ont Contr ont Contr Monaural Model Model CA14SE1M, CP14SE1M, CA14SE1K, CP14SE1K, CA21SE1M, CP21SE1M, CA21SE1K, CP21SE1K VI DE O Video Input Jack (AV2) Audio Input Jack (AV2) TV/AV Selector Model CA21CF1M, CP21CF1M Video Input Jack (AV2) Audio Input Jack (AV2) TV/AV Selector Each button listed in this section has the same function as it's corresponding button on the remote control.

[Page 6: Remote Control Transmitter](#)

Remote Contr ol T Remote Contr ol T TV / AV Selector button RECALL/COLOUR SYSTEM button Programme Selector button DIGIT button SWAP button VOLUME - button STEREO/MONO button (This button is not used) Programme DOWN button BASS EXPANDER button SOUND MODE button For monaural models this button is not used.

[Page 7: General Operation](#)

General Operation General Operation Remote Control Operation Standby/Power-on To switch the TV on and off. For shutting off a power supply completely, Press the Mains ON/OFF button on the front control of TV set. Sound mute To switch the sound from the speakers. The sound changes as follows; normal -> mute (-/- - Timer TIMER...

[Page 8: Off Timer](#)

General Operation /Colour and Sound System General Operation /Colour and Sound System OFF TIMER The OFF TIMER will switch off the TV automatical- ly after 30 minutes, 1 hour, 1 hour and 30 minutes, or 2 hours. Press the TIMER button. Press the VOLUME (+ or -) button to select the time period.

[Page 9: Picture Adjustment](#)

Colour and Sound System / Colour and Sound System / 1) Select "SIF" with the Programme UP or DOWN button in the Semi-auto or Manual Tuning mode. Then press the VOLUME (+ or -) button to select a optimum sound system. (Semi-Auto or Manual Tuning mode) MODE SEMI...

[Page 10: Audio Adjustment](#)

Pictur e Adjustment / Audio Adjustment Pictur e Adjustment / Audio Adjustment Basic Picture Adjustment Operation Press the MENU button for MAIN menu display. PICTURE AUDIO PRESET LANGUAGE SELECT ENTER EXIT When "PICTURE" is not selected, select "PICTURE" with the Programme UP or DOWN button.

[Page 11: Tuning Of The Channels](#)

uning of the Channels uning of the Channels Up to 256 broadcast stations in your reception area can be stored in the electronic memory. There are three ways of tuning as follows; 1. Automatic Tuning (the basic way): All receivable channels are automatically tuned in and memorized in consecutive programme position.

[Page 12: Channel Copy](#)

uning of the Channels uning of the Channels Channel Copy This function can be utilized after Automatic Tuning. For example, to copy a TV channel on pro- gramme position "2" onto programme position "6"; Select programme position "2" . Enter to SEMI-AUTO or MANUAL tuning mode.

[Page 13: Setting Of The Private Position](#)

uning of the Channels / Setting of the Private Position uning of the Channels / Select "SKIP" by pressing the Programme UP or DOWN button, then VOLUME + or - button to set SKIP to ON. To cancel Skip Channel function, set to OFF. MODE SEMI SEARCH...

[Page 14: Setting Of The Osd Language](#)

Setting of the OSD Language / Connecting Other Equipment Setting of the OSD Language / Connecting Other Equipment Press the MENU button for MAIN menu display. PICTURE AUDIO PRESET LANGUAGE Select "LANGUAGE " by pressing the programme UP or DOWN button. PICTURE AUDIO PRESET...

[Page 15: Selecting The Colour System In Av Mode](#)

Connecting Other Equipment Connecting Other Equipment When watching a video program input from the AV1 terminal, press the TV/AV button to select AV1. Whenever the TV/AV button is pressed, the mode will change as follows: TV mode You can select a TV programme while watching a playback from a VCR For example: To select programme position "9"...

[Page 16: Connection To The Front Av2 Input Jacks](#)

Connecting Other Equipment Connecting Other Equipment Connecting to the Front AV2 Input Jacks Note: For monaural model TV there is no L/R audio input terminals. If the video player is stereo, connect the Left (L) audio output terminal from video player to audio input terminal on the monaural TV set (more details see your video player manual book).

[Page 17: Aerial Connection](#)

Aerial Connection / Car Aerial Connection / Car Aerial Connection Aerial Connection Connecting Outdoor Aerial Connect the cable with a plug from a UHF (or VHF) aerial to the aerial socket on the cabinet back. Outdoor Aerial Aerial Socket For all aerial circuit problems please consult your local dealer. e and Cleaning e and Cleaning The surface of the cabinet can be damaged if not properly maintained.

[Page 18: Specifications](#)

Specifications Specifications Power Source AC127-240 Volts, 50/60Hz Colour System PAL/SECAM/NTSC4.43/NTSC/PAL-60Hz Sound System B/G, I, D/KK', M/M Channel Coverage VHF: E2-E12, R1-R12, K1-K9, J1-J12, A2-A13 // 0-11, 5A (AUS), 1-11 (NZ) UHF: 21-69, A14-A69, J13-J62 // 28-69 (AUS) CATV: S1-S41, X, Y, Z, Z+1, Z+2 Audio output (RMS) Model: CA14SE1(V), CP14SE1(V), CA21SE1(V), CP21SE1(V) Model: CA14SE1M, CP14SE1M, CA14SE1K, CP14SE1K, CA21SE1M,...

[Page 19: Hints-Problems/Solutions](#)

Helpful Hints - Pr Helpful Hints - Pr Before requesting service check the following chart. Problem: Check these Conditions / Try these solutions: No picture, Check if TV is plugged in. no sound Try a different channel, if OK, probably station trouble. Adjust Brightness or Contrast control.

[Page 20](#) Part No. 1AA6P1P5434-D C8WE-D (AC7-A) SANYO ELECTRIC Co., Ltd.

This manual is also suitable for:

[A21cf1mP21cf1mCa14se1mCp14se1mCa14se1kCp14se1k](#) ... [Show all](#)